



# Operating Instructions

Translation of original operating instructions

## UNIMOBIL UM Laying Dolly UM Basic Version

5274.0015  
4274.0011  
4274.0012  
4274.0014  
4274.0017



Bitte beachten Sie, dass das Produkt ohne vorliegende Betriebsanleitung in Landessprache nicht eingesetzt / in Betrieb gesetzt werden darf. Sollten Sie mit der Lieferung des Produkts keine Betriebsanleitung in Ihrer Landessprache erhalten haben, kontaktieren Sie uns bitte. In Länder der EU / EFTA senden wir Ihnen diese kostenlos nach. Für Länder außerhalb der EU / EFTA erstellen wir Ihnen gerne ein Angebot für eine Betriebsanleitung in Landessprache, falls die Übersetzung nicht durch den Händler/Importeur organisiert werden kann.

Please note that the product may not be used / put into operation without these operating instructions in the national language. If you did not receive operating instructions in your national language with the delivery of the product, please contact us. In countries of the EU / EFTA we will send them to you free of charge. For countries outside the EU / EFTA, we will be pleased to provide you with an offer for an operating manual in the national language if the translation cannot be organised by the dealer/importer.

**1 Contents**

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Contents .....</b>                                       | <b>2</b>  |
| <b>2</b> | <b>EC - Declaration of Conformity .....</b>                 | <b>3</b>  |
| <b>3</b> | <b>General.....</b>   | <b>5</b>  |
| 3.1      | Authorized use .....  | 5         |
| 3.2      | Survey and construction .....                               | 7         |
| 3.1      | Technical data and version/module description .....         | 8         |
| 3.1.1    | Basic version.....  | 8         |
| 3.1.2    | Load pick-up modules.....                                   | 9         |
| <b>4</b> | <b>Safety .....</b>   | <b>14</b> |
| 4.1      | Safety symbols .....  | 14        |
| 4.2      | Safety Marking .....  | 14        |
| 4.3      | Definition skilled worker / specialist.....                 | 15        |
| 4.4      | Personal safety requirements .....                          | 15        |
| 4.5      | Protective equipment .....                                  | 15        |
| 4.6      | Accident prevention.....                                    | 15        |
| 4.7      | Function Control.....                                       | 16        |
| 4.7.1    | General .....   | 16        |
| 4.8      | Safety procedures .....                                     | 16        |
| 4.8.1    | General .....   | 16        |
| 4.8.2    | Unauthorized transportations .....                          | 17        |
| 4.8.3    | Unauthorized alterations .....                              | 17        |
| <b>5</b> | <b>Installation and Operation .....</b>                     | <b>18</b> |
| 5.1      | Adjustments General.....                                    | 18        |
| 5.2      | Operation General.....                                      | 20        |
| 5.3      | Installation UM-VZ I.....                                   | 21        |
| 5.4      | Installation UM- VPH .....                                  | 23        |
| 5.5      | Installation UM- SM.....                                    | 27        |
| 5.6      | Installation UM- VS-SPEEDY .....                            | 32        |
| 5.6.1    | UM - VS-S (SPEEDY) with integrated Honda generator SE ..... | 37        |
| <b>6</b> | <b>Operation .....</b>                                      | <b>38</b> |
| 6.1      | Working sequence .....                                      | 38        |
| <b>7</b> | <b>Maintenance and care .....</b>                           | <b>40</b> |
| 7.1      | Maintenance.....  | 40        |
| 7.2      | Suction Plates and Sealing Lips .....                       | 41        |
| 7.3      | Repairs .....   | 41        |
| 7.4      | Safety procedures.....                                      | 41        |
| <b>8</b> | <b>Hints to the identification plate.....</b>               | <b>42</b> |
| 8.1      | Hints to the renting/leasing of PROBST devices.....         | 42        |

## 2 EC - Declaration of Conformity

**DESCRIPTION:** UNIMOBIL UM **Laying Dolly**  
UM **Basic Version**

Manufacturer: Probst GmbH  
Gottlieb-Daimler-Straße 6  
D-71729 Erdmannhausen  
[info@probst-handling.de](mailto:info@probst-handling.de) [www.probst-handling.de](http://www.probst-handling.de)

Complies with the following provisions applying to it

**EC-machinery directive 2006/42/EC**

Based on the following harmonized standards (in excerpts):

**DIN EN ISO 12100**

Safety of machinery - General principles for design - Risk assessment and risk reduction (ISO 12100:2010).

**DIN EN ISO 13857**

Safety of machinery — Safety distances to prevent hazard zones being reached by upper and lower limbs (ISO 13857:2008).

**DIN EN 349**

Minimum distance to avoid squeezing any parts of the body (ISO 13854).

**DIN 45635-13**

Measurement of airborne noise emitted by machines (displacement-, turbo- and jet-compressors).

**DIN EN 1012-1 / DIN EN 1012-2**

Compressors and vacuum pumps; Safety requirements part 1 and 2.

**DIN EN 60204-1 (IEC 60204-1)**

Safety of machinery, electrical equipment of industrial machines. Part 1: General requirements.

**2006/95/EC** (Low voltage standard)

**2004/108/EC** (Electromagnetic compatibility)

**DIN EN 55014-1 (IEC/CISPR 14-1)**

Electromagnetic compatibility – Requirements for household appliances, electric tools, and similar apparatus.  
Part 1: Emission.

**DIN EN 55014-2 (IEC/CISPR 14-2)**

Electromagnetic compatibility – Requirements for household appliances, electric tools, and similar apparatus.  
Part 2: Immunity.

**Authorized person for EC-dokumentation:**


Name: J. Holderied

Address: Probst GmbH; Gottlieb-Daimler-Str. 6; D-71729 Erdmannhausen

**Signature:**

Erdmannhausen, 20.06.2018.....

(M. Probst, Managing director)

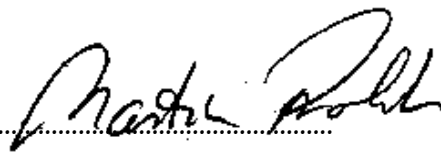A handwritten signature in black ink, appearing to read 'M. Probst', is written over a dotted line.

**EC-Declaration of Conformity / UKCA-Declaration of Conformity**

Manufacturer: Probst GmbH  
Gottlieb-Daimler-Straße 6  
71729 Erdmannhausen, Germany  
info@probst-handling.de  
www.probst-handling.com



Importer: Probst Ltd  
Unit 2 Fletcher House  
Stafford Park 17  
Telford Shropshire TF3 3DG, United Kingdom  
www.probst-handling.co.uk  
sales@probst-handling.co.uk



The machine described above complies with the relevant requirements of the following EU directives:  
The object of the declaration described above is in conformity with the relevant UK-Regulations and UK-Guidelines:

**EC-machinery directive 2006/42/EC** (Reference: OJ L 157, 09.06.2006)

UK-Regulation: Supply of Machinery (Safety) Regulations 2008 (SI 2008 No. 1597)

**2014/30/EU (Electromagnetic compatibility)** / (Reference: OJ L 96, 29.03.2014)

UK-Regulation: Electromagnetic Compatibility Regulations 2016 (SI 2016 No. 1091)

The following standards and technical specifications were used:

**DIN EN ISO 12100**

Safety of machinery - General principles for design - Risk assessment and risk reduction

UK-Regulation: BS EN ISO 12100-1:2003+A1:2009

**DIN EN ISO 13857**

Safety of machinery - safety distances to prevent hazard zones being reached by upper and lower limbs.

UK-Regulation: BS EN ISO 13857:2019

**2014/30/EU (Electromagnetic compatibility)** / (Reference: OJ L 96, 29.03.2014)

UK-Regulation: Electromagnetic Compatibility Regulations 2016 (SI 2016 No. 1091)

**DIN EN 60204-1 (IEC 60204-1)**

Safety of machinery, electrical equipment of industrial machines. Part 1: General requirements.

UK-Regulation: BS EN 60204-1:2018

**Authorized person for EC-documentation:**

Name: Jean Holderied

Address: Probst GmbH; Gottlieb-Daimler-Straße 6; 71729 Erdmannhausen, Germany

**Authorized person for UK-documentation:**

Name: Nigel Hughes

Address: Probst Ltd ; Unit 2 Fletcher House; Stafford Park 17; Telford Shropshire TF3 3DG, United Kingdom

Signature, information to the subscriber:



Erdmannhausen, 02.08.2021.....

(Eric Wilhelm, Managing director)

### 3 General

#### 3.1 Authorized use

The device " UNIMOBIL UM Laying Dolly" is a universal usable installation trolley for handling and laying concrete & natural stone products in connection with different Probst equipment like e.g. VZ I, VPH, SM, VS-S

The carrying capacity of the device „ UNIMOBIL UM Laying Dolly2 amounts maximum **150 kg** (330 lbs).

##### **The carrying capacity is reduced when:**

- suction plates with a lower carrying capacity (than 150 kg) are used.
- the Probst equipment **VZ I** (with a carrying capacity of 100 kg) is used, then is the **maximum carrying capacity** of the *UNIMOBIL UM Laying Dolly* **only 100 kg**.
- using a suction plate with a carrying capacity of **200 kg**, please note that the **maximum carrying capacity** of the *UNIMOBIL UM Laying Dolly* is **only 150 kg** (and **NOT 200 kg**).

This device is series-produced equipped with the following elements:

- Supported by steering roller with a locking brake.
- Boom and handles are telescopic to adjust well to different weights and measures of the laying goods (e.g. stone slabs).
- Gas spring with integrated brake with a control handle.



##### **UNAUTHORIZED TRANSPORTIONS:**

All **unauthorized alterations** of the device and the use of any self-made additional equipment could cause danger and are therefore **forbidden!!**

The **carrying capacity** the device is not allowed to cross over.

##### **All unauthorized transportations with the device are not allowed!**

- Transportation of people and animals.
- Transportation of other loads and material than described in this manual.
- Transportation of non rectangular goods, because they could fall down (with the VZ I).



Prior to every operation the user must ensure that:



- the equipment is suited to the intended operation, the functioning and the working condition of the equipment is examined, and the loads are suitable to be handled.

*Any doubts about instructions should be raised with the manufacturer prior to use.*



- The device is only designed for the use specified in this documentation.
- Every other use is not authorized and is forbidden!
- All relevant safety regulations, especially regulations of the declaration of conformity, and additional local health and safety regulations have to be observed.

- The load (stone slabs) which is to be sucked and transported, must have sufficient inherent stability, otherwise there is **risk of breakage** when lifting!
- Stone slabs **must not** be bend when lifting - especially take care with thin and large-sized stone slabs!
- Generally, the load (stones slab) is only to be sucked in the **middle**, otherwise the load hangs diagonally under the device and the load could break - especially when lifting large stone slabs with a small suction plate.
- Standard suction plates are not suitable for the transport of glass plates!

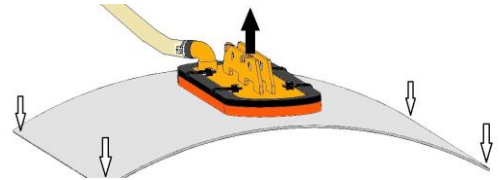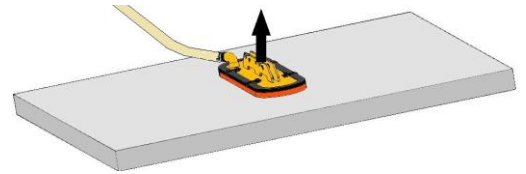

The use of this device is only permitted in proximity to the ground.  
The Load must not be lifted above 1,8 m (70,8 inch)!



Only suction plates of the manufacturer **PROBST** shall be used!!!



- Some suction plates which can be mounted to the device will reduce its carrying capacity.  
*The maximum load is indicated on each suction plate.*




- Use only suction plates which are **approved** for this device!
- **Do not exceed** the maximum carrying capacity of the suction plates!!!  
**Danger: Load (stone slabs) will fall down!**



### 3.2 Survey and construction

#### Basic version

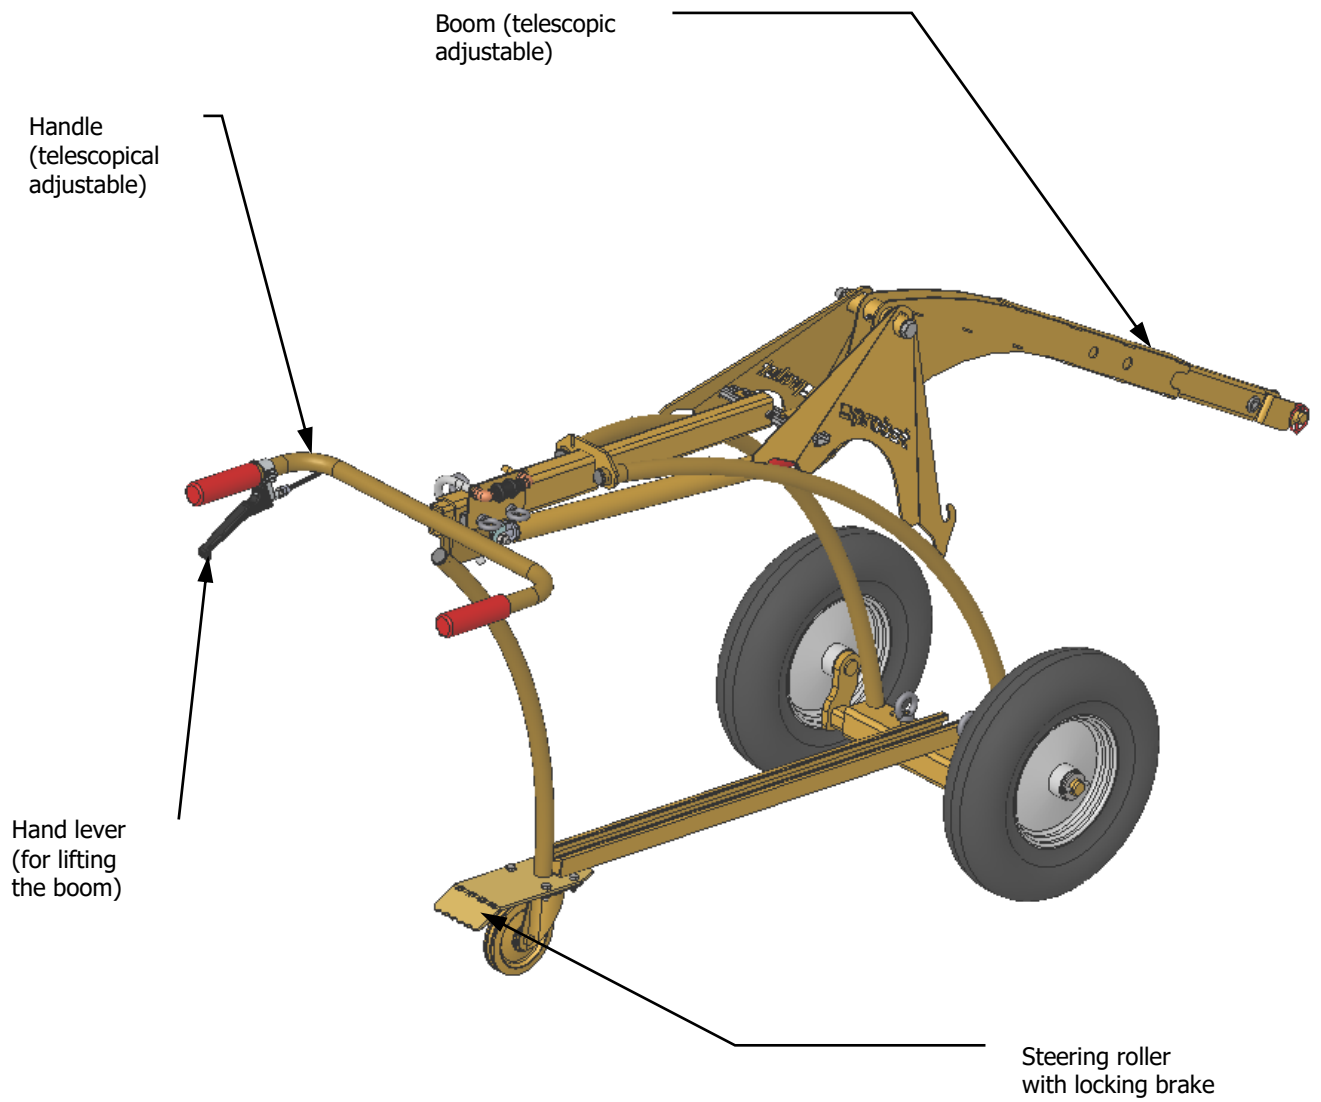


3.1 Technical data and version/module description

3.1.1 Basic version

**UNIMOBIL UM Laying Dolly - Basic Version -**

**UM - basic version -**

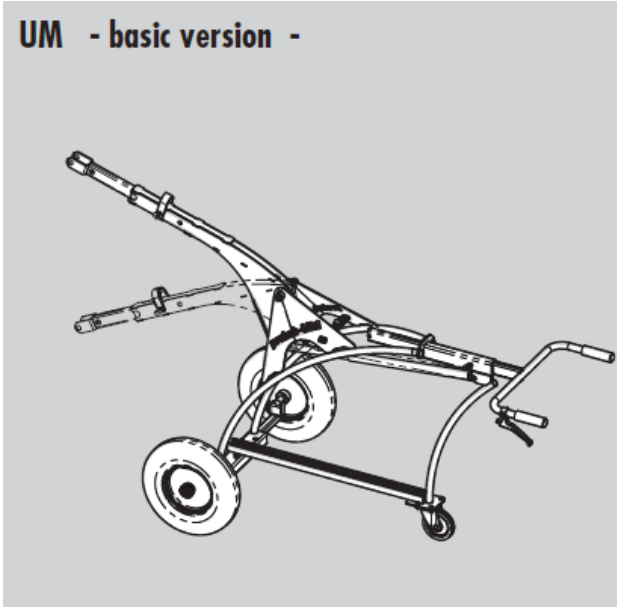

**Basic version, standard equipment:**

- ▶ Big rubber wheels with a diameter of 400 mm, makes manoeuvring the UM easy.
- ▶ Adjustable wheel distances (from 610 – 905 mm outside measurement) so that the UM can be adjusted to different slabs.
- ▶ Supported by a steering roller with a locking brake.
- ▶ Boom and handles are telescopic to adjust well to different weights and measures of the slabs.
- ▶ Gas spring with integrated brake with a control handle.


**Please note:** basic version has to be equipped with "Load Pick-up" module, in order to be used for laying slabs.

| Type                                | Carrying Capacity kg (lbs) | Dead Weight kg (lbs) | Order-Number     |
|-------------------------------------|----------------------------|----------------------|------------------|
| <b>UM basic version<sup>①</sup></b> | 150 (330)                  | 40 (90)              | <b>4272.0235</b> |

3.1.2 Load pick-up modules

**UNIMOBIL UM-VZ 1 Laying Dolly - Complete Version -**

**UM-VZ1 - complete version -**

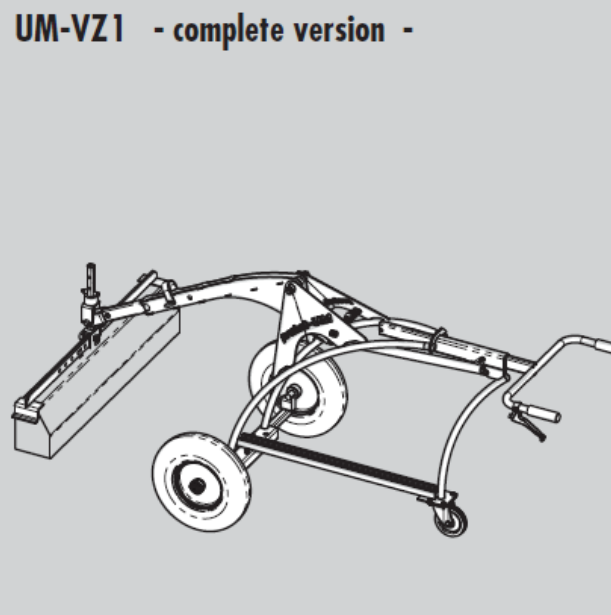

Complete version, equipped with Laying Clamp VZ1-UM.

Perfect device for laying large size slabs and precast curbs with a laying clamp (Gripping range between 500 and 1,045 mm).


**Advantage:** well-priced alternative

Please note: edges could possibly be damaged. Laying slabs closely and picking the stones up to rearrange the surface can be difficult.

| Type          | Load Pick-up    | Gripping Range mm (in)         | Carrying Capacity kg (lbs) | Dead Weight kg (lbs) | Order-Number     |
|---------------|-----------------|--------------------------------|----------------------------|----------------------|------------------|
| <b>UM-VZ1</b> | mechanical grab | 500 – 1,045<br>(19 3/4" – 41") | 100<br>(220)               | 46<br>(100)          | <b>5274.0015</b> |

**UNIMOBIL UM-VPH Laying Dolly - Basic Version -**

**UM-VPH - basic version -**

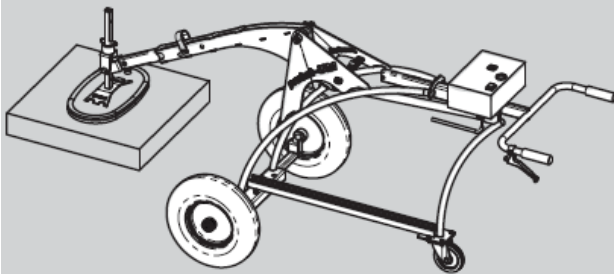

Basic version (without suction plate) equipped with battery driven VACUUM POWER HANDY VPH.

**Advantage:** Close placing of slabs without damaging the edges. Picking up stones is also possible.

- ▶ 90° turnable suspension for suction plate
- ▶ For vacuum installation of dense stones like Granite, wet cast products etc.
- ▶ Please note: Suction plate has to be ordered separately. See chart.


Please note: stones have to be dense for perfect function.

| Type                                    | Load Pick-up                              | Dimension Suction Plate oval mm (in)  | Carrying Capacity kg (lbs) | Dead Weight kg (lbs) | Order-Number          |
|---|---|---|----------------------------|----------------------|-----------------------|
| <b>UM-VPH<sup>①</sup></b>               | Vacuum                                    |   | see suction plate          | 49 (110)             | 4274.0014 + 4271.0001 |
| <b>VPH-SPS-HP-100-26/21<sup>①</sup></b> |   | 260 x 210 (10 <sup>1</sup> / <sub>4</sub> x 8 <sup>1</sup> / <sub>4</sub> ) | 100* (220*)                | 2 (4)                | <b>4270.0051</b>      |
| <b>VPH-SPS-HP-150-44/25<sup>①</sup></b> |   | 440 x 250 (17 <sup>1</sup> / <sub>4</sub> x 9 <sup>3</sup> / <sub>4</sub> ) | 150* (330*)                | 4 (9)                | <b>4270.0050</b>      |
| <b>Battery-12 V/6,5 Ah</b>              | Spare storage battery for VPH-100 and 150 |   |                            |                      | <b>2420.0007</b>      |
| <b>VPH-LG-220 V/12 V</b>                | Battery charger for VPH-100 and 150       |   |                            |                      | <b>2420.0004</b>      |
| <b>ED-SPS-HP-100</b>                    | Replacement seal for VPH-SPS-HP-100-26/21 |   |                            |                      | <b>4273.0004</b>      |
| <b>ED-SPS-HP-150</b>                    | Replacement seal for VPH-SPS-HP-150-44/25 |   |                            |                      | <b>4273.0012</b>      |

\*Value at 500 mbar low pressure

**UNIMOBIL UM-SM Laying Dolly - Basic Version -**

**UM-SM - basic version -**

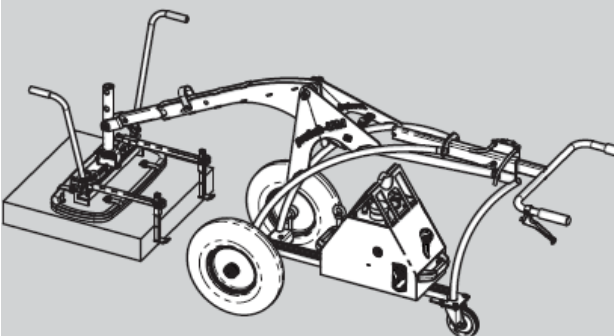

Basic version (without suction plate) equipped with battery driven STONEMAGNET SM-400 (see Chart p. 5.10).

The UNIMOBIL UM-SM is the perfect vacuum laying system for slightly porous slabs and stone.

**Advantage:** The most gentle and the closest positioning of slabs as possible. Re-pick up possible. Also suitable for slightly porous stones.

► It is equipped with handles on the suction plate and a 90° turnable suspension for the perfect positioning of the slabs.

Please note: Suction plates have to be ordered separately. See Chart.

Please note: heavily porous stones cannot be handled with this device.

| Type                                    | Load Pick-up                    | Dimension Suction Plate oval mm (in) | Carrying Capacity kg (lbs) | Dead Weight kg (lbs) | Order-Number                 |
|---|---------------------------------|--------------------------------------|----------------------------|----------------------|------------------------------|
| <b>UM-SM ①</b>                          | Vacuum                          |                                      | see suction plate          | 99 (220)             | <b>4274.0011 + 5272.0002</b> |
| <b>SM-SPS-90-30/20 ①</b>                |                                 | 300 x 200 (11¾ x 7¾")                | 90** (198)                 | 5 (10)               | <b>4272.0009</b>             |
| <b>SM-SPS-200-58/28 ①</b>               |                                 | 580 x 280 (22¾ x 11")                | <sup>2)</sup> 200** (440)  | 9 (20)               | <b>4272.0001</b>             |
| <b>Spare storage battery 26 Ah, 12V</b> |                                 |                                      |                            |                      | <b>2420.0008</b>             |
| <b>Battery charger LG-220 V/12V</b>     |                                 |                                      |                            |                      | <b>2420.0016</b>             |
| <b>ED-SPS-90</b>                        | Replacement seal for SM-SPS-90  |                                      |                            |                      | <b>4250.0023</b>             |
| <b>ED-SPS-200</b>                       | Replacement seal for SM-SPS-200 |                                      |                            |                      | <b>4272.0004</b>             |


\* Value at 200 mbar low pressure    \*\*Value at 500 mbar low pressure

<sup>2)</sup> when operated with UNIMOBIL UM-SM carrying capacity is 150 kg only

## UNIMOBIL UM-VS-140 Laying Dolly - Basic Version

## UNIMOBIL UM-VS-140/SE Laying Dolly - Complete Version

### UM-VS-S - basic version -

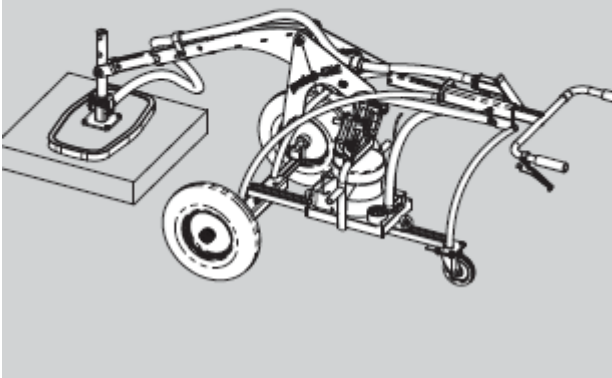

Basic version (without suction plate) equipped with SPEEDY VS-140 electrical operation 230 V or 110 V (see typelist page 5.5).

The UNIMOBIL UM-VS-140 is the perfect vacuum laying system for porous slabs and stone.

**Advantage:** Gentle and close positioning of slabs possible. Re-pick up possible. Also suitable for very porous stones.

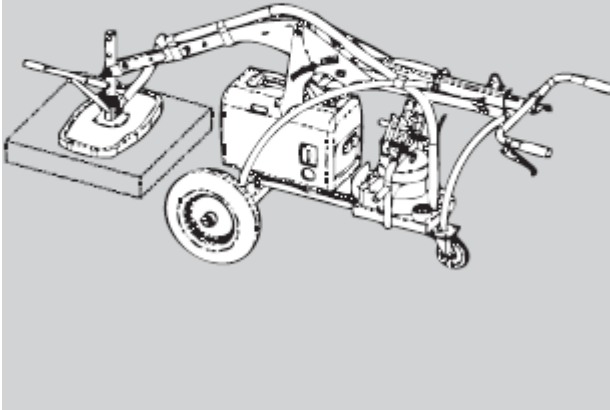
- ▶ It is equipped with a 90° turnable suspension for the perfect positioning of the slabs.
- ▶ Including additional handle on the suction

plate for better positioning of the laying material.

- ▶ Releasing of the suction force very simple by pulling a lever.
- ▶ Quick adjustment of the arm in 3 different positions.
- ▶ Please note: Laying dolly has to be connected via electrical cable with the electrical network of 230V or 110V.

### Accessories: Suction Plates (SPS)

For different applications suitable suction plates are available (see chart).

**UM-VS-140 - complete version -**


Same specifications as UM-VS-140, however with integrated generator\*\*\* totally independent from the mains.

Please note: Suction plate have to be ordered separately. See Chart.




| Type                 | Load Pick-up   | Power          | Dimension mm (in)<br>Suction plate oval                                      | Carrying Capacity kg (lbs) | Dead Weight kg (lbs) | Order-Number                                |
|----------------------|--|----------------|--|----------------------------|----------------------|---|
| UM-VS-140 (230)      | Vacuum   | 230V, 50 HZ    | see suction plate  |                            | 64 (140)             | <b>4274.0012 + 5270.0007</b>                |
| UM-VS-140 (110)      | Vacuum   | 110V, 50/60 HZ | see suction plate  |                            | 64 (140)             | <b>4274.0012 + 5270.0008</b>                |
| UM-VS-140/SE-H (230) | Vacuum   | 230V, 50 HZ    | see suction plate  |                            | 84 (185)**           | 4274.0012+5270.0007+5250.0240+4272.0238**** |
| UM-VS-140/SE-K (230) | Vacuum   | 230V, 50 HZ    | see suction plate  |                            | 82,5                 | 4274.0012+5270.0007+5250.0242+4272.0259**** |
| VS-SPS-50-30/25      |  |                | 300 x 250 (11 <sup>3</sup> / <sub>4</sub> x 9 <sup>3</sup> / <sub>4</sub> )  | 50*(110*)                  | 1,4 (3)              | <b>4271.0013</b>                            |
| VS-SPS-80-40/30      |  |                | 400 x 300 (15 <sup>1</sup> / <sub>4</sub> x 11 <sup>3</sup> / <sub>4</sub> ) | 80*(175*)                  | 2,0 (4)              | <b>4271.0008</b>                            |
| VS-SPS-100-50/30     |  |                | 500 x 300 (19 <sup>1</sup> / <sub>4</sub> x 11 <sup>3</sup> / <sub>4</sub> ) | 100*(220*)                 | 2,5 (6)              | <b>4271.0012</b>                            |
| VS-SPS-140-70/30     |  |                | 700 x 300 (27 <sup>1</sup> / <sub>2</sub> x 11 <sup>3</sup> / <sub>4</sub> ) | 140*(310*)                 | 3,0 (7)              | <b>4271.0011</b>                            |
| VS-ED-SPS-50         | <b>Replacement Seal:</b><br>Easy to attach without gluing.<br>incl. holding fixture. |                |  |                            |                      | <b>4271.0032</b>                            |
| VS-ED-SPS-80         |  |                |  |                            |                      | <b>4271.0029</b>                            |
| VS-ED-SPS-100        |  |                |  |                            |                      | <b>4271.0031</b>                            |
| VS-ED-SPS-140        |  |                |  |                            |                      | <b>4271.0030</b>                            |

\* Value at 200 mbar low pressure    \*\*Value at 500 mbar low pressure    \*\*\* Pendular suspensions for generator


 


\*\*\*\* petrol tank empty    2) when operated with UNIMOBIL UM-SM carrying capacity is 150 kg only

## 4 Safety

### 4.1 Safety symbols

|   |  |
|---|--|
| <br><b>Danger</b>      | <p><b><i>Danger to life!</i></b><br/>                 Identifies imminent hazard. If you do not avoid the hazard, death or severe injury will result.</p>                                  |
| <br><b>Attention</b>   | <p><b><i>Hazardous situation!</i></b><br/>                 Identifies a potentially hazardous situation. If you do not avoid the situation, injury or damage to property can result.</p>   |
| <br><b>Prohibition</b> | <p><b><i>Prohibition!</i></b><br/>                 Identifies imminent a prohibition. If you do not avoid the prohibition, death and severe injury, or damage to property will result.</p> |

### 4.2 Safety Marking

| WARNING SIGN  |  |                                     |                         |
|---|--|-------------------------------------|-------------------------|
| Symbol  | Meaning  | Order-No.:                          | Size:                   |
|  | It is not allowed to be under hanging loads. <b>Danger to life!</b>  | 2904.0210<br>2904.0209<br>2904.0204 | 30 mm<br>50 mm<br>80 mm |
|  | Do not lift any components off-centre (always in centre of gravity). | 2904.0383<br>2904.0594              | 102x52 mm<br>65x33 mm   |
| WARNING SIGN  |  |                                     |                         |
| Symbol  | Meaning  | Order-No.:                          | Size:                   |
|  | Danger of squeezing the hands.                                       | 2904.0221<br>2904.0220<br>2904.0107 | 30 mm<br>50 mm<br>80 mm |
| REGULATORY SIGN   |  |                                     |                         |
| Symbol  | Meaning  | Order-No.:                          | Size:                   |
|  | Read operating instructions before operating.                        | 2904.0366<br>2904.0365              | 30x57 mm<br>50x95 mm    |



### 4.3 Definition skilled worker / specialist

Only skilled workers or specialists is it allowed to carry out the installation,- maintenance, - and repair work on these device!

Skilled workers or specialists must have for the following points (if it applies for these device), the necessary professional knowledge.

- for mechanic
- for hydraulics
- for pneumatics
- for electrics

### 4.4 Personal safety requirements

- Only qualified, authorized certificated personal is allowed to operate the device and all devices which are connected (lifting equipment).



- Each operator must have read and understood the operating instructions.
- The manual guiding is only allowed for machines with handles.



### 4.5 Protective equipment

The protective equipment must consist, according to the safety regulations of the following parts:

- Protective clothing
- Safety gloves
- Safety shoes

### 4.6 Accident prevention



- The operating range have to be covered for unauthorized persons, especially children.
- The workplace have to be sufficiently illuminated.



- Take care handling wet, dirty and not solidified components.



- Take care in case of thunderstorm!



- The working with the device in case of atmospheric editions under 37,5° F is forbidden!  
Because the goods could be fall down caused by dampness or freezing.

## 4.7 Function Control

### 4.7.1 General

- Before using the device check the functions and the working condition.
- Maintenance and lubrication are only permitted when device is shut down!
- Do not use the device, until all faults which can cause safety hazards are removed.
- If there are any cracks, splits or damaged parts on any parts of the device, **immediately** stop using it.
- The operating instructions must be available at the workplace every time.
- Do not remove the data-plates of the machine.
- Unrecognisable data-plates/type plates must be replaced.

## 4.8 Safety procedures

### 4.8.1 General



- The use of the device is only permitted in proximity to the ground. Do not swing it over peoples heads.



- While using the device is the stay of persons in the working area forbidden. Except it is indispensable. Caused of the way of using the device, e.g. if the device must be leaded by hand.



- While using the device be sure that there are no persons in the working area. **Danger to Life!**
- The operator is not allowed to leave the control unit as long as the device loaded with load. The load must always be in the range of vision of the operator.
- The manual guiding of is only allowed for devices with handles.



- The device must never be subjected to a force acting in a lateral direction due to diagonal pulling.
- Do not use the device to jerk seized products.
- Do not lift any components off-centre, because that could fall down.
- The device should not be opened if the opening path of the gripping arm is blocked by a resistance (e.g. other concrete blocks or the like)!



- **The capacity and of the device is not allowed to cross over.**
- Avoid quick or jerky movements with the device. E.g. caused through driving fast over uneven grounds/site is forbidden. Because the gripping good could fall down.

#### 4.8.2 Unauthorized transportations



Prohibition

All unauthorized transportations with the device are not allowed!

- Transportation of people and animals.
- Transportation of other loads and material than described in this manual.
- Transportation of non rectangular goods, because they could fall down (with the VZ I).

#### 4.8.3 Unauthorized alterations



Prohibition

All unauthorized alterations of the device and the use of any self-made additional equipment could cause danger and are therefore forbidden!!

## 5 Installation and Operation

### 5.1 Adjustments General

The distance between the rubber tyres is adjustable. Open and remove both rings bolts (see ← ←).

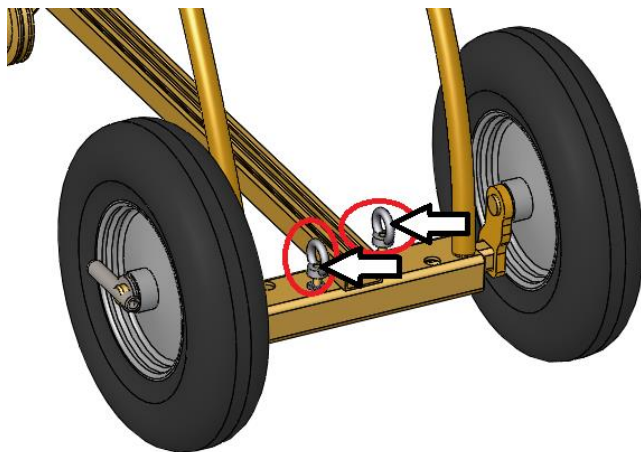


Fig. 1

Adjust the distance of the rubber tyres and retorque both ring bolts again.



Fig. 2



When working on uneven terrain, or when picking up larger loads, the overturning can be reduced as the wheel width of is increased.

The length of the handle is telescopically adjustable. Open ring screw.



Fig. 3

Adjust the length of the handle and retorque the ring screws again.



Fig. 4



By pulling out the handgrip, the backload to be applied can be reduced at higher loads.

The length of the boom is telescopically adjustable.

Pull spring bolt a little out - then turn and release it.

Adjust the length of the boom.

To lock the boom, pull the spring bolt a little out, turn and release it until it lock in position.

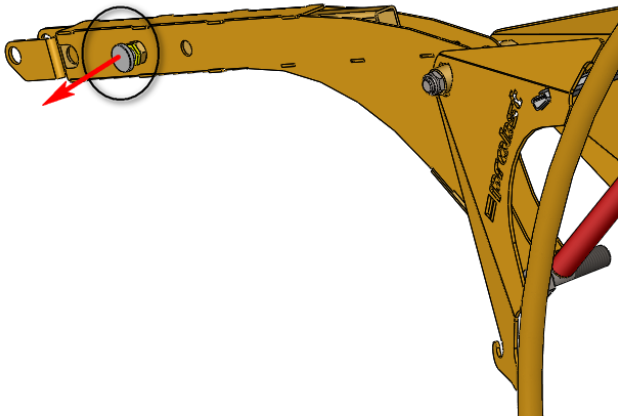


Fig. 5

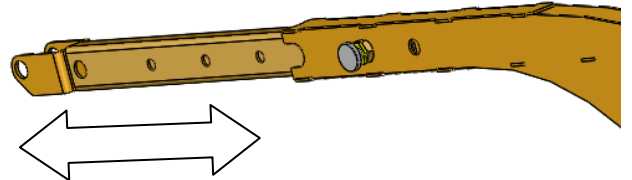


Fig. 6

## 5.2 Operation General

### WORKING PRINCIPLE:

The boom is lifted through a gas spring with integrated brake and is controlled by a lever on the operating handle. This way stone can be picked up from a pallet of approximately 900 mm height. By pressing the lever again the load is lowered gently into place. Pressing the lever once more lifts the boom up to pick up the next unit.

- The boom (1) is lifted by a lockable gas spring (in not loaded condition), when the hand lever (2) at the handle (3) is activated.
- So it is possible to lift a load (stone slab) from a pallet (up to a high of 900 mm).
- When activate the hand lever (2) again, the boom can be lowered slowly and the load can be lay down.
- When activating the hand lever (2) again, the boom is lifted automatically (without load) and is therefore ready to lift the next load (stone slab).



Fig. 1

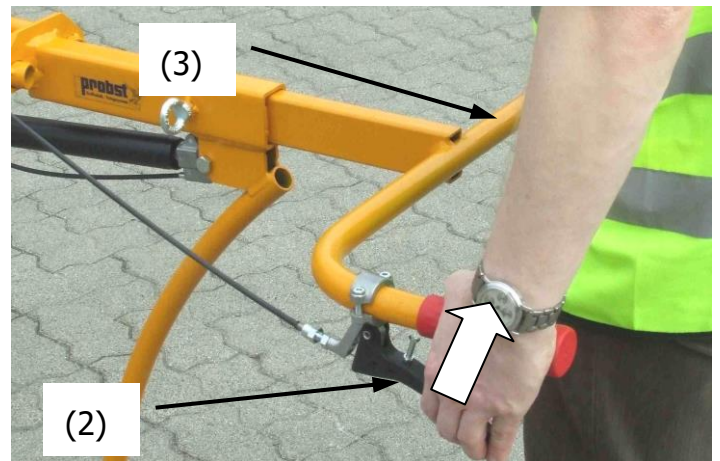


Fig. 2

### 5.3 Installation UM-VZ I



Fig. 1

Mount VZI at the “holder for VZ I/VPH”



Fig. 2

Secure the parts with half ring bolt and spring bolt (see also Fig. 4 and 5).



Fig. 3



Fig. 4



Fig. 5

(for more details see operating instruction VZ I)



## 5.4 Installation UM- VPH



Fig. 1

Mount the „holder for the VPH“ at the UM.



Fig. 2

Fasten the ring screws of the holder.



Fig. 3

Put the VPH on the holder. Therefore loosen the two butterfly nuts, remove the cover and connect the gripper clamp at the socket pipe. Afterwards mount the cover und tighten the two butterfly nuts again.

Fix the vacuum suction hose at the VPH with an gripper clamp (see Fig.5).

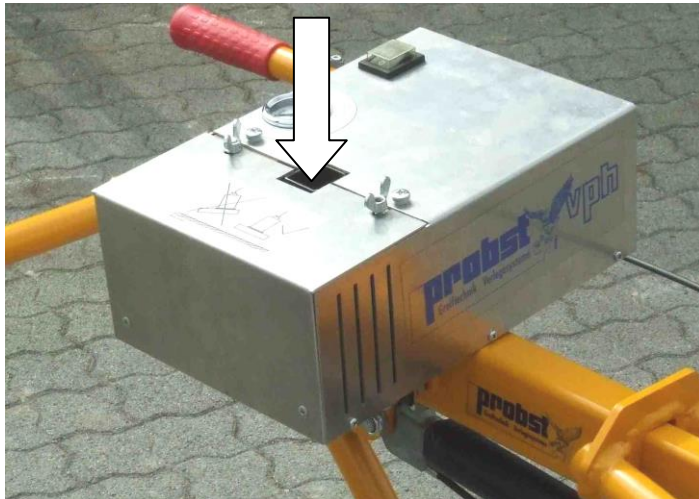


Fig. 4

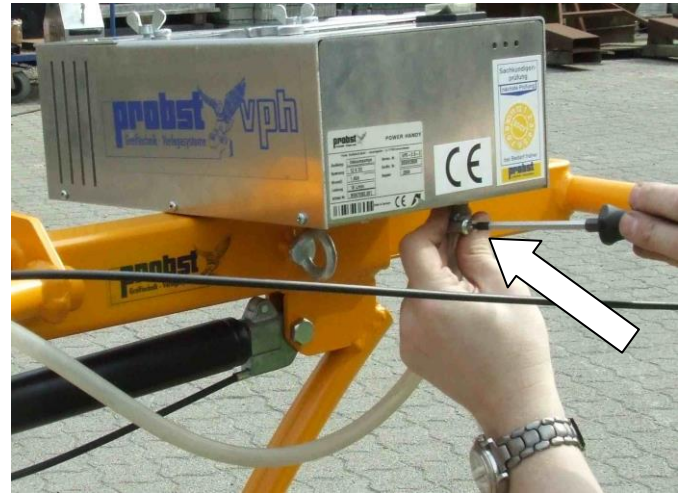


Fig. 5

Install the vacuum suction hose at the UM (see Fig. 6 - 10).



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10

Remove the VZ I from the “holder for VZI/VPH”.

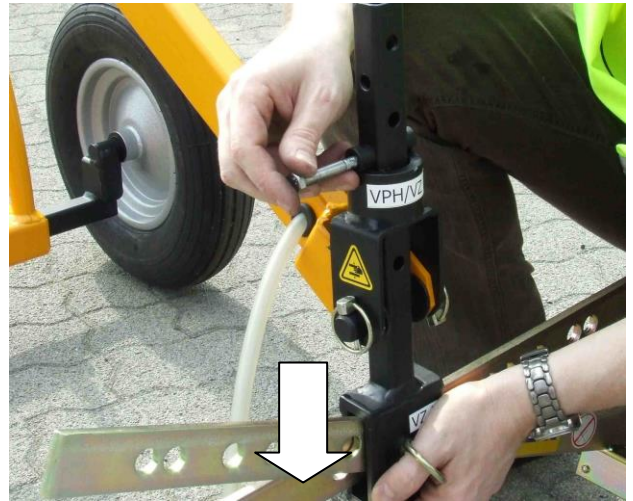


Fig. 11

Mount the allowable suction plate (see chapter “Technical Data”) for the VPH at the “holder for VZI/VPH”.

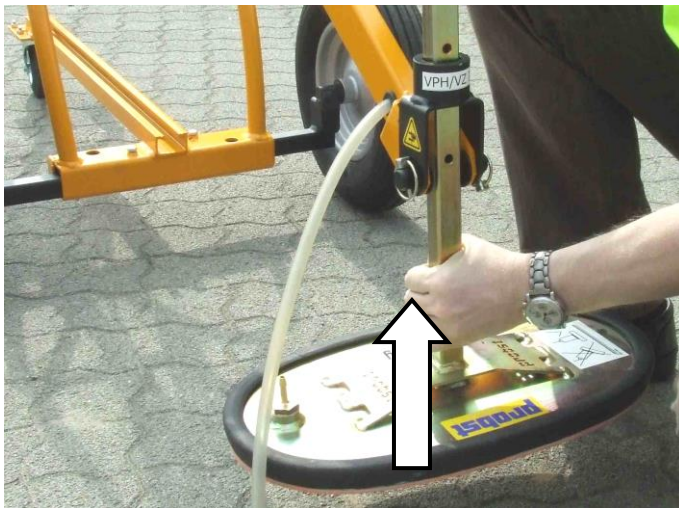


Fig. 12

Fasten the suction plate at the “holder for VZI/VPH”.



Fig. 13

Connect the vacuum suction hose with the suction plate (see Fig. 14 and 15).



Fig. 14



Fig. 15

Start the VPH (for more details see operating instruction VPH).  
**Observe the vacuum gauge during the lifting procedure!**



Fig. 16



Fig. 17

### 5.5 Installation UM- SM



Fig. 1

Mount the “hand slide valve” for the SM (with two ring screws) at the UM. (see Fig. 2 and 3)

**ATTENTION:** When connecting the suction hose, observe the direction of arrow on the hand slide valve (Fig. 2 and 3). Connect the suction hose in the direction of arrow to the suction plate.

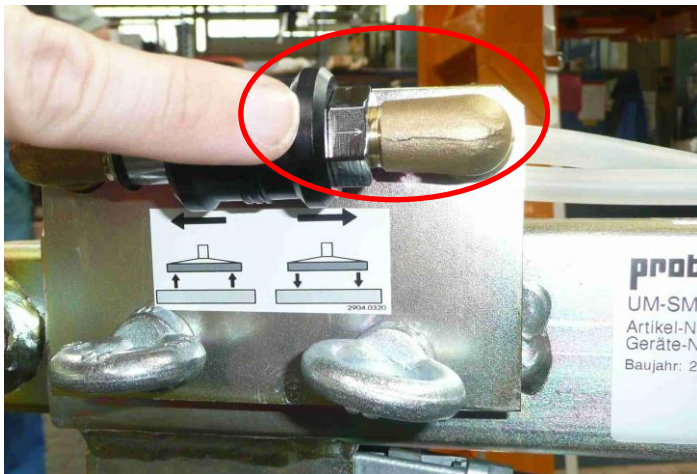


Fig. 2



Fig. 3

Install the suction hose at the SM.

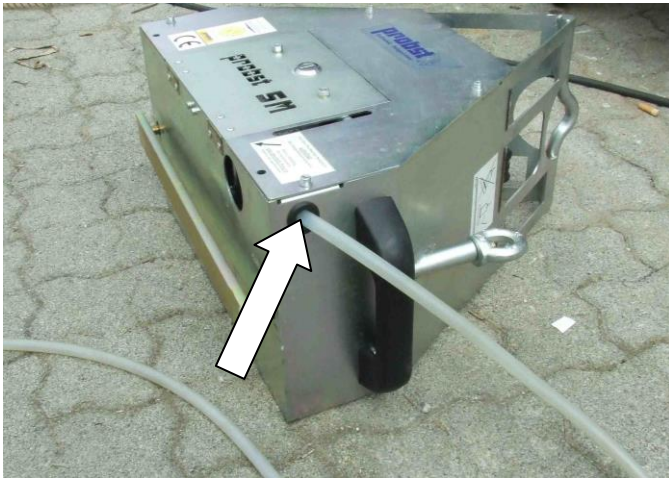


Fig. 4

Mount the SM at the UM.



Fig. 5

Position the SM in the middle of the guide bar and fasten the two ring screws at the SM.



Fig. 6

Install the vacuum suction hose at the hand slide valve.



Fig. 7

Install the vacuum suction hose at the UM

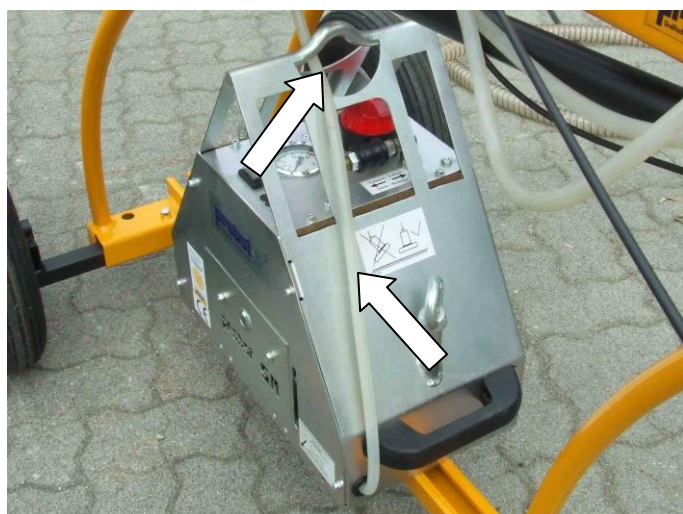


Fig. 8

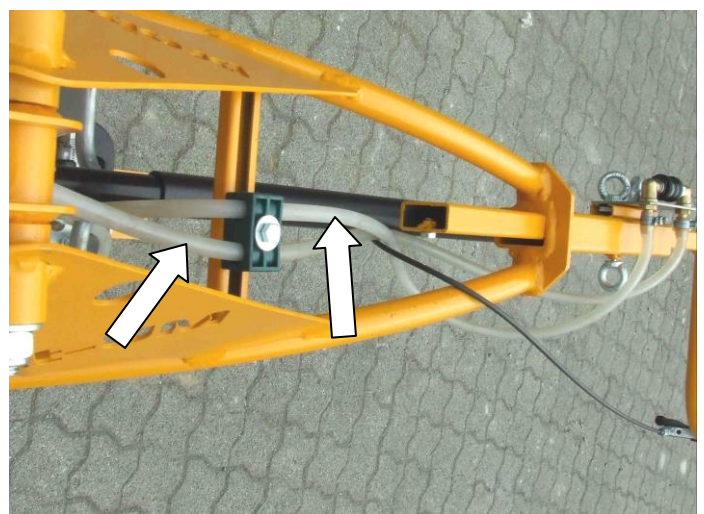


Fig. 9

Mount the "holder for SM/VS" at the boom of the UM.



Fig. 10

Mount the rack frame for the suction plate at the "holder for SM/VS". (see Fig. 11 – 13)



Fig. 11



Fig. 12



Fig. 13

Mount the allowable suction plate (see chapter “Technical Data”) for the SM at the rack frame for suction plate

Secure the suction plate with the two ring screws at the support.

**Attention:** this suction plate has 200 kg, but the real carrying capacity for UM-SM is only 150 kg!!!



Fig. 14



Fig. 15

Connect the vacuum suction hose with the suction plate (see Fig. 16)



Fig. 16



Fig. 17



Start the SM (for more details see operating instruction of the SM).



Fig. 18



Fig. 19

Move the “hand slide valve” on “SUCK”



Fig. 20

Move the “hand slide valve” on “→”



Fig. 21

Observe the vacuum gauge and the control lamps during the lifting procedure!



Fig. 22



Fig. 23

### 5.6 Installation UM- VS-SPEEDY



Fig. 1

Mount the allowable suction plate (see chapter “Technical Data”) for the UM-VS-S at the “holder for SM/VS”

Insert the “rail for VS-S”.



Fig. 2

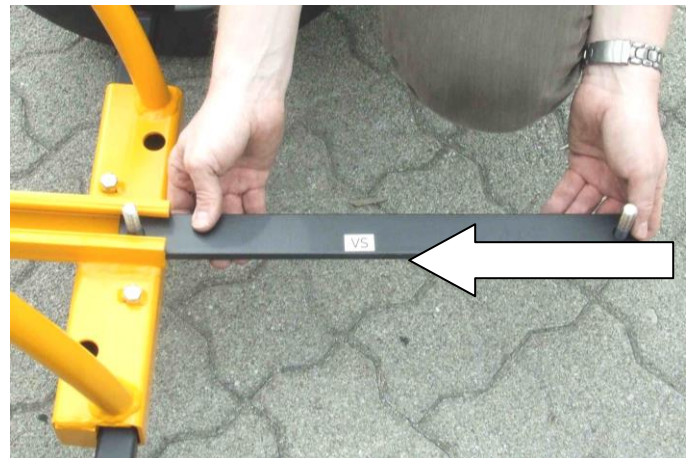


Fig. 3

Position the rail in the middle of the guide bar.



Fig. 4

Insert the device VS-S at the UM



Fig. 5

Fasten the VS-S with two ring screws at "rail for VS-S".



Fig. 6



Fig. 7

Install the vacuum hose with the vacuum hose clamp (↘) coming from the suction plate.



Fig. 8

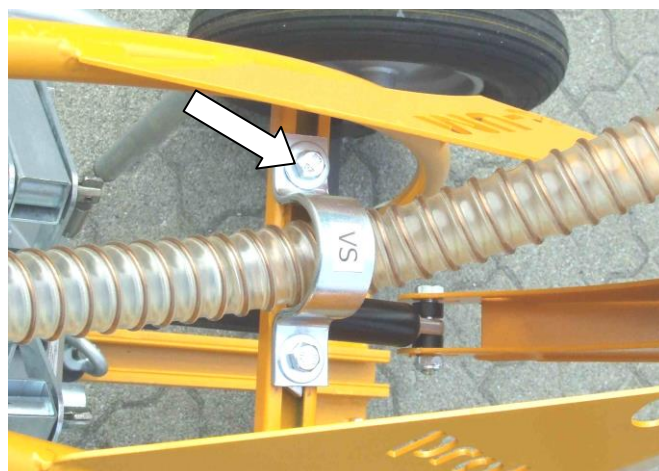


Fig. 9

Install the vacuum hose at the air-release valve (↙)

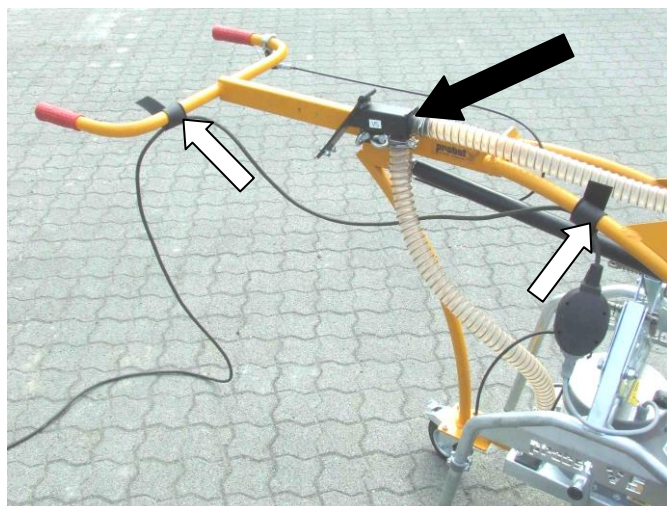


Fig. 10

Secure the power cable with a Velcro strip at the handle and at the frame of the UM. (small arrows ↖ ↗ in Fig. 10)



Fig. 11

Start the VS-S (for more details see operating instruction of the VS-S)



Fig. 12



Fig. 13

Observe the vacuum gauge during the lifting procedure!



Fig. 14



Fig. 15

Open the air-release valve for release the load (see **Fig. 16+16A** ).

When working with the UM-VS-S on uneven area, the side support/swingable handles of the VS-S can be dismantled for a better handling with the UM-VS-S.

(Fig. 16 (and also e.g. 12 or 13) shows the UM-VS-S **with** support/swingable handles) (Fig. 17 shows the UM-VS-S support/swingable handles)

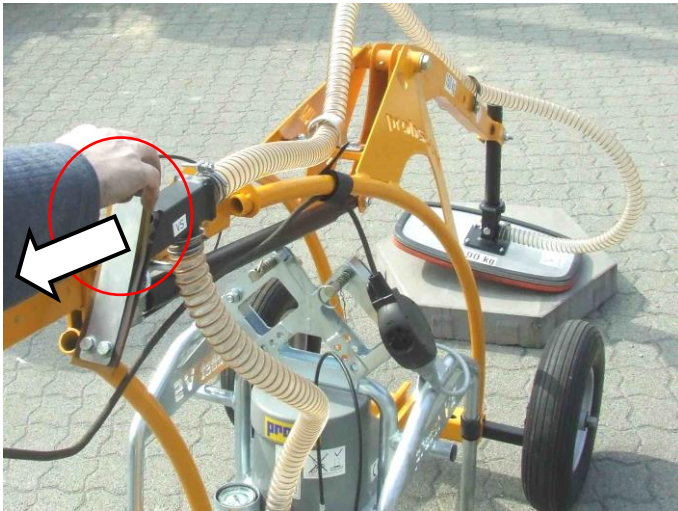


Fig. 16



Fig. 17



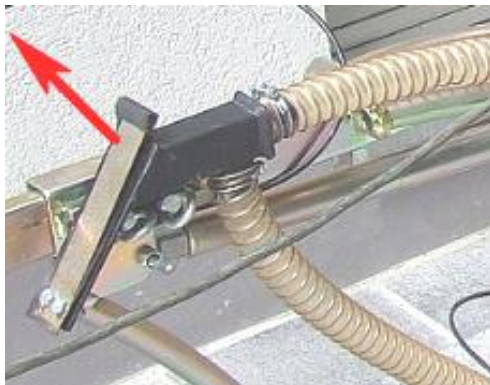


Fig. 16A

### 5.6.1 UM - VS-S (SPEEDY) with integrated Honda generator SE

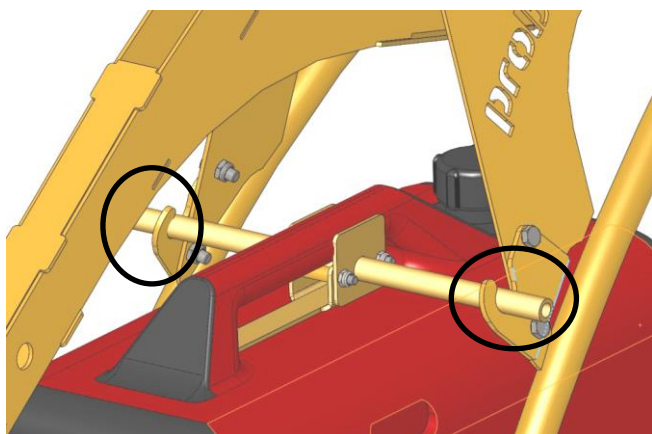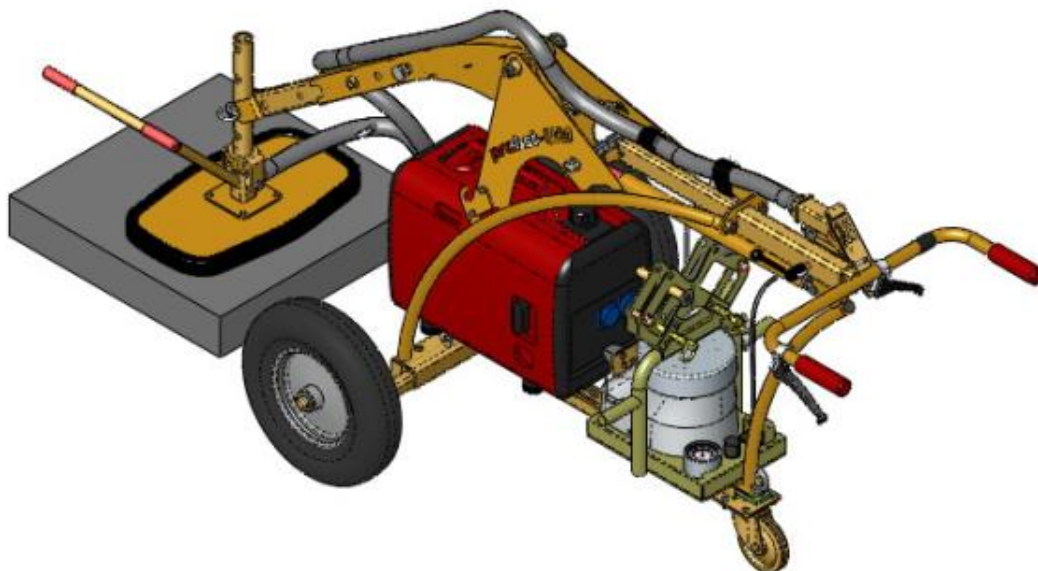


6 Operation

6.1 Working sequence





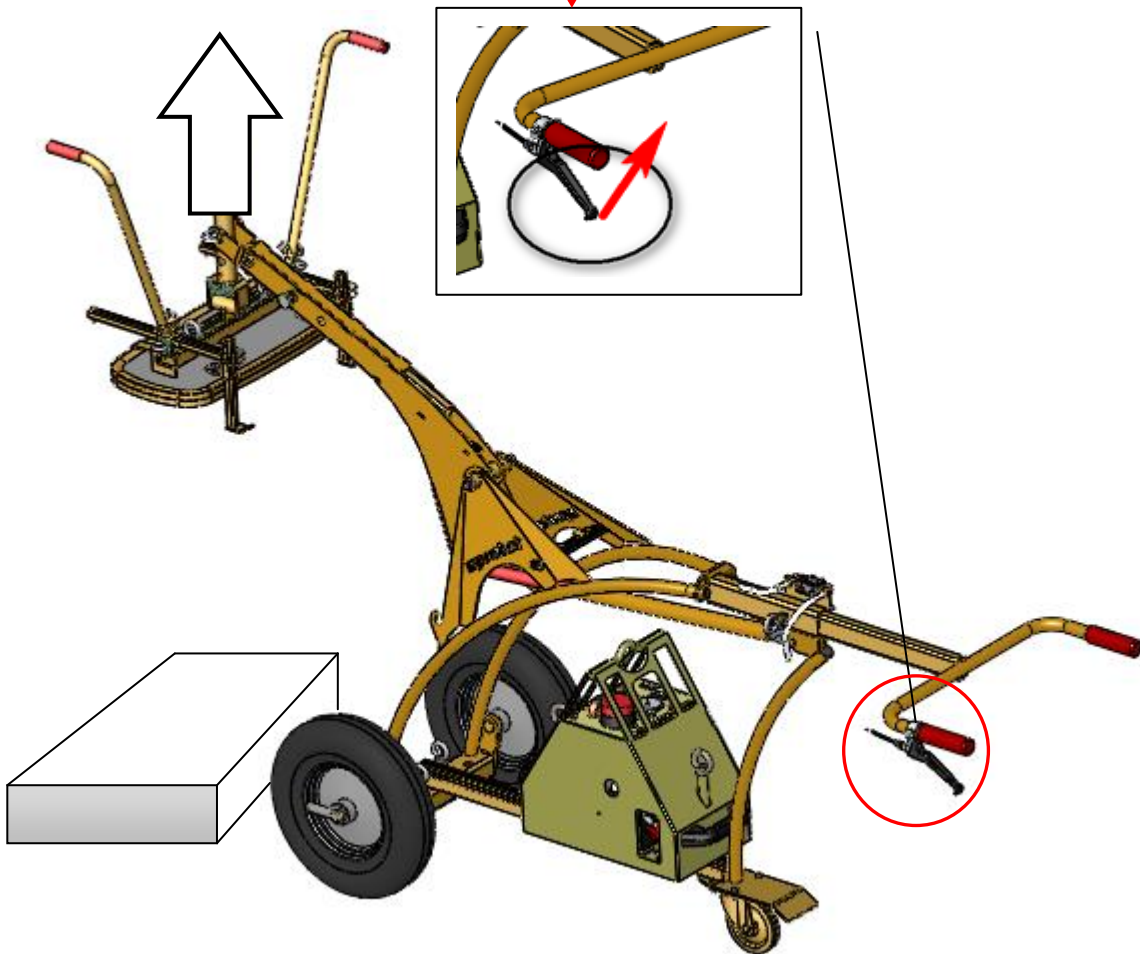

## 7 Maintenance and care

### 7.1 Maintenance



To ensure the correct function, safety and service life of the device the following points must be executed in the maintenance interval.

Used **only original spare parts**, otherwise the warranty expires.



**All operations may only be made in unpressurised, electro less and closed state of the device!**

#### MECHANICAL

##### Service interval


First inspection after  
25 operating hours

All 50 operating hours

Minimum 1x per year  
(at rough conditions shorten  
the interval)

##### Maintenance work

- Control and tighten all screws and connection.  
(The implementation is only allowed by an expert).
- Tighten all screws and connection (Take care that the tightening torques according to the property class of the screws are observed).
- Check all joints, bolts, guidance's and gears for correct function, if necessary adjust or replace it.
- Check all Grippers ( if available) for signs of wear.
- Grease all grease nipples (see → in figure below) and slidings ( if available) when the device is in opened position with a spatula.
- Check of all the suspension parts, bolts and straps. Check for corrosion and safety by an expert.

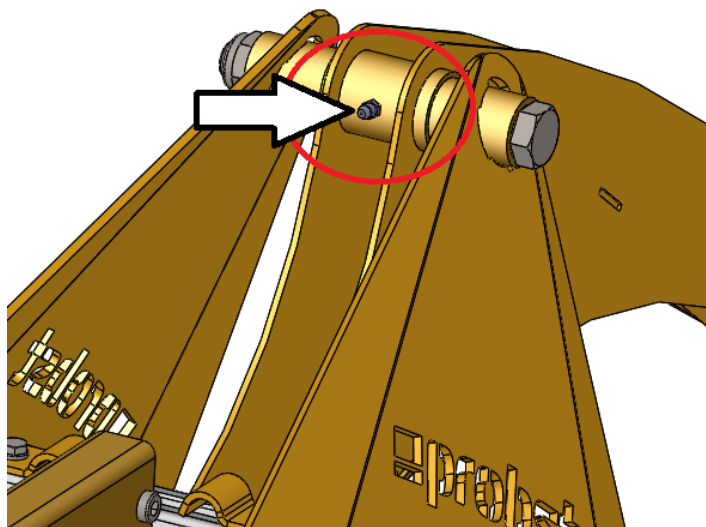



## 8 Hints to the identification plate



Type, serial-number and production year are very important for the identification of your device. If you need information to spare-parts, warranty or other specific details please refer to these information.

The max. carrying capacity is the maximum load which can be handled with the device. Do not exceed this carrying capacity.

If you use the device in combination with other lifting equipment (Crane, chain hoist, forklift truck, excavator) consider the deadweight of the device




Example:

### 8.1 Hints to the renting/leasing of PROBST devices



With every renting/leasing of PROBST devices the original operating instructions must be included unconditionally (in deviation of the users country's language, the respective translations of the original operating instructions must be delivered additionally)!

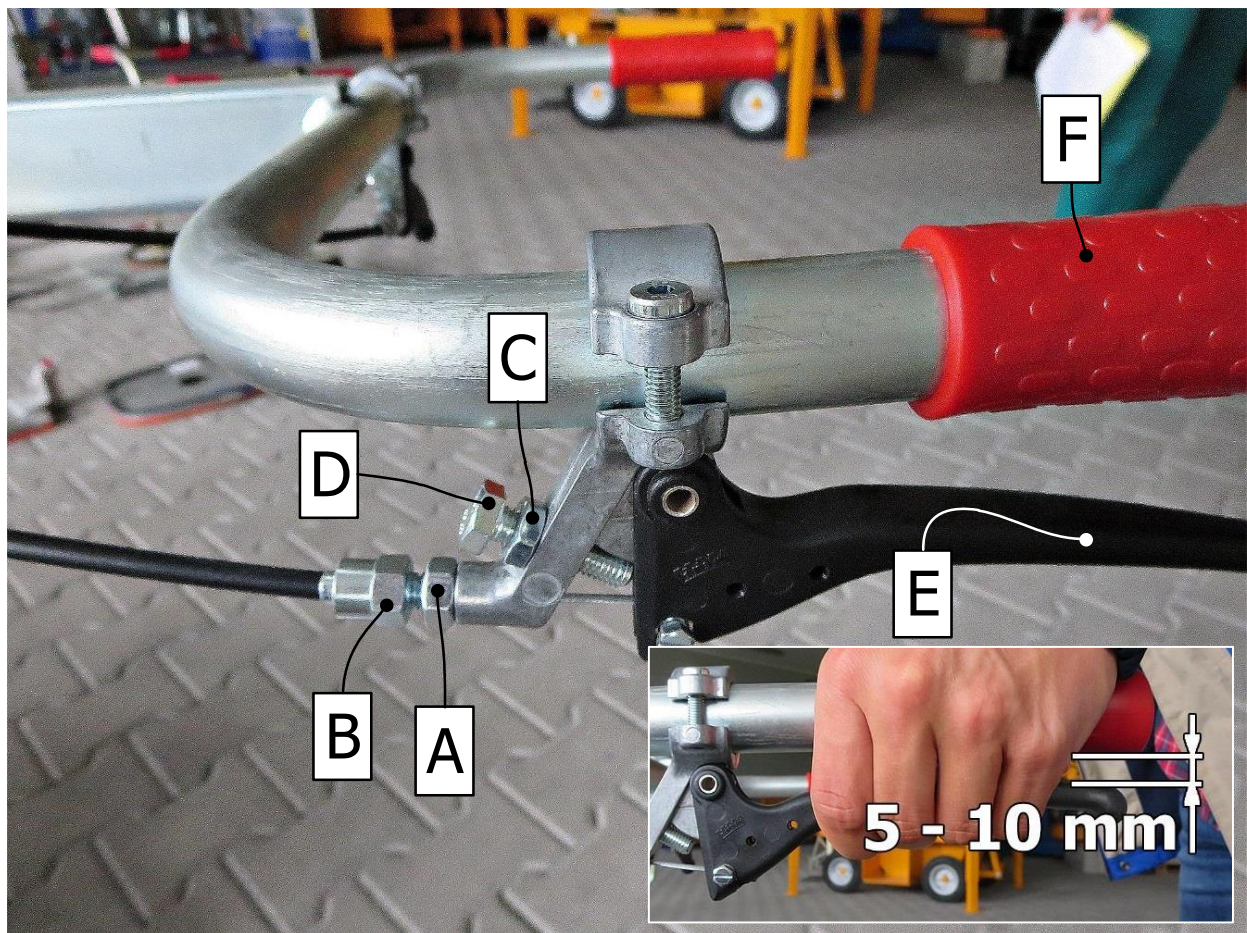




Sollzustand: Ausleger bewegt sich erst, wenn der Betätigungshebel fast am Griff **F** anliegt.

1. Kontermutter **A** lösen
2. Bowdenzugmutter **B** durch drehen so einstellen, dass der Ausleger sich bewegt, wenn Betätigungshebel **E** fast am Griff **F** anliegt (5 – 10 mm Luft).
3. Kontermutter **A** festdrehen
4. Kontermutter **C** lösen
5. Anschlagschraube **D** so drehen, dass der Betätigungshebel **E** nicht mehr locker ist
6. Kontermutter **C** festdrehen

Target state: The jib is moving only after the operating lever is almost in contact with the handle **F**.

1. Release the lock nut **A**
2. Adjust the nut on the bowden cable **B** by rotating it, so that the jib is moving only after the operating lever **E** is almost in contact with the handle **F** (5 – 10 mm gap)
3. Tighten the lock nut **A**
4. Release the lock nut **C**
5. Rotate the end stop screw **D**, so that the operating lever **E** is not loose anymore.
6. Tighten the lock nut **C**

# Uni Mobil UM-VPH 42740014

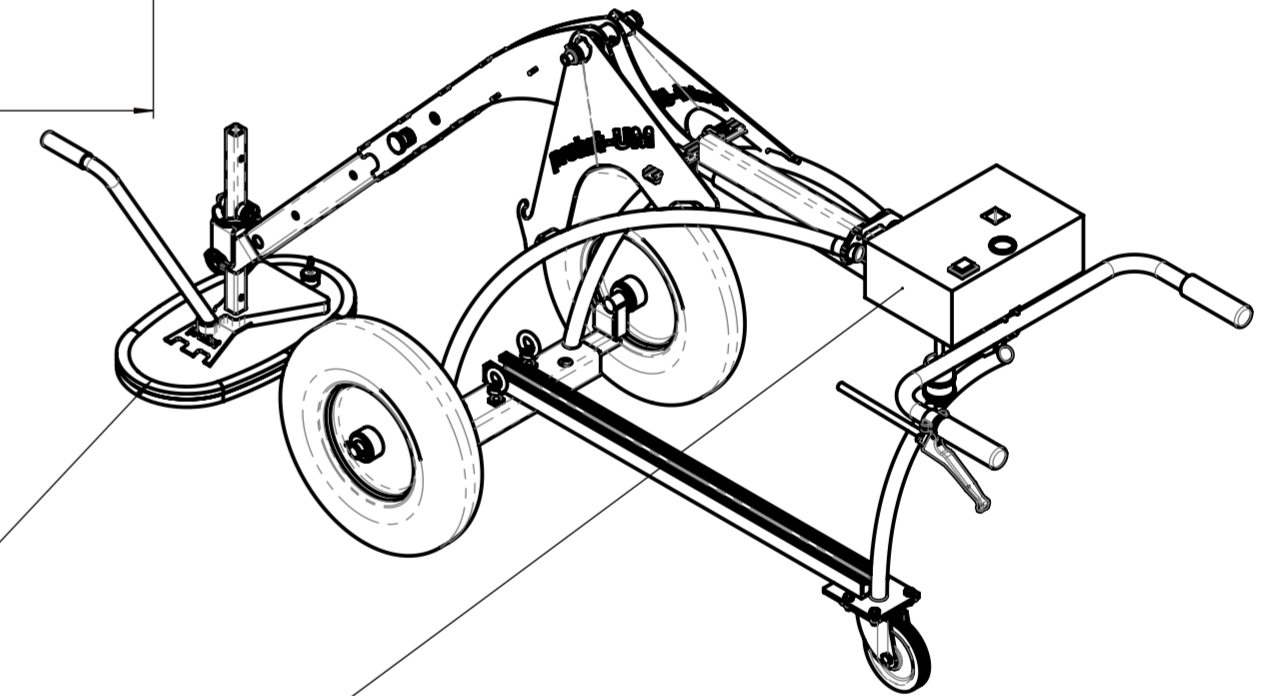
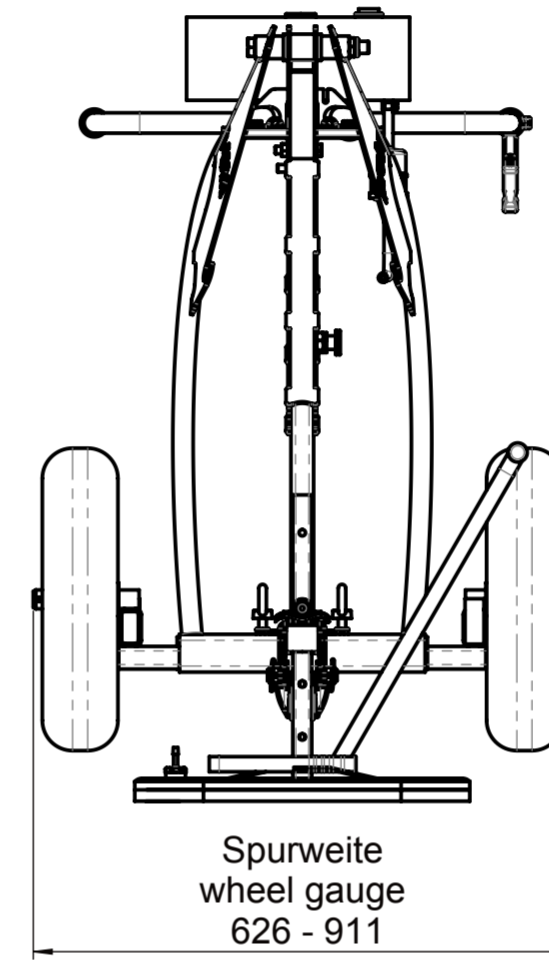
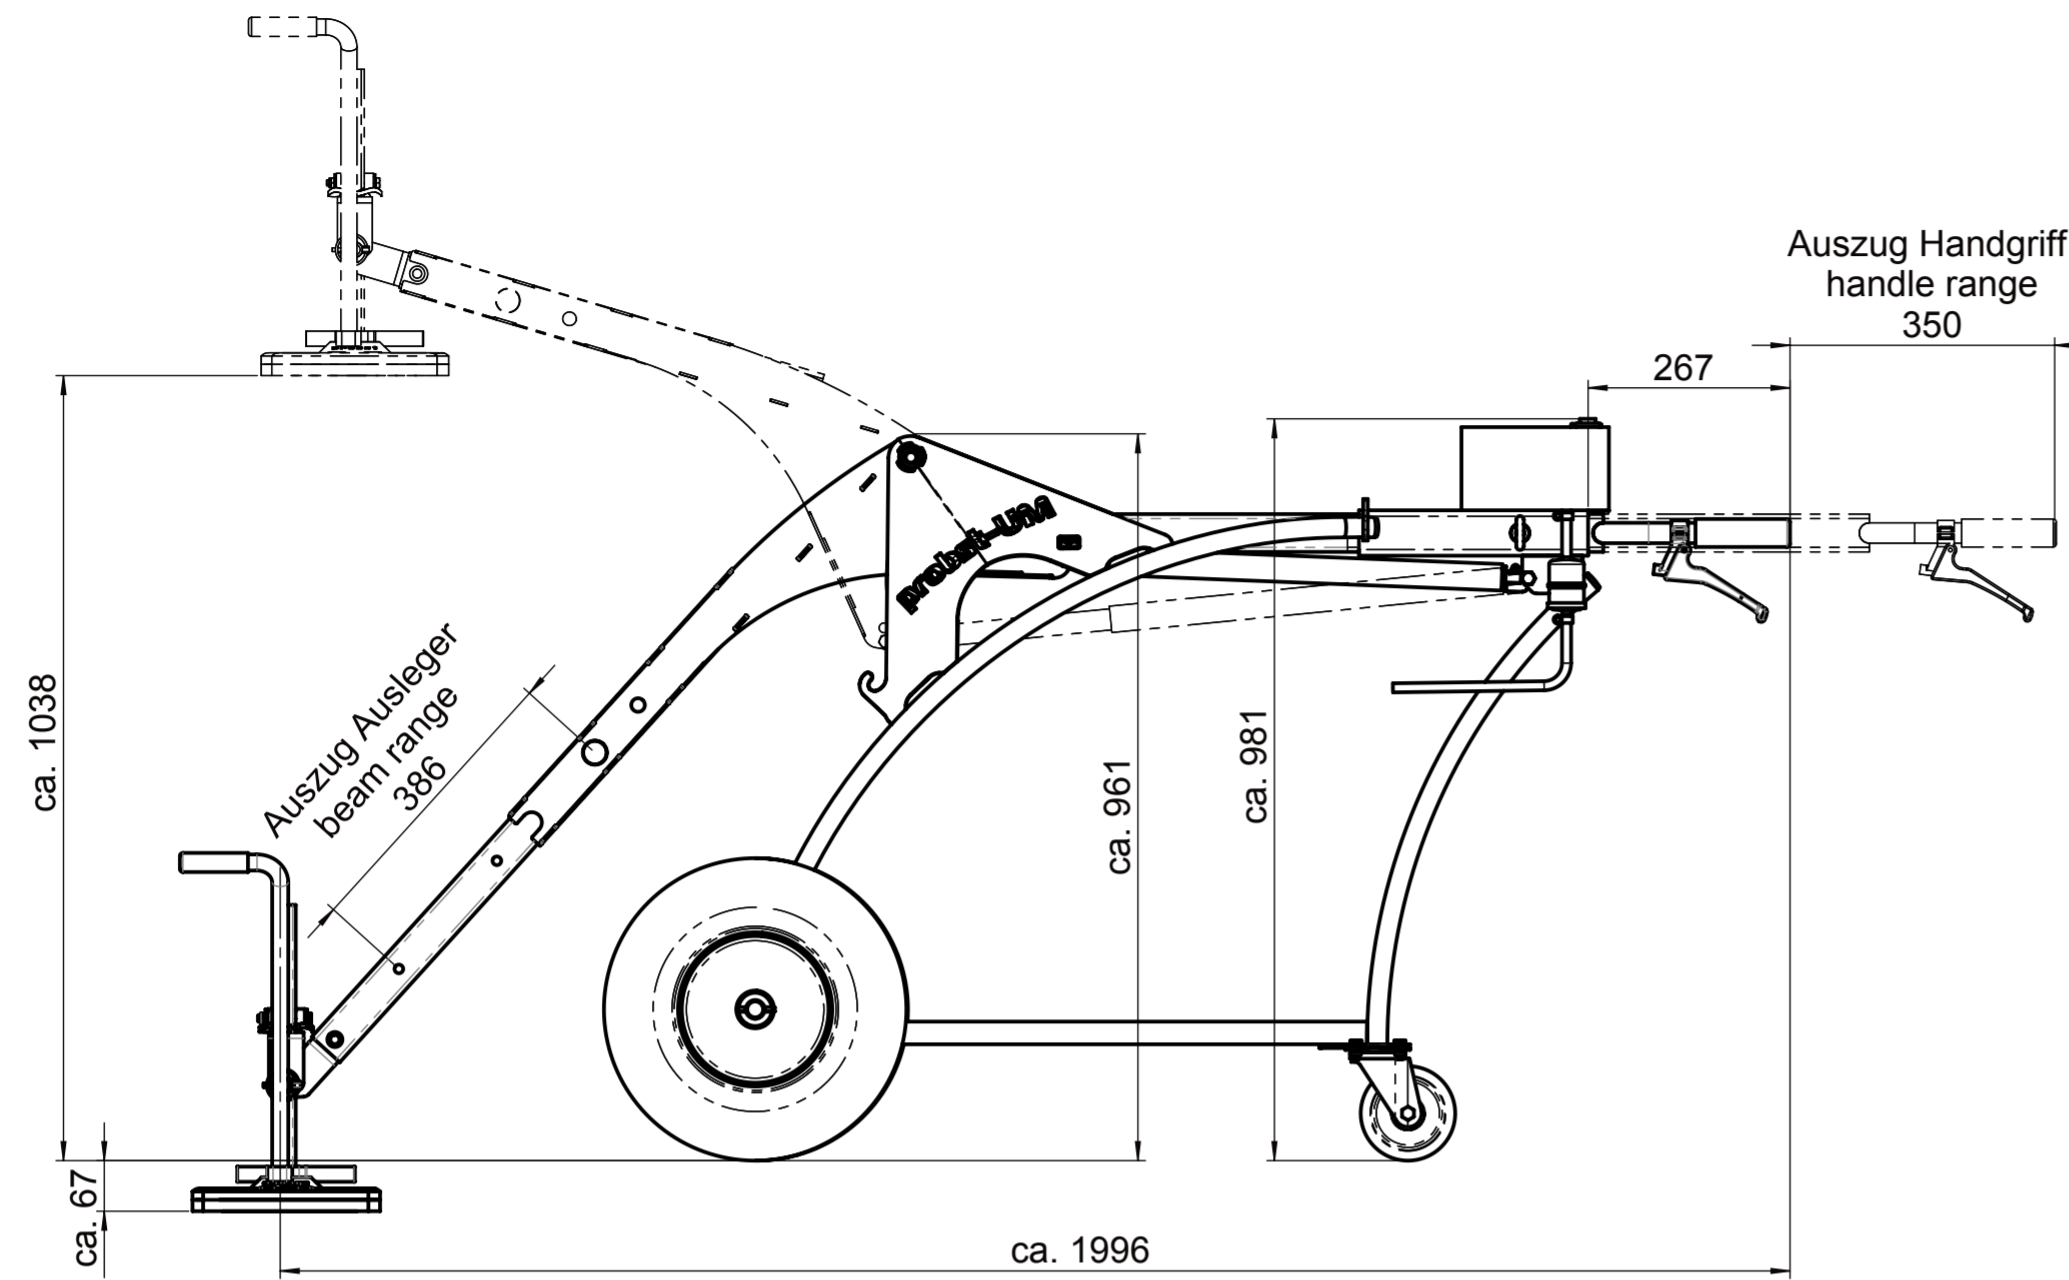


42710001


Tragfähigkeit: 150 [kg]  
Carrying Capacity: 150 [kg] / (330 [lbs.])

Laying dolly UNI MOBIL UM-VPH


|   |               |                                     |   |   |                  |
|---|---------------|-------------------------------------|---|---|------------------|
| Allgemeintoleranzen nach DIN ISO 2768c  |               | Oberflächen nach DIN ISO 1302       |   | allgemeiner Biegehalbmesser = Blechstärke |                  |
|  |               | Bei Änderungen Rücksprache mit TB ! |   |   |                  |
|   |               | Oberflächenbehandlung               | Format  | Maßstab: 1:10 1:7                         | Gewicht: 40,7 kg |
|   |               | A2                                  | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |   |                  |
|   |               | Datum                               | Name  | Benennung                                 |                  |
|   |               | Erst. 18.11.2011                    | Ralf.Northe   | Verlegewagen Uni Mobil UM Grundmodul      |                  |
|   |               | Gepr.                               |   | ohne Unterdruckerzeuger, ohne Saugplatte  |                  |
|   |               | WA:                                 |   | Artikelnummer/Zeichnungsnummer            |                  |
|   |               | Kunde:                              |   | 42720235                                  |                  |
| Zust.   | Änderungstext | Datum                               | Von   | Urspr.                                    | Blatt 5 von 7    |
|   |               |                                     |   | Ers. f.                                   | Ers. d.          |

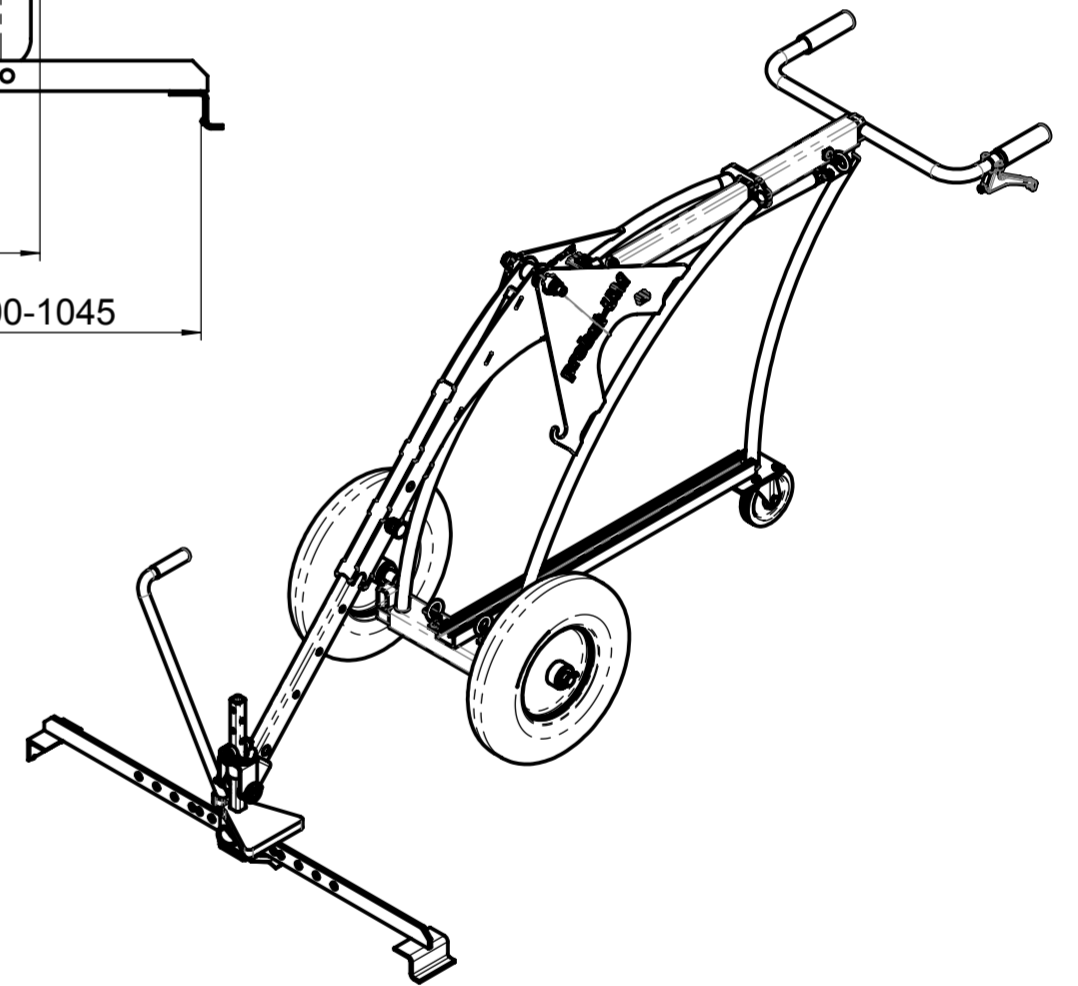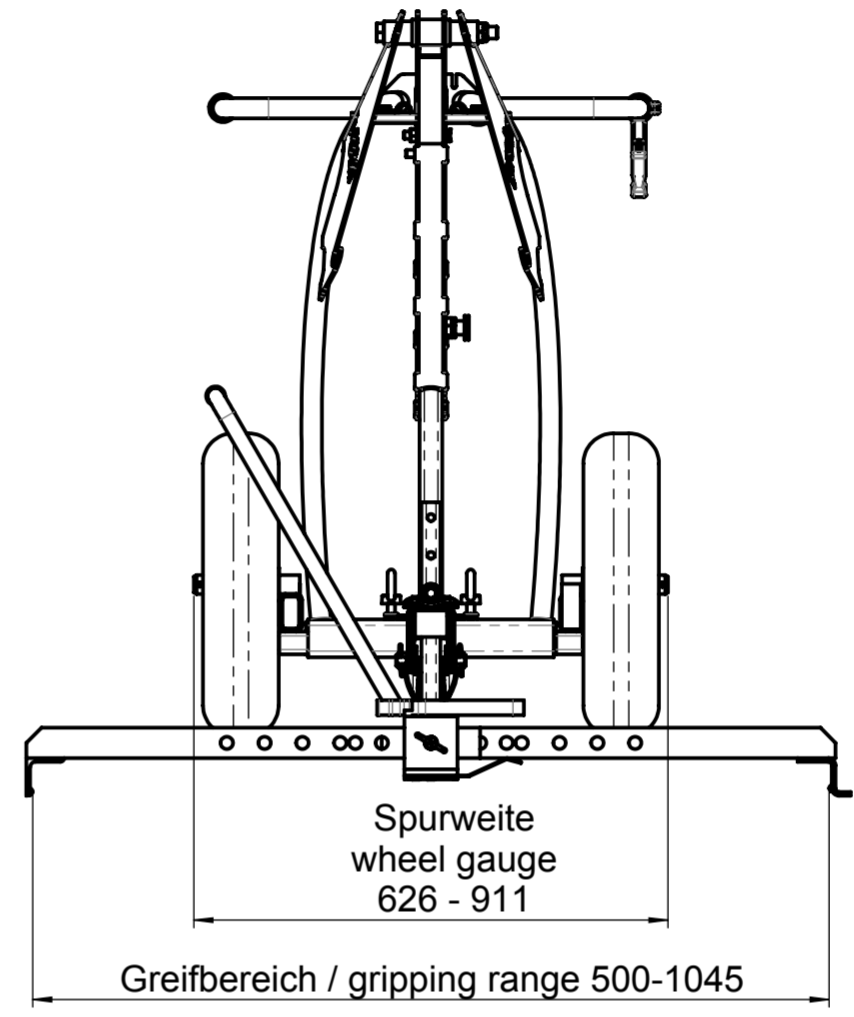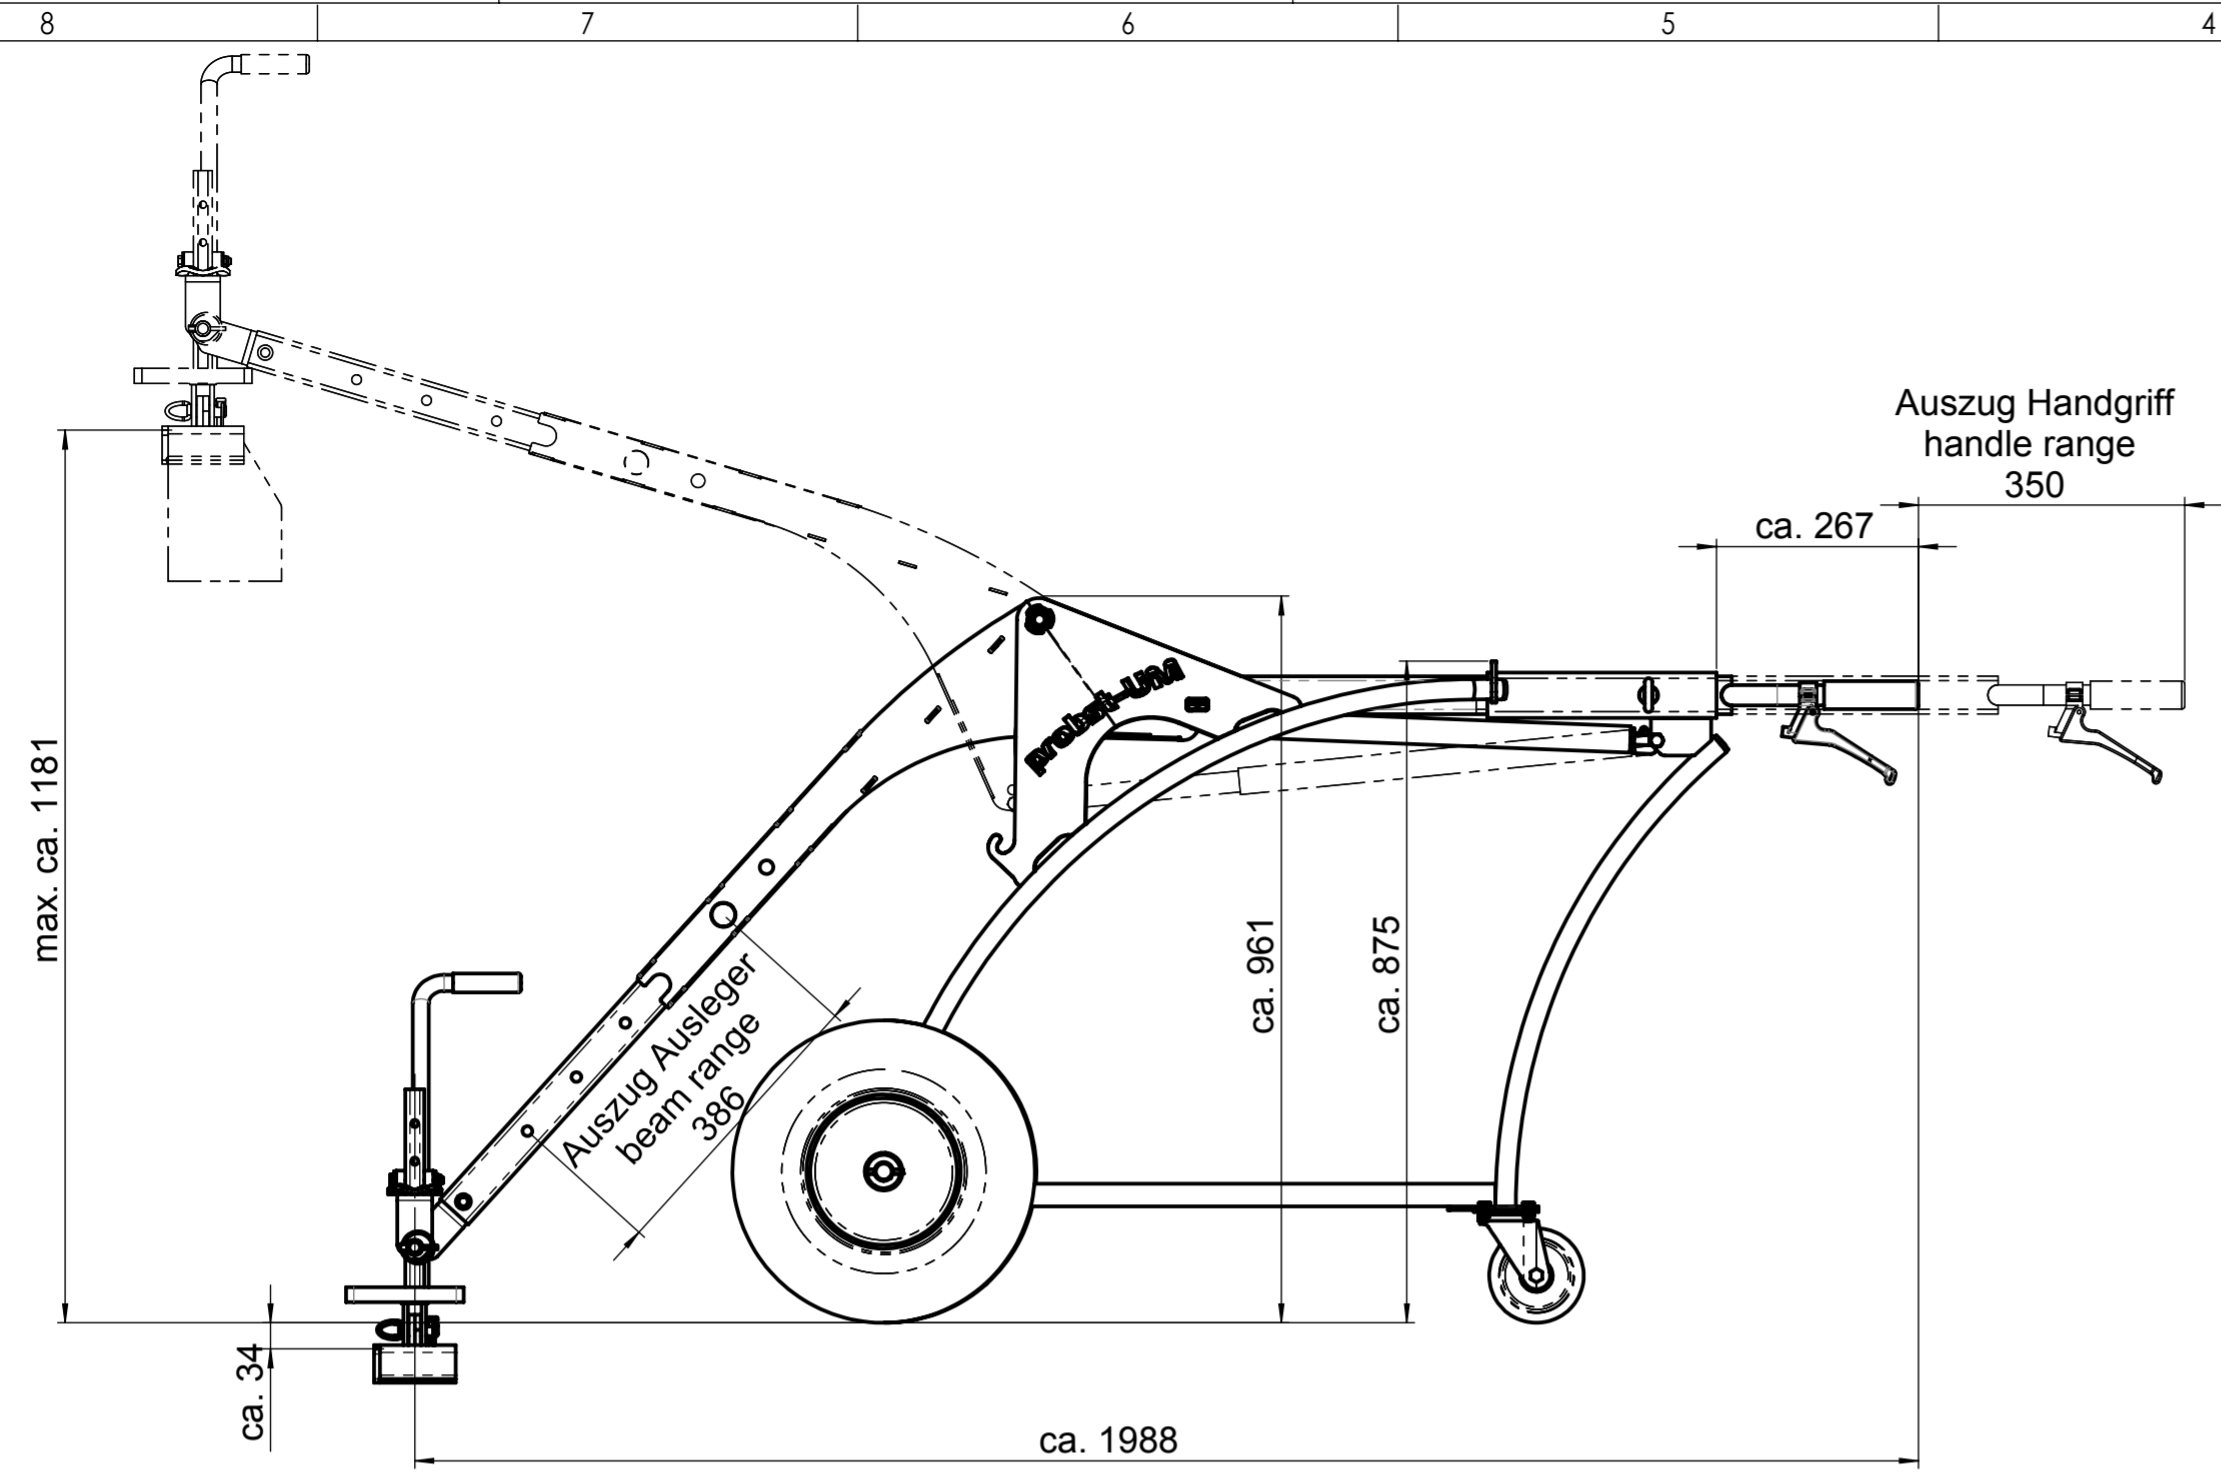


Tragfähigkeit: 100 [kg]  
Carrying Capacity: 100 [kg] / (220 [lbs.])

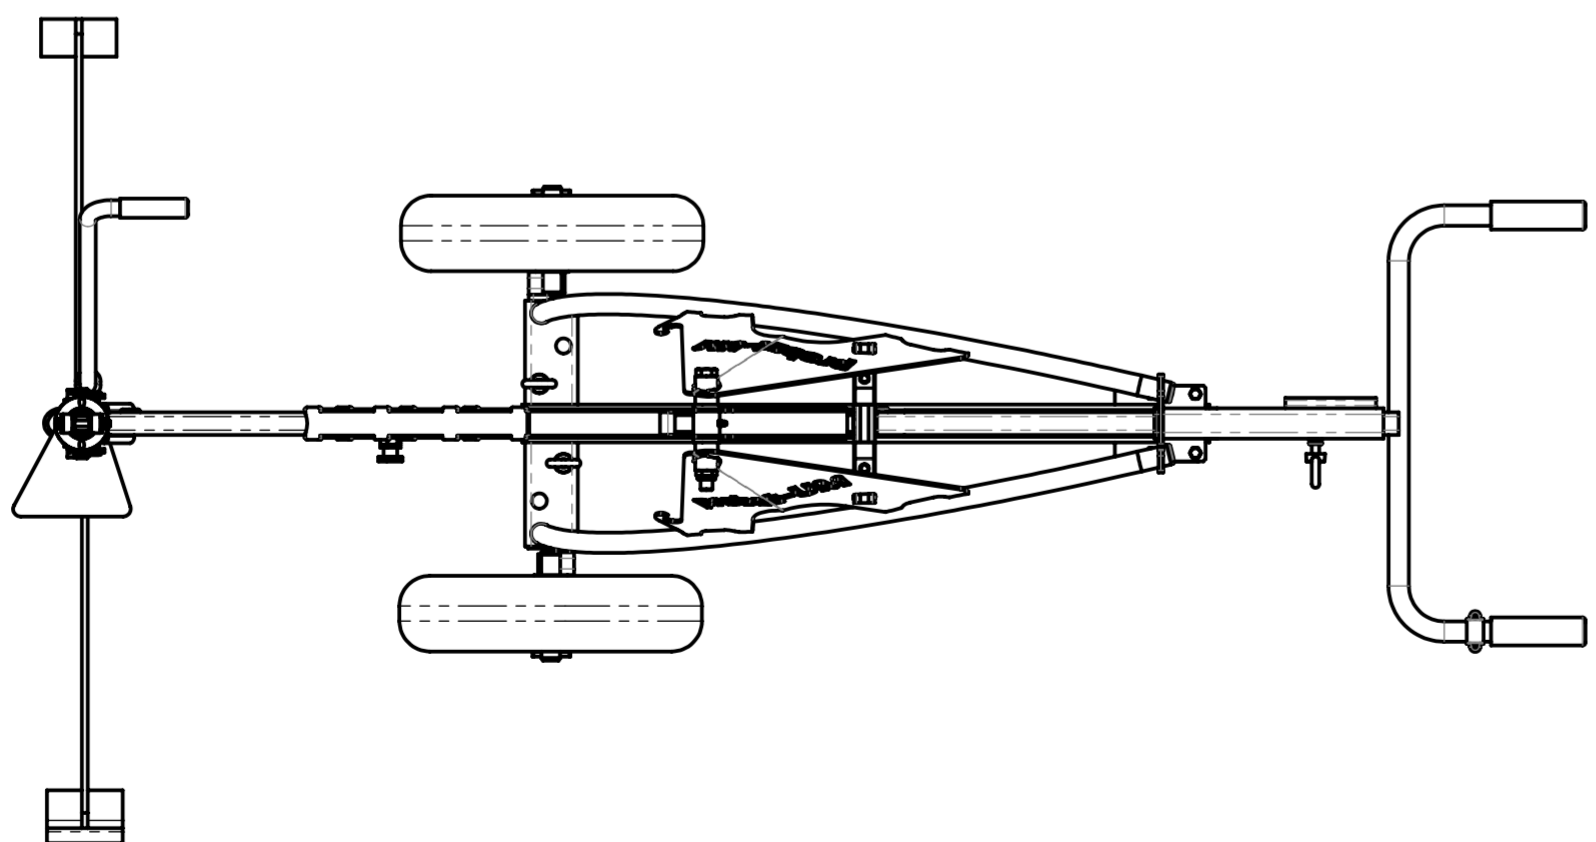

UNIMOBIL UM-VZ1 Laying dolly - complete version

|   |  |                                 |  |
|---|--|---------------------------------|--|
|  |  | Bei Änderungen Rücksprache TB ! |  |
|   |  | Gewicht: 46 kg                  |  |
| Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung!         |  | Benennung                       |  |
| UNIMOBIL UM-VZ 1<br>Verlegewagen - Komplettgerät                                      |  | Artikelnummer/Zeichnungsnummer  |  |
| D52740015   |  | Blatt 1 von 1                   |  |
| Zust. Urspr.  |  | Ers. f. Ers. d.                 |  |

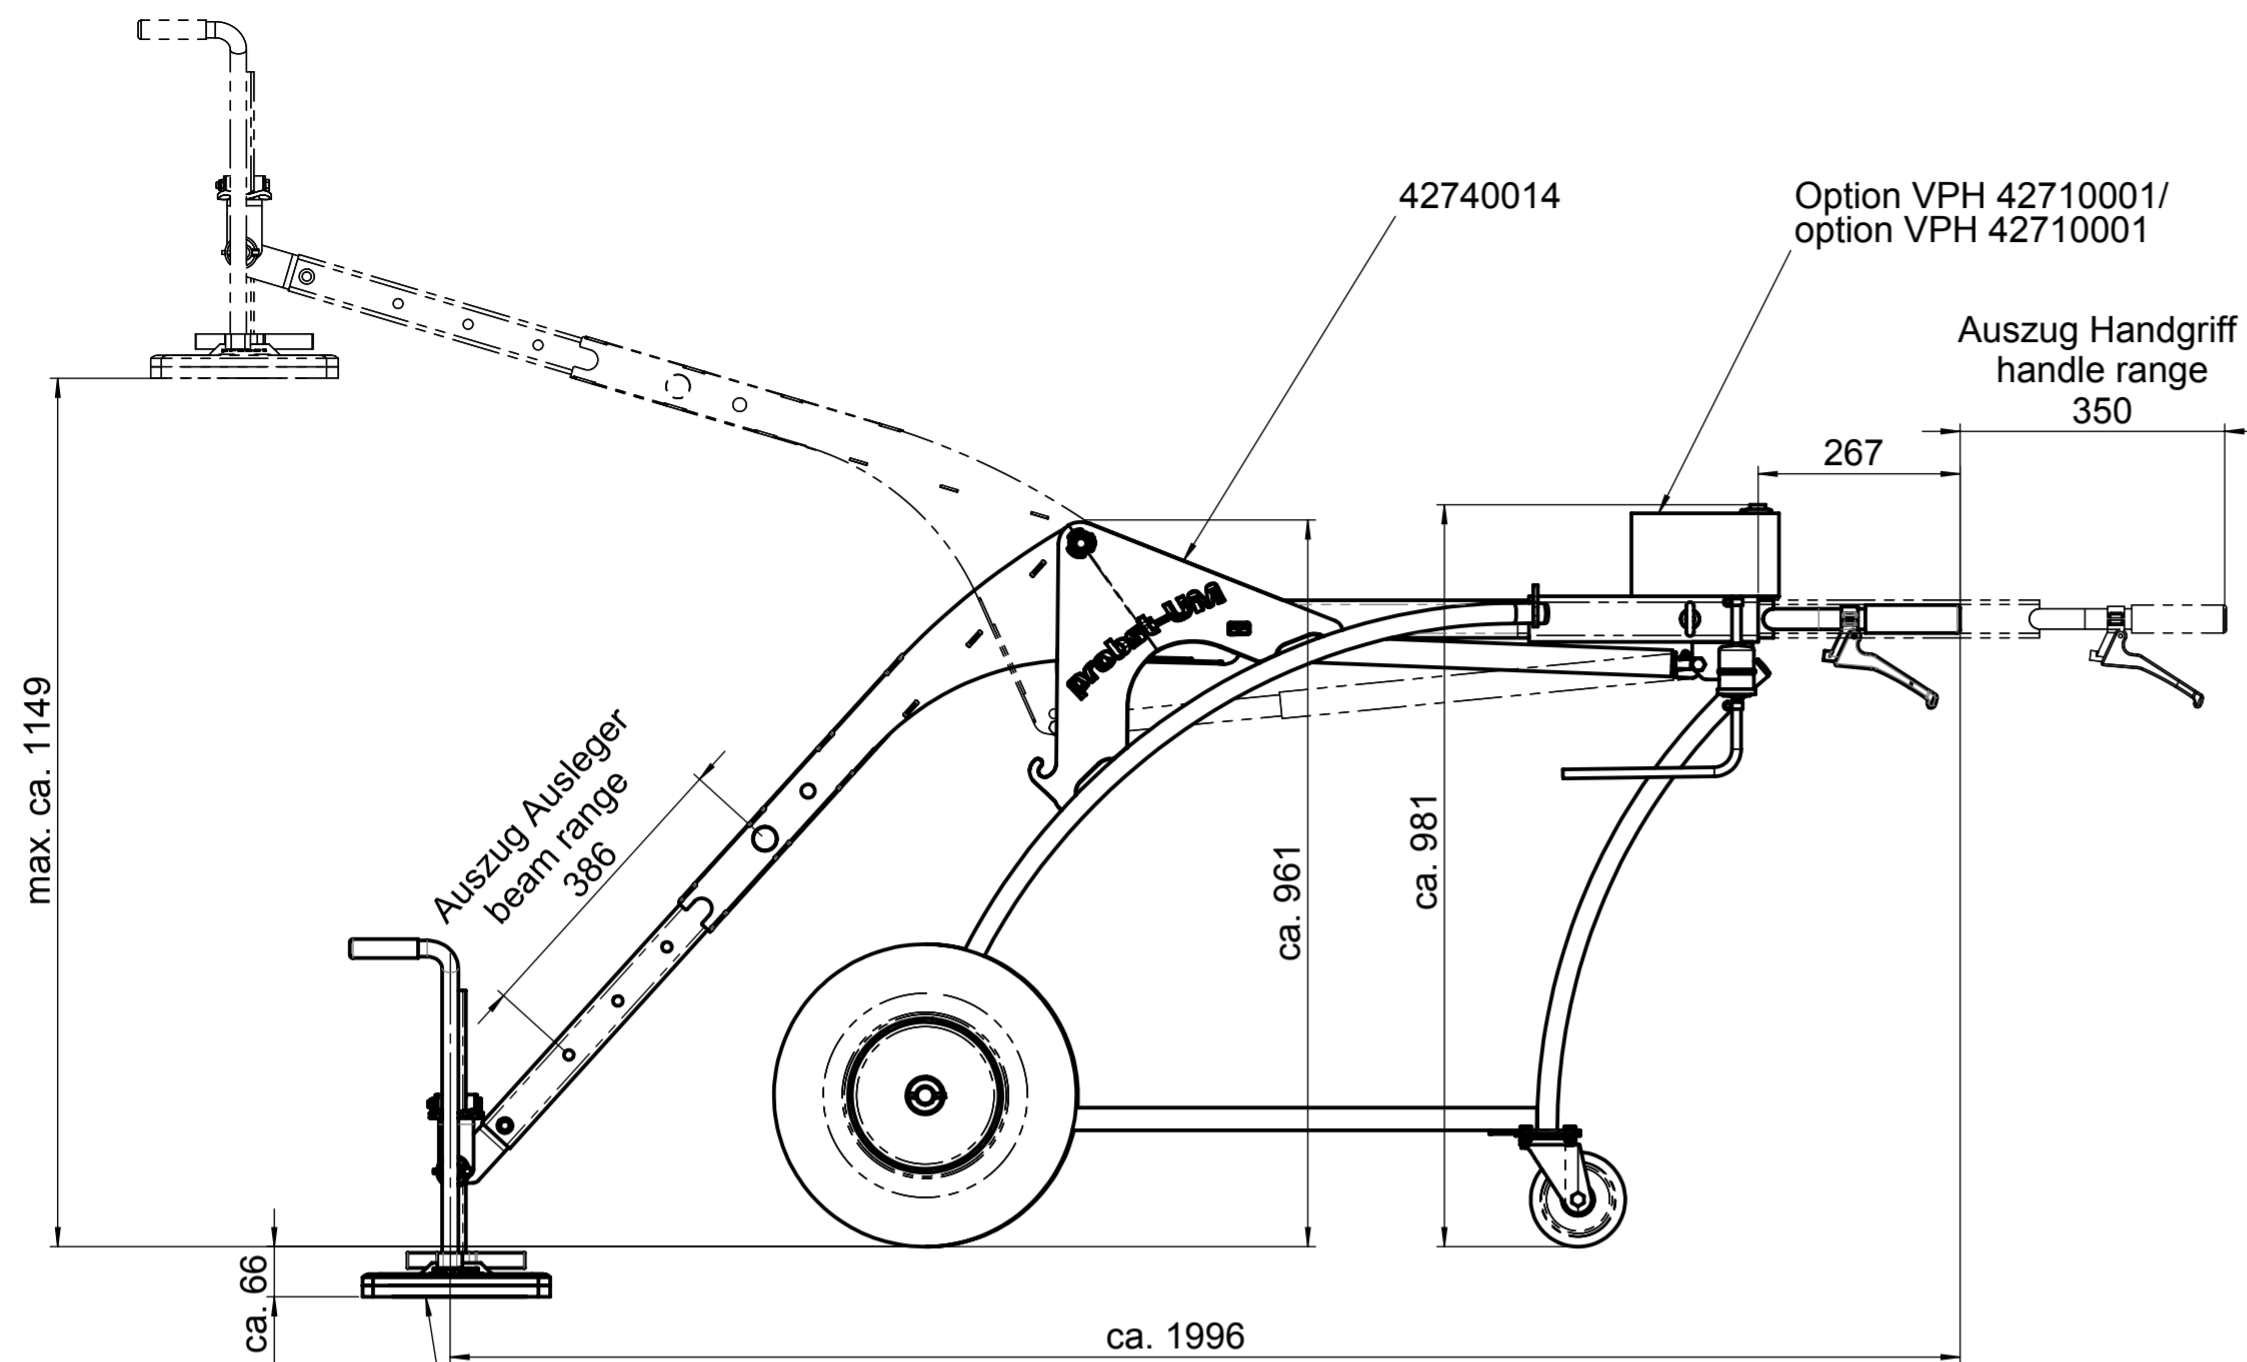

Option Saugplatte /  
option suction plate

Option VPH 42710001/  
option VPH 42710001

Auszug Handgriff  
handle range  
350

Auszug Ausleger  
beam range  
386

ca. 961


ca. 981

267


ca. 1996

max. ca. 1149

ca. 66

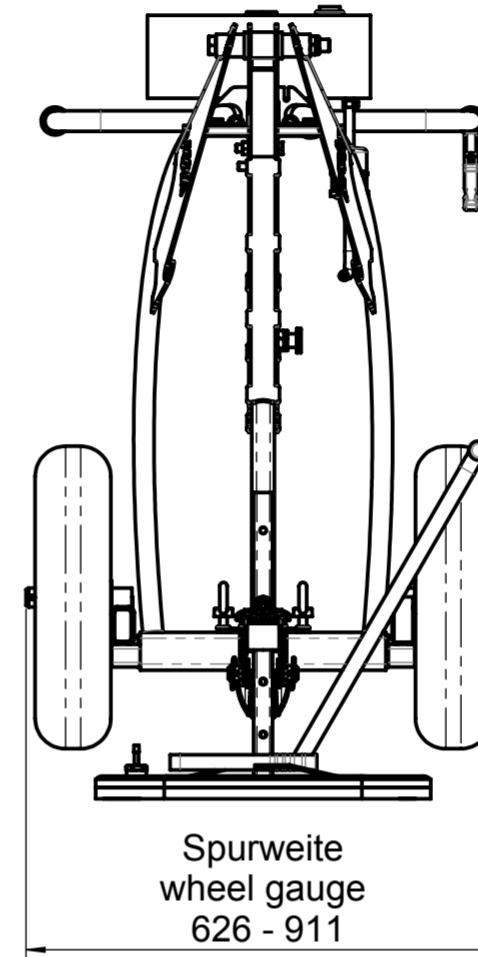

Spurweite  
wheel gauge  
626 - 911

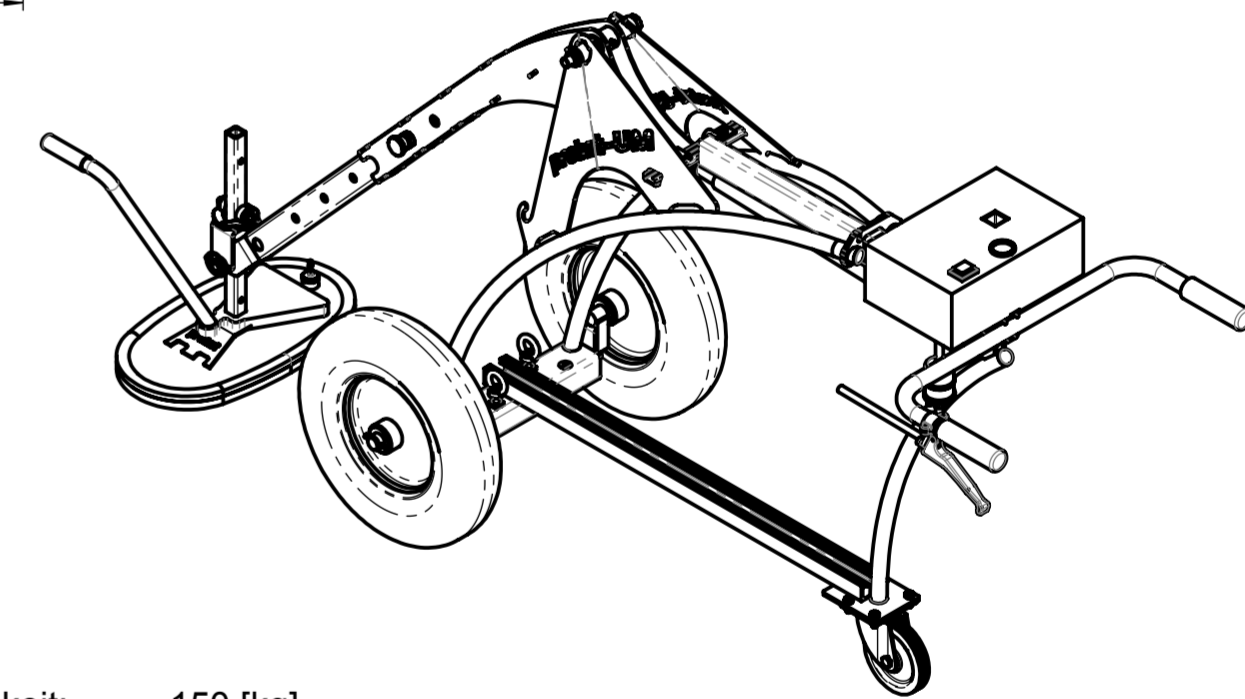


Tragfähigkeit: 150 [kg]

Carrying Capacity: 150 [kg] / (330 [lbs.])

UNIMOBIL UM-VPH Laying dolly - basic version

|   |               |                                     |   |  |                   |
|---|---------------|-------------------------------------|---|--|-------------------|
| Allgemeintoleranzen nach DIN ISO 2768c  |               | Oberflächen nach DIN ISO 1302       |   | allgemeiner Biegehalbmesser = Blechstärke    |                   |
|  |               | Bei Änderungen Rücksprache mit TB ! |   |  |                   |
|   |               | Oberflächen-<br>behandlung          | Format  | Maßstab: 1:10 1:12                           | Gewicht: 49 kg    |
|   |               | A2                                  | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |  |                   |
|   |               | Datum                               | Name  |  |                   |
|   |               | Erst. 27.5.2013                     | Ralf.Northe   |  |                   |
|   |               | Gepr. 27.5.2013                     | Ralf.Northe   |  |                   |
|   |               | WA:                                 |   | Benennung                                    |                   |
|   |               | Kunde:                              |   | UNIMOBIL UM-VPH<br>Verlegewagen - Basisgerät |                   |
|   |               | Artikelnummer/Zeichnungsnummer      |   |  | Blatt             |
|   |               | D42740014                           |   |  | 1                 |
| Zust.   | Änderungstext | Datum                               | Von   | Urspr.                                       | Ers. f. / Ers. d. |
|   |               |                                     |   |  | von 1             |



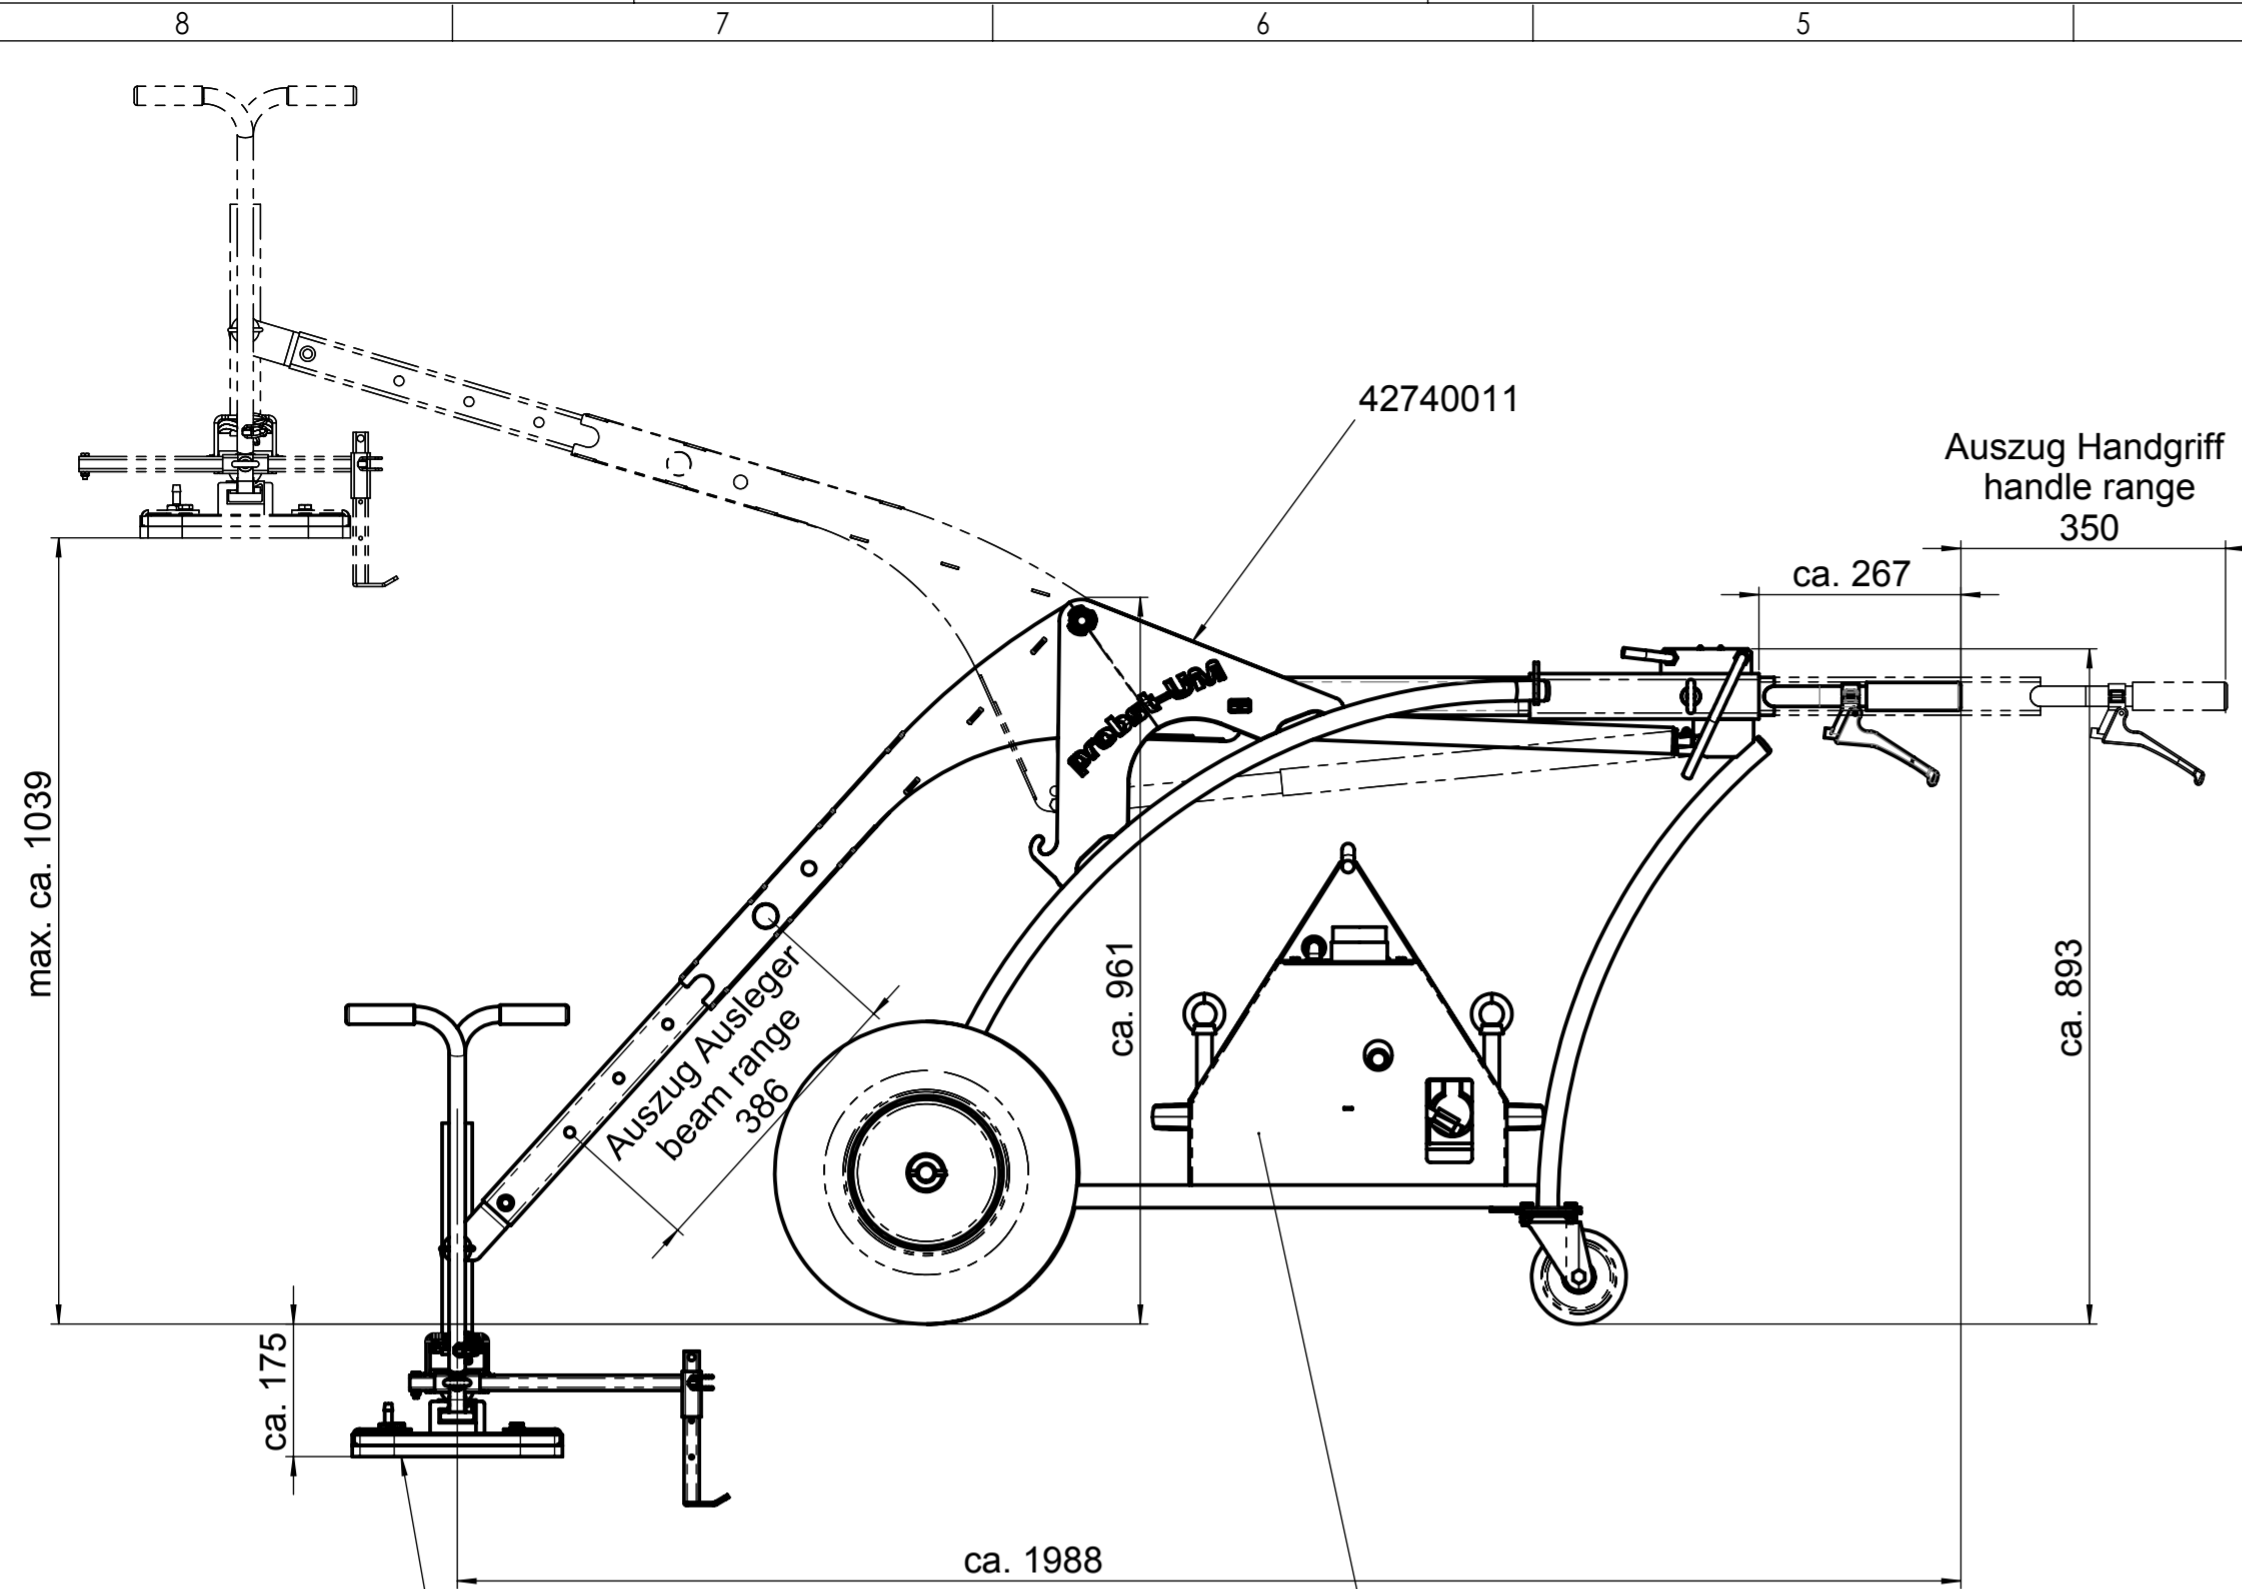

Auszug Handgriff  
handle range  
350

Auszug Ausleger  
beam range  
386

max. ca. 1039

ca. 267

ca. 961


ca. 893

ca. 175


ca. 1988

Option Saugplatte  
option suction plate


Option VACUUM-STEINMAGNET  
option VACUUM-STONEMAGNET

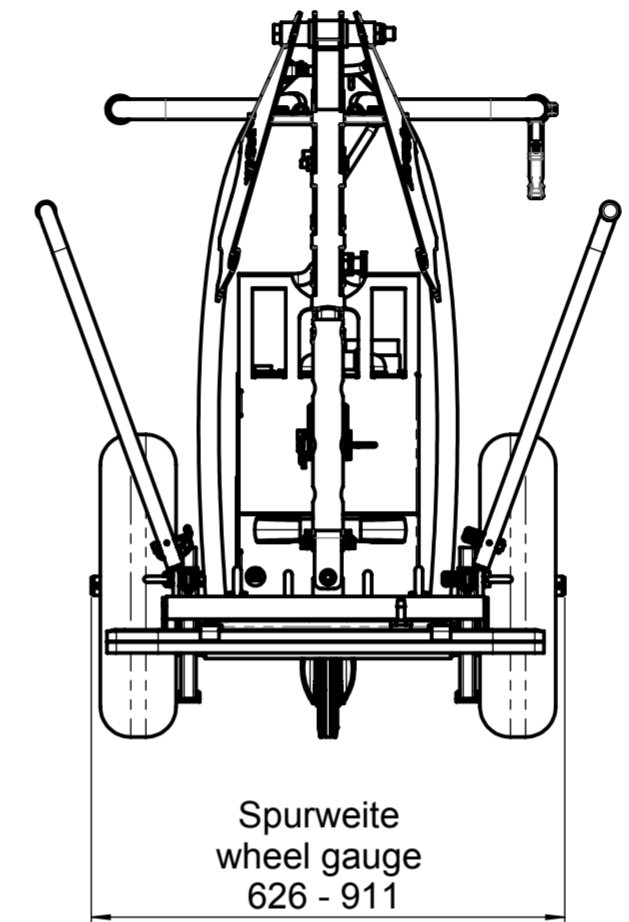

Spurweite  
wheel gauge  
626 - 911




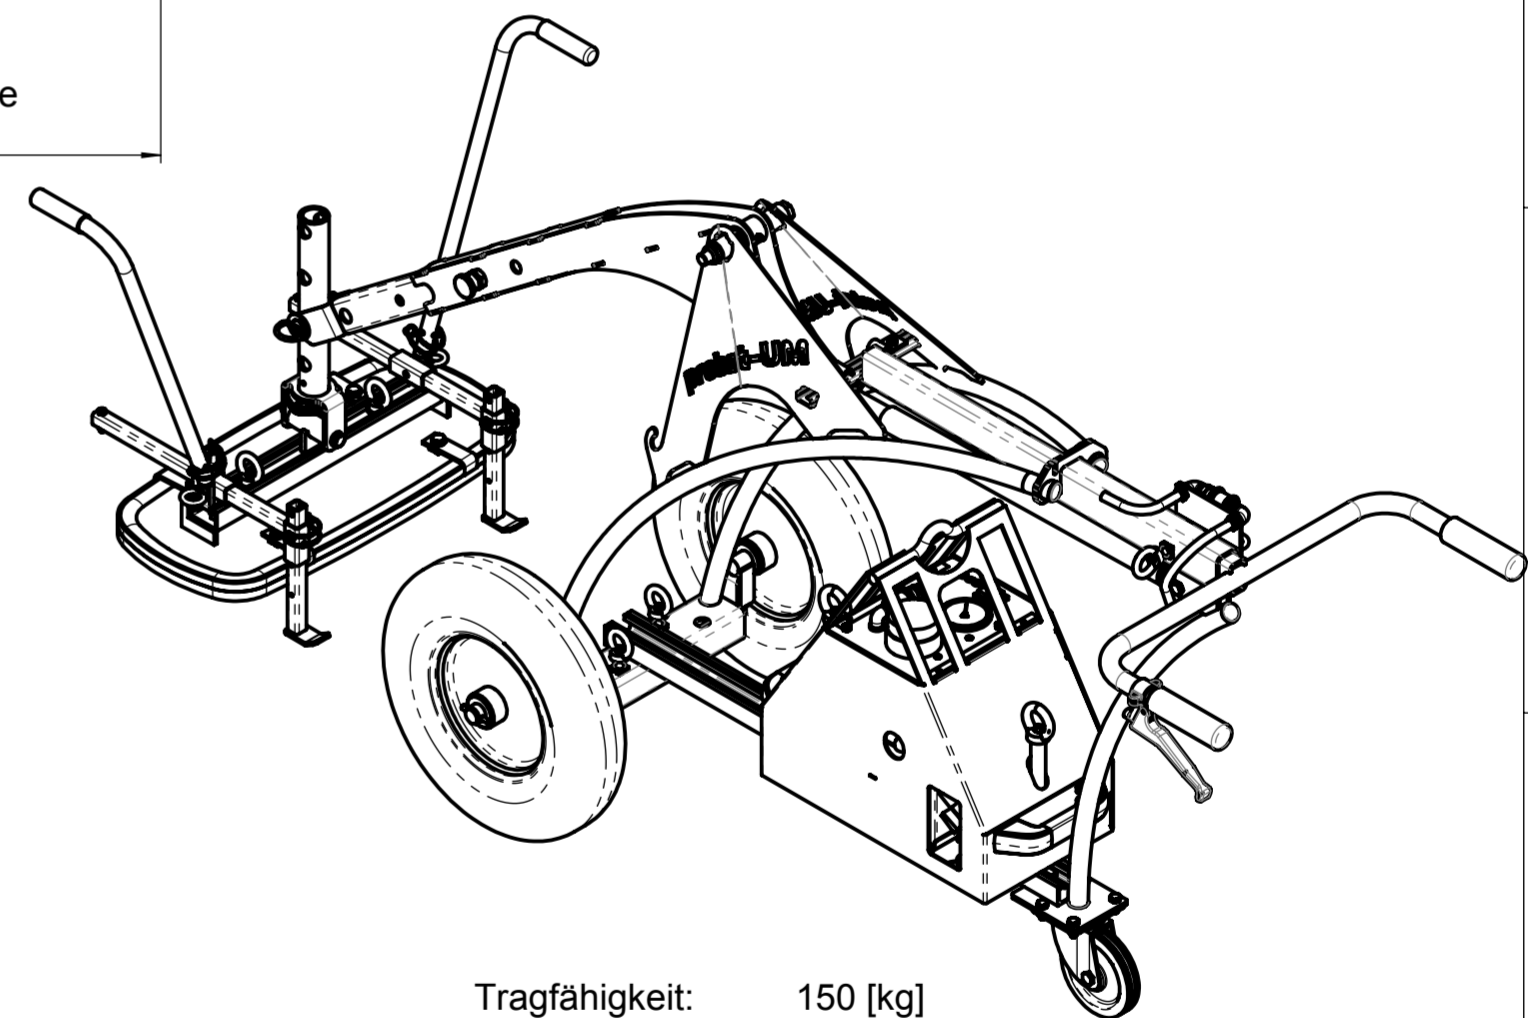


Tragfähigkeit: 150 [kg]  
Carrying Capacity: 150 [kg] / (330 [lbs.])

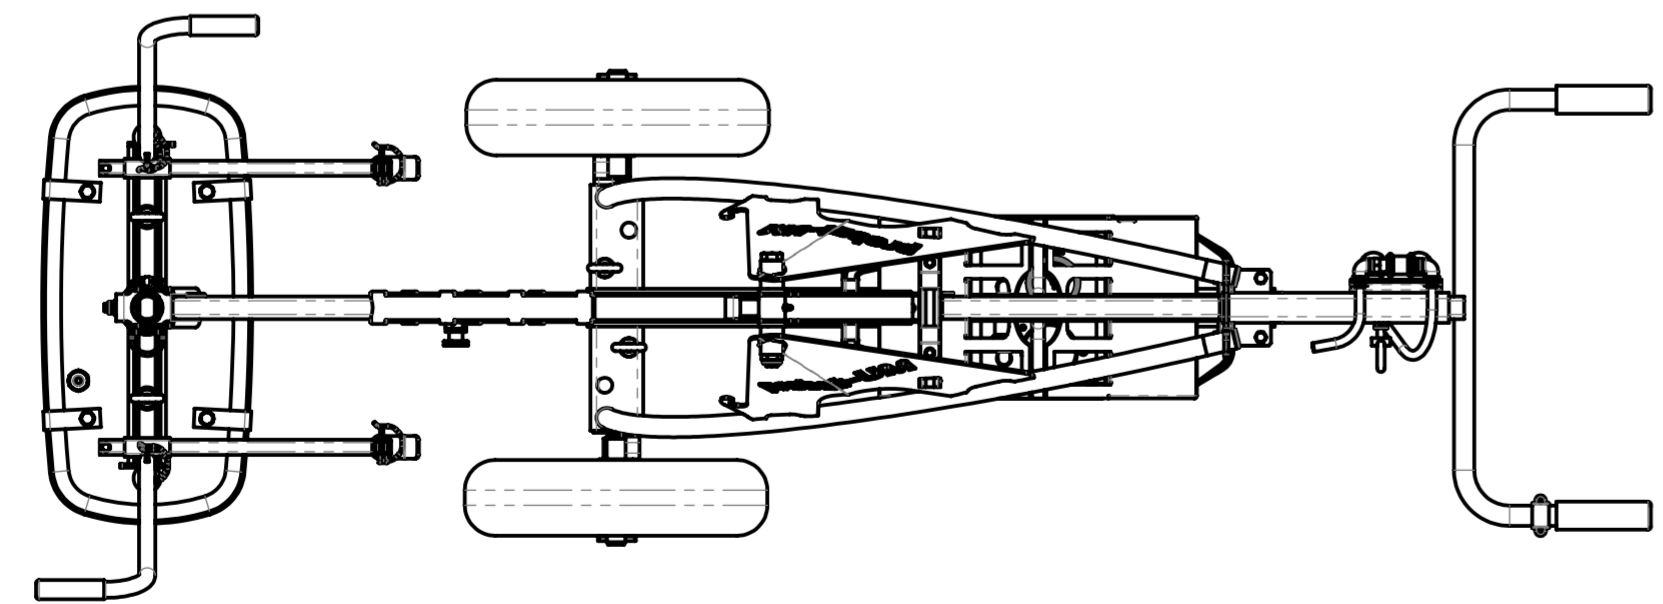

UNIMOBIL UM-SM Laying dolly - basic version

|    |                                | Bei Änderungen Rücksprache TB ! |      |                 |             |                 |             |  |  |
|---|--------------------------------|---------------------------------|------|-----------------|-------------|-----------------|-------------|--|--|
|   |                                | Gewicht: 99 kg                  |      |                 |             |                 |             |  |  |
| Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung!   |                                | Benennung                       |      |                 |             |                 |             |  |  |
| <table border="1"> <tr> <th>Datum</th> <th>Name</th> </tr> <tr> <td>Erst. 27.5.2013</td> <td>Ralf.Northe</td> </tr> <tr> <td>Gepr. 27.5.2013</td> <td>Ralf.Northe</td> </tr> </table> |                                | Datum                           | Name | Erst. 27.5.2013 | Ralf.Northe | Gepr. 27.5.2013 | Ralf.Northe | <b>Uni Mobil UM-SM</b><br><b>Verlegewagen - Basisgerät</b> |  |
| Datum   | Name                           |                                 |      |                 |             |                 |             |  |  |
| Erst. 27.5.2013   | Ralf.Northe                    |                                 |      |                 |             |                 |             |  |  |
| Gepr. 27.5.2013   | Ralf.Northe                    |                                 |      |                 |             |                 |             |  |  |
| WA:   | Artikelnummer/Zeichnungsnummer | Blatt                           |      |                 |             |                 |             |  |  |
| Kunde:  | D42740011                      | 1                               |      |                 |             |                 |             |  |  |
| Zust. Urspr.  | Ers. f.                        | von 1                           |      |                 |             |                 |             |  |  |
|   | Ers. d.                        |                                 |      |                 |             |                 |             |  |  |

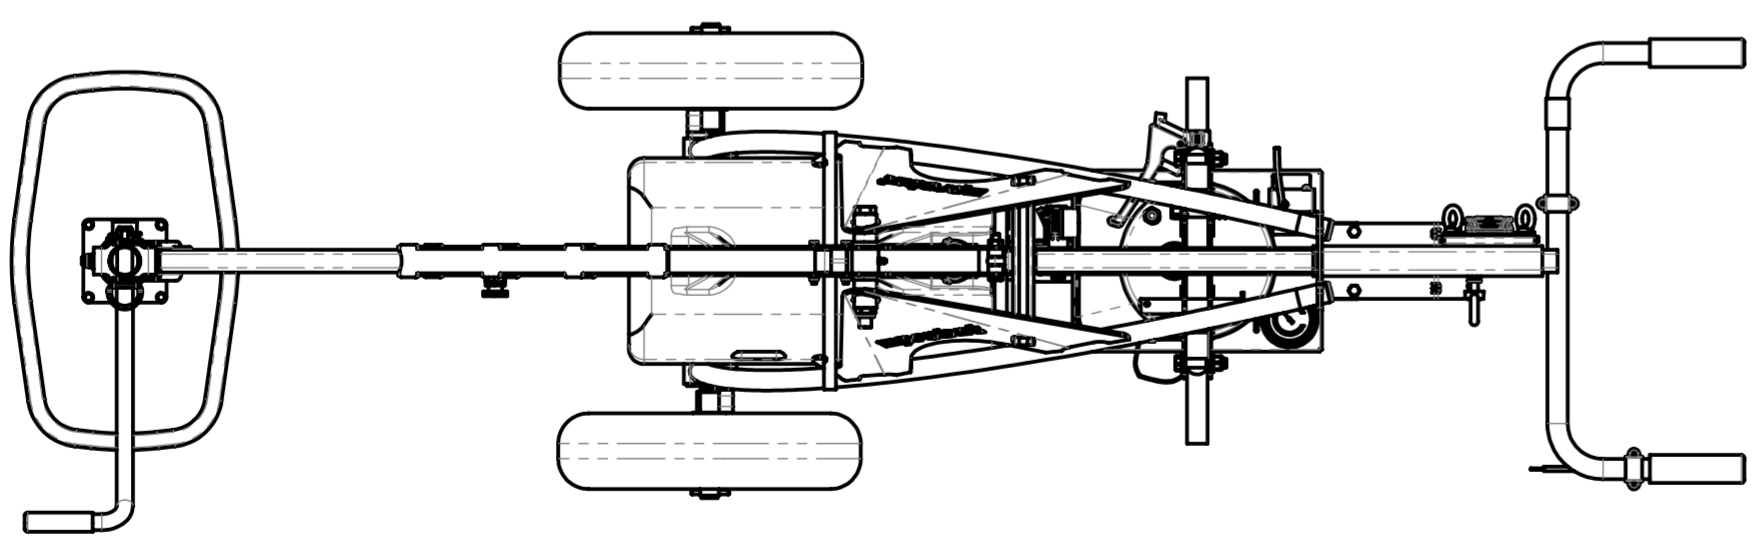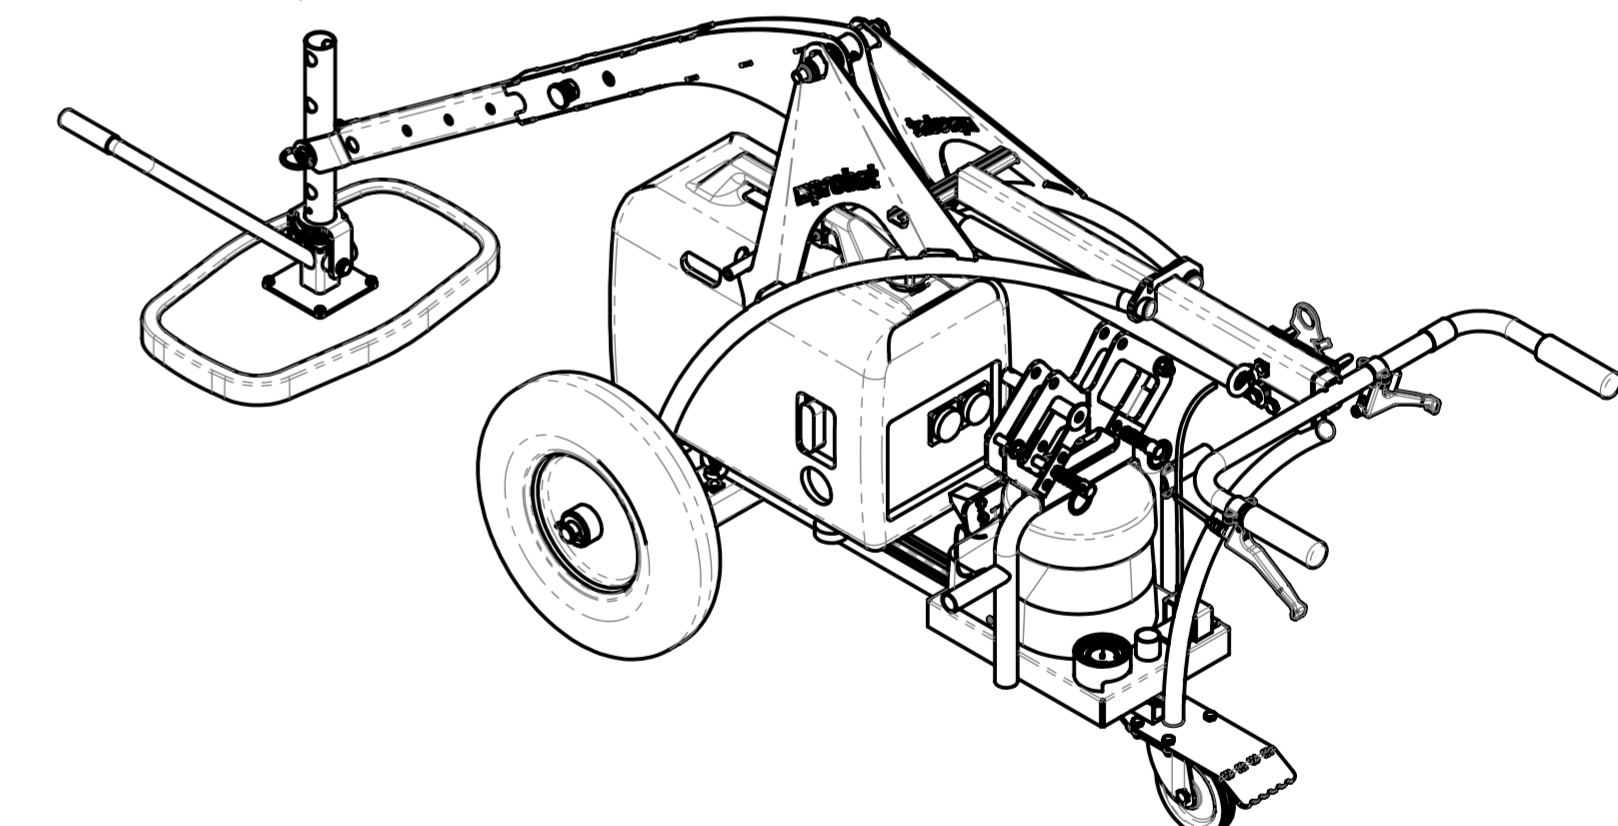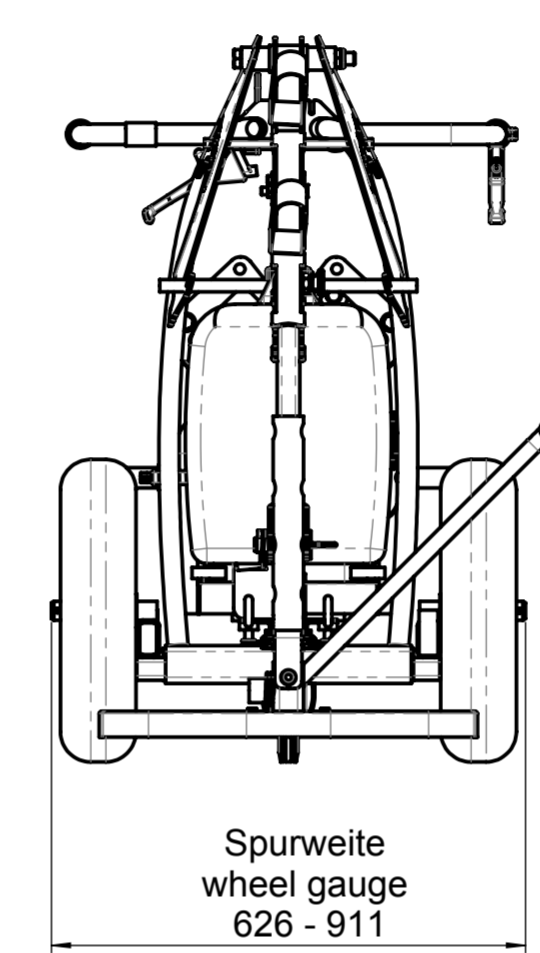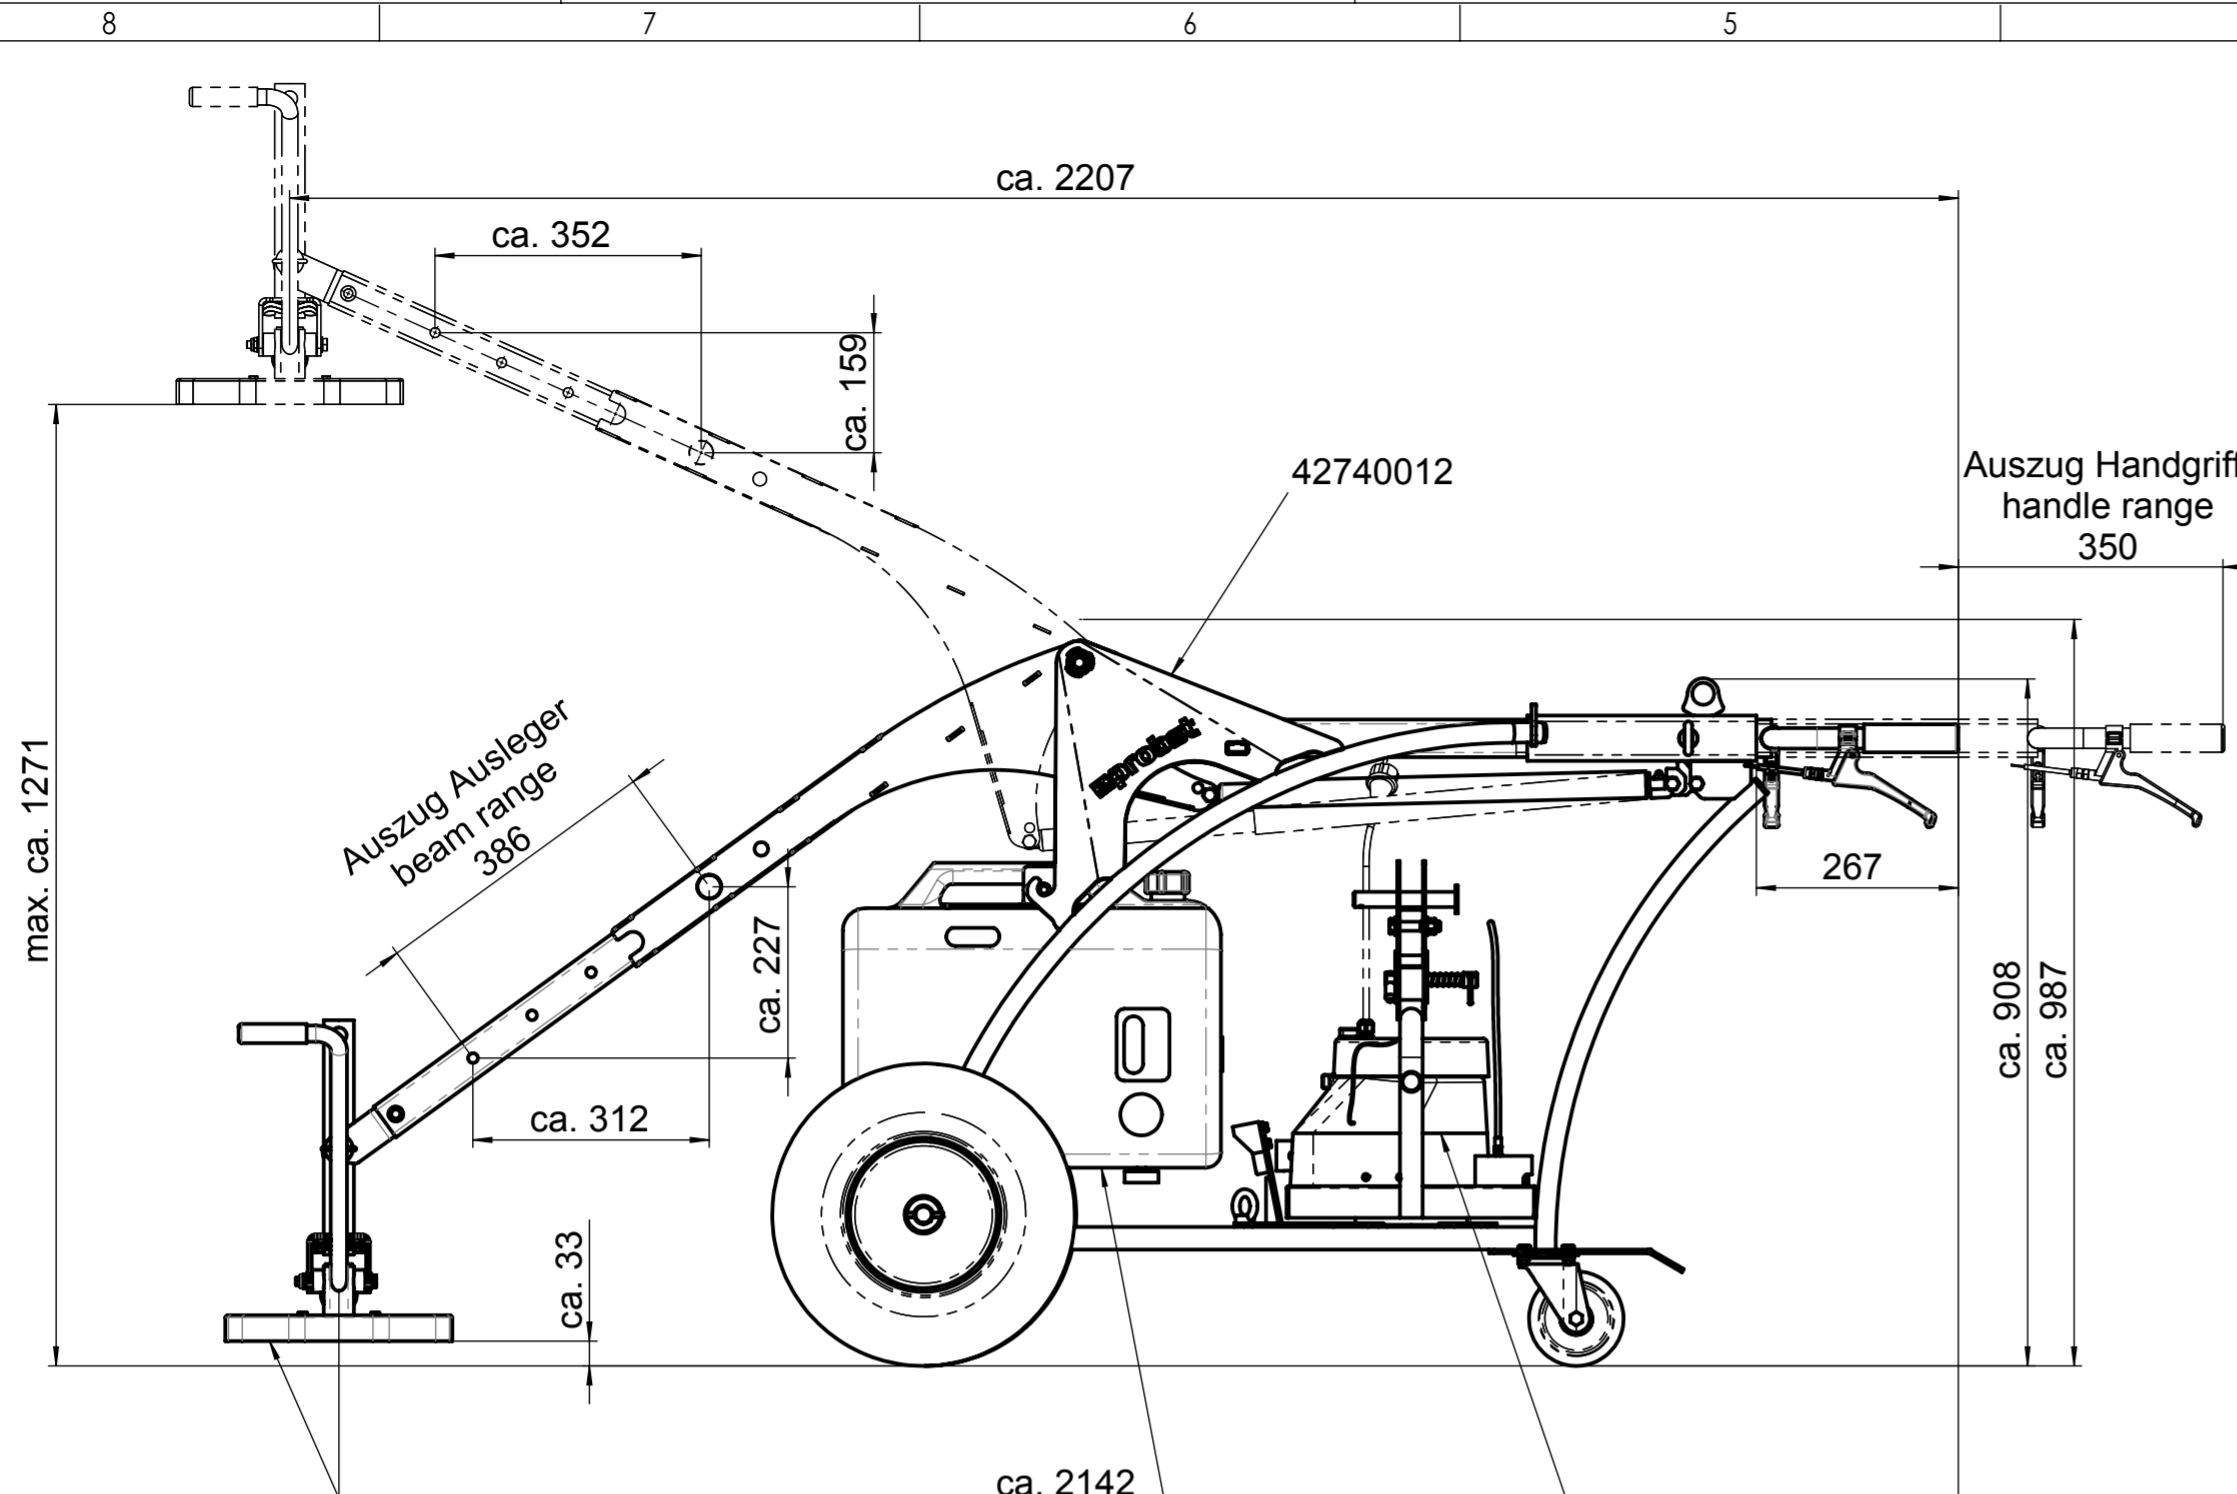

Option Saugplatte /  
option suction plate

Option Stromerzeuger /  
option generator


Option SPEEDY VS-140 /  
option SPEEDY VS-140

Tragfähigkeit: 150 [kg]  
Carrying Capacity: 150 [kg] / (330 [lbs.])

UNIMOBIL UM-VS-S/SE Laying dolly - basic version

Eigengewichte / Dead weights:  
UN-VS-S: 64 kg / 140 lbs  
UN-VS-S/SE-H: 84 kg / 185 lbs  
UN-VS-S/SE-K: 82,5 kg / 182 lbs

|  |  |   |  |
|--|--|---|--|
| <br>the better solution |  | Bei Änderungen Rücksprache TB !   |  |
|  |  | Gewicht:  |  |
| Erst. 27.5.2013<br>Gepr.   |  | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |  |
| Datum 27.5.2013<br>Name Ralf Northe  |  | Benennung<br><b>UNIMOBIL UM-VS-140 / SE</b><br>Verlegewagen - Basisgerät      |  |
| WA:<br>Kunde:  |  | Artikelnummer/Zeichnungsnummer<br><b>D42740012</b>                            |  |
| 1<br>Zust. Urspr.  |  | Blatt<br>1<br>von 1   |  |
| Ers. f.  |  | Ers. d.   |  |

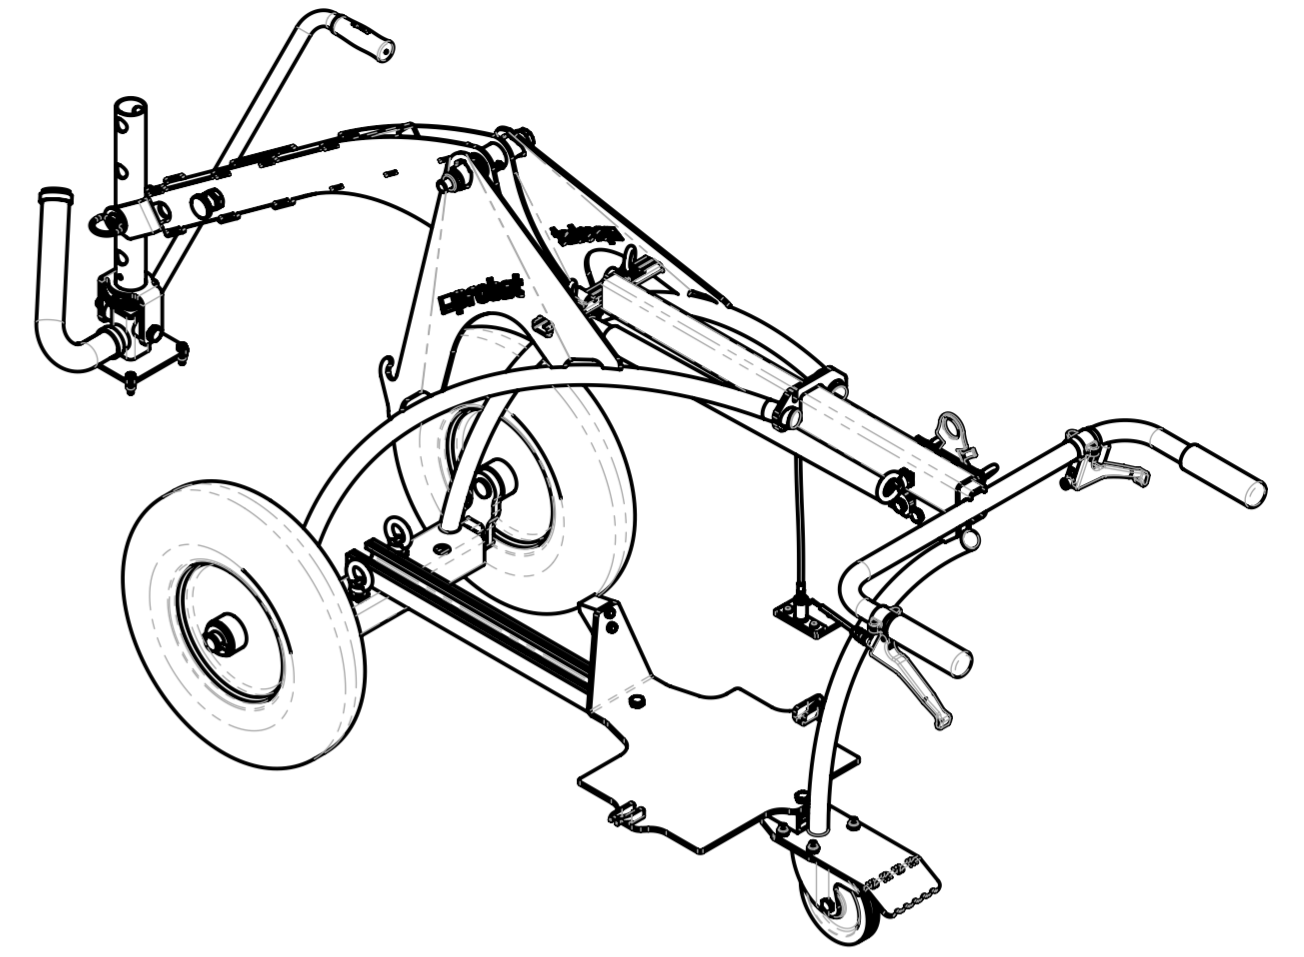

42720225  
siehe separate Liste  
see separate list

42720226  
siehe separate Liste  
see separate list

42720235  
siehe separate Liste  
see separate list

42720373  
siehe separate Liste  
see separate list



21060014

42720400  
siehe separate Liste  
see separate list



© all rights reserved conform to ISO 16016

|       |           | Datum    | Name    | Benennung                                |
|-------|-----------|----------|---------|--|
| Erst. | 17.4.2019 | R.Seidel |         | Verlegewagen Uni Mobil UM Grundmodul     |
| Gepr. | 24.7.2019 | R.Seidel |         | ohne Unterdruckerzeuger, ohne Saugplatte |
|       |           |          |         | Artikelnummer/Zeichnungsnummer           |
|       |           |          |         | E42740017                                |
| Zust. | Urspr.    | Ers. f.  | Ers. d. | Blatt<br>1<br>von 1                      |

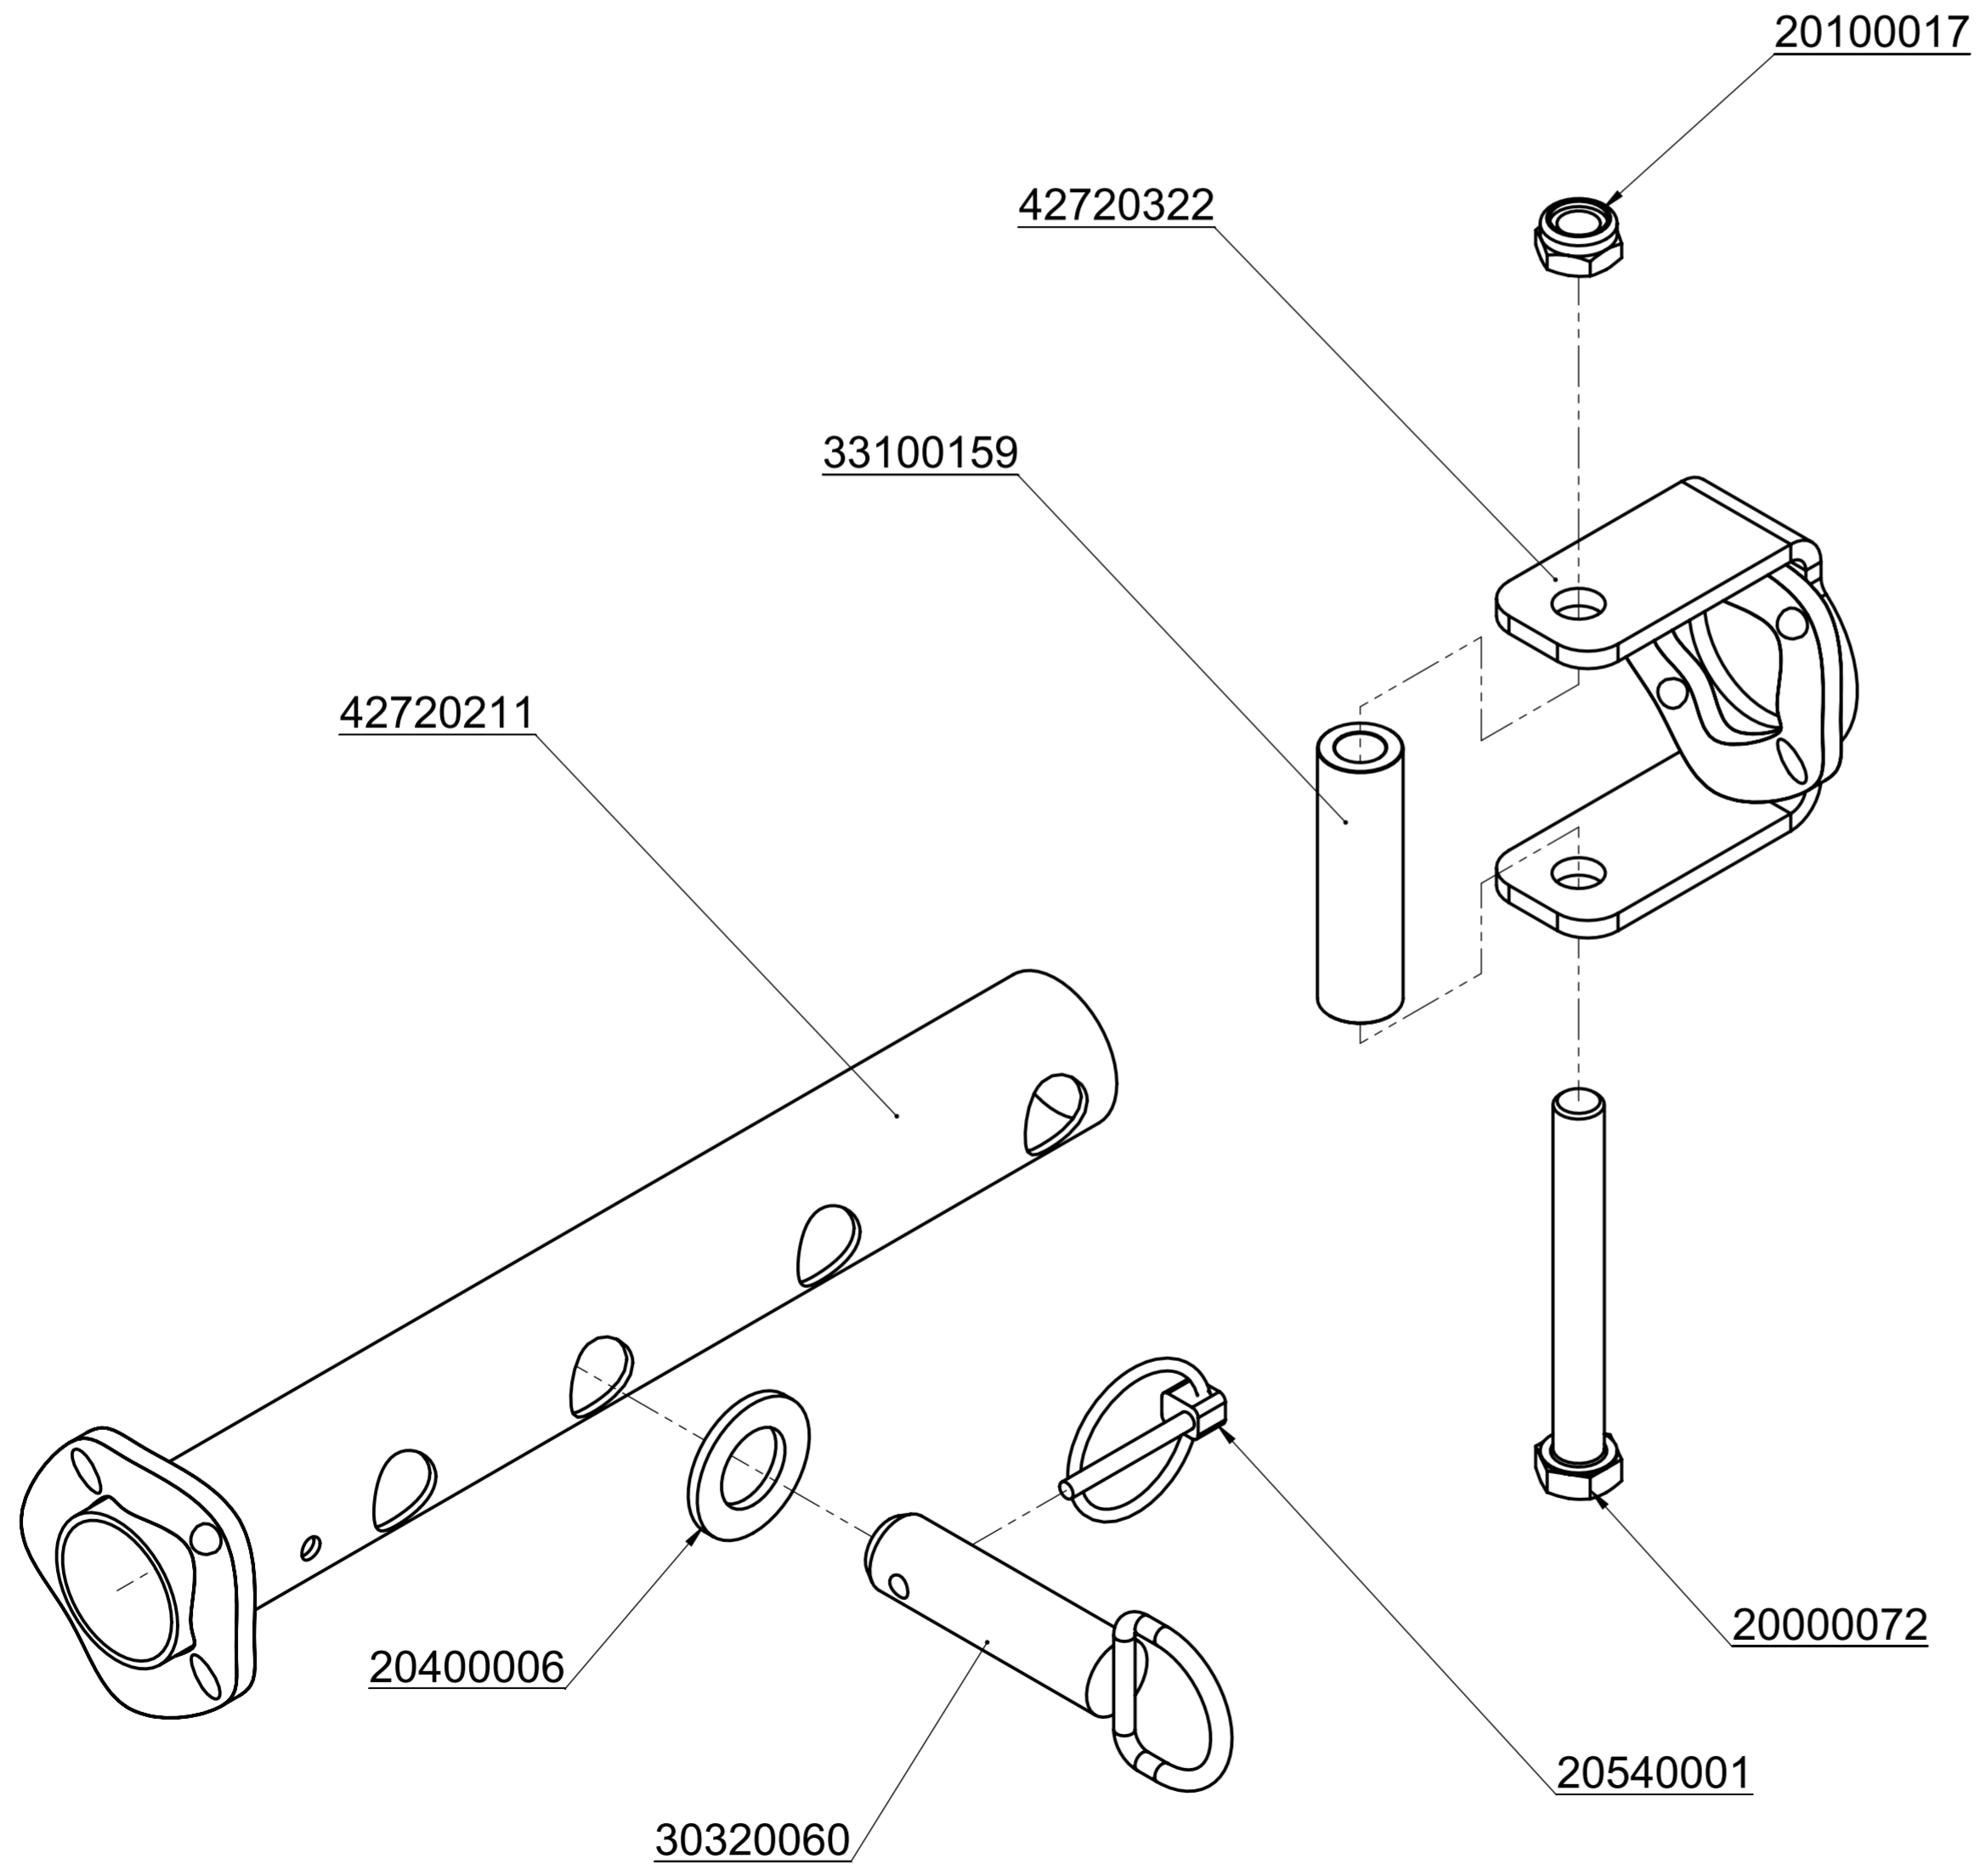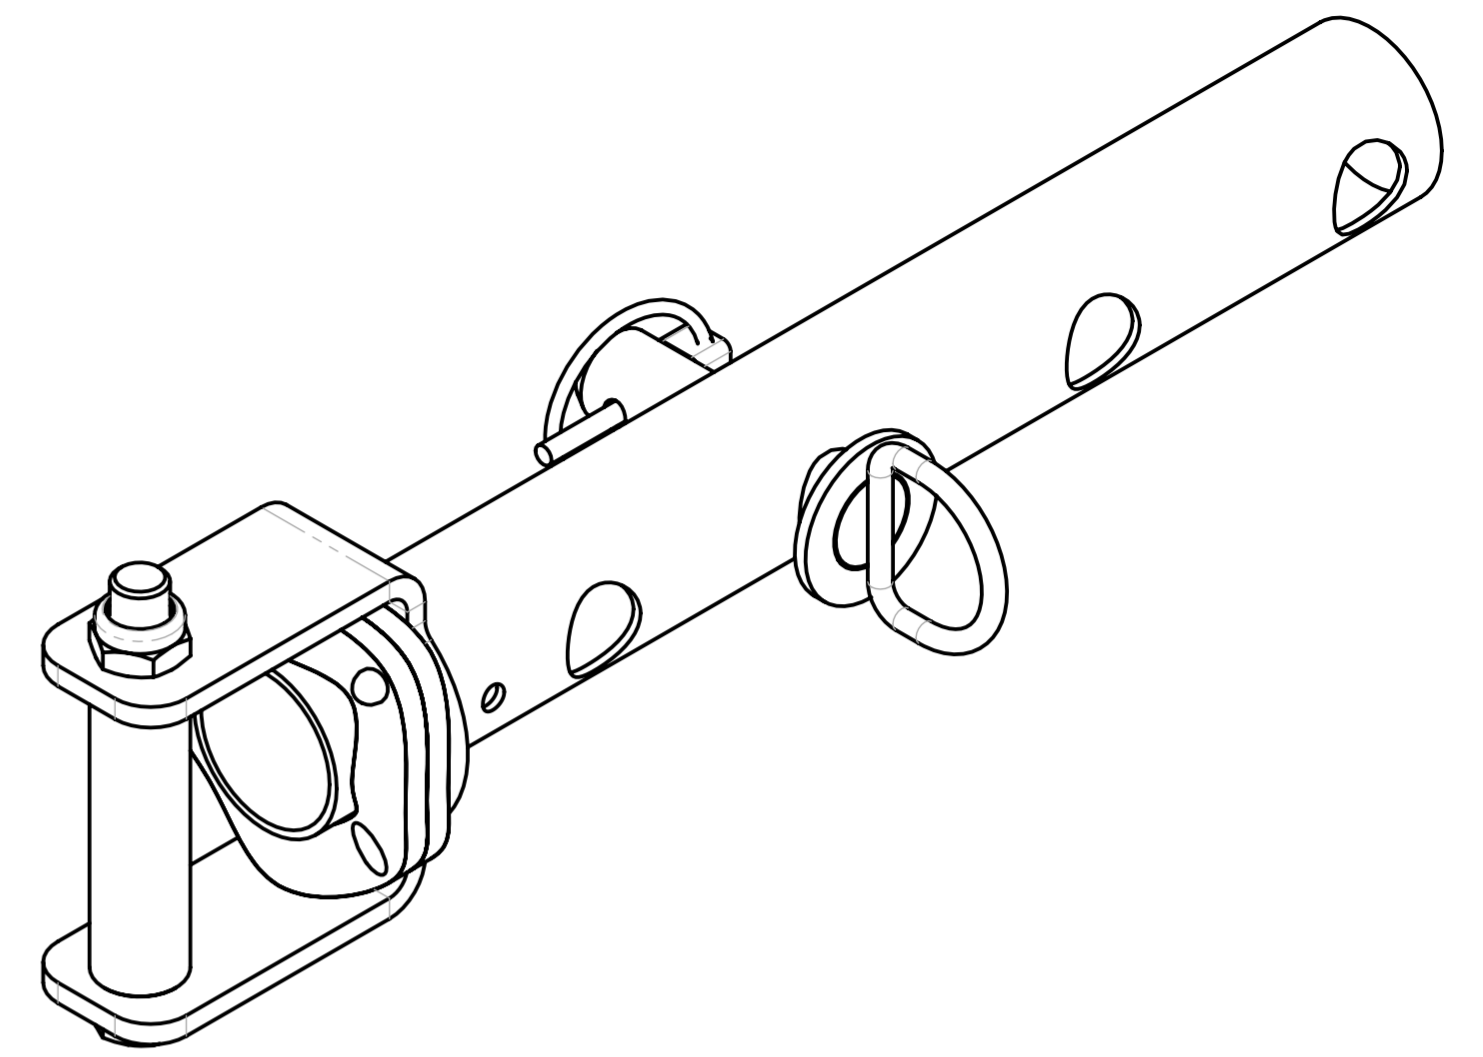

|  |  |  |  |  |
|--|--|--|--|--|
|  |  |  | © all rights reserved conform to ISO 16016 |  |
| Benennung<br>Drehaufhängung SM+Speedy VS zu UM                                       |  |  | Blatt<br>1<br>von 1                        |  |
| Artikelnummer/Zeichnungsnummer<br>E42720225  |  |  | Ers. f.      Ers. d.                       |  |
| Datum      Name<br>Erst. 14.9.2012      Ralf.Northe<br>Gepr. 31.5.2016      R.Northe |  |  | Zust.      Urspr.                          |  |

21060014

21060014

21060014

21050192

25200028

20000003

20400001


21050192

20100014

42720220

42720220

21600005

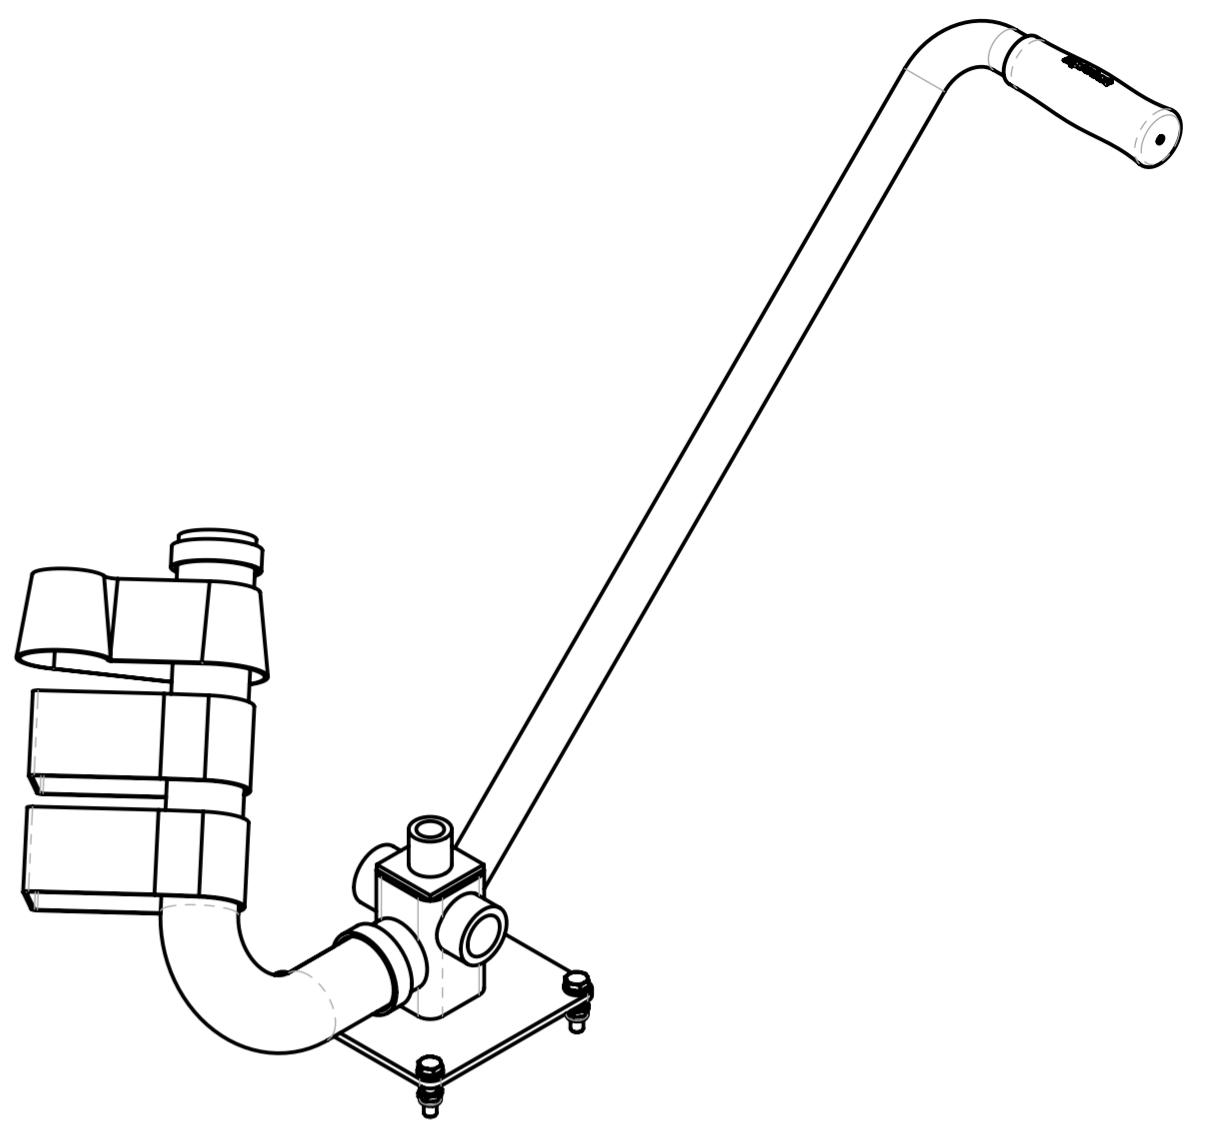

© all rights reserved conform to ISO 16016

|       | Datum     | Name        |
|-------|-----------|-------------|
| Erst. | 14.9.2012 | Ralf.Northe |
| Gepr. | 24.7.2019 | R.Seidel    |

Benennung  
Adapter Saugplatte Speedy VS zu UM


|   |
|---|
| 5 |
| 4 |
| 3 |
| 2 |
| 1 |

Artikelnummer/Zeichnungsnummer  
E42720226

Blatt  
1  
von 1


Zust. Urspr.

Ers. f. Ers. d.

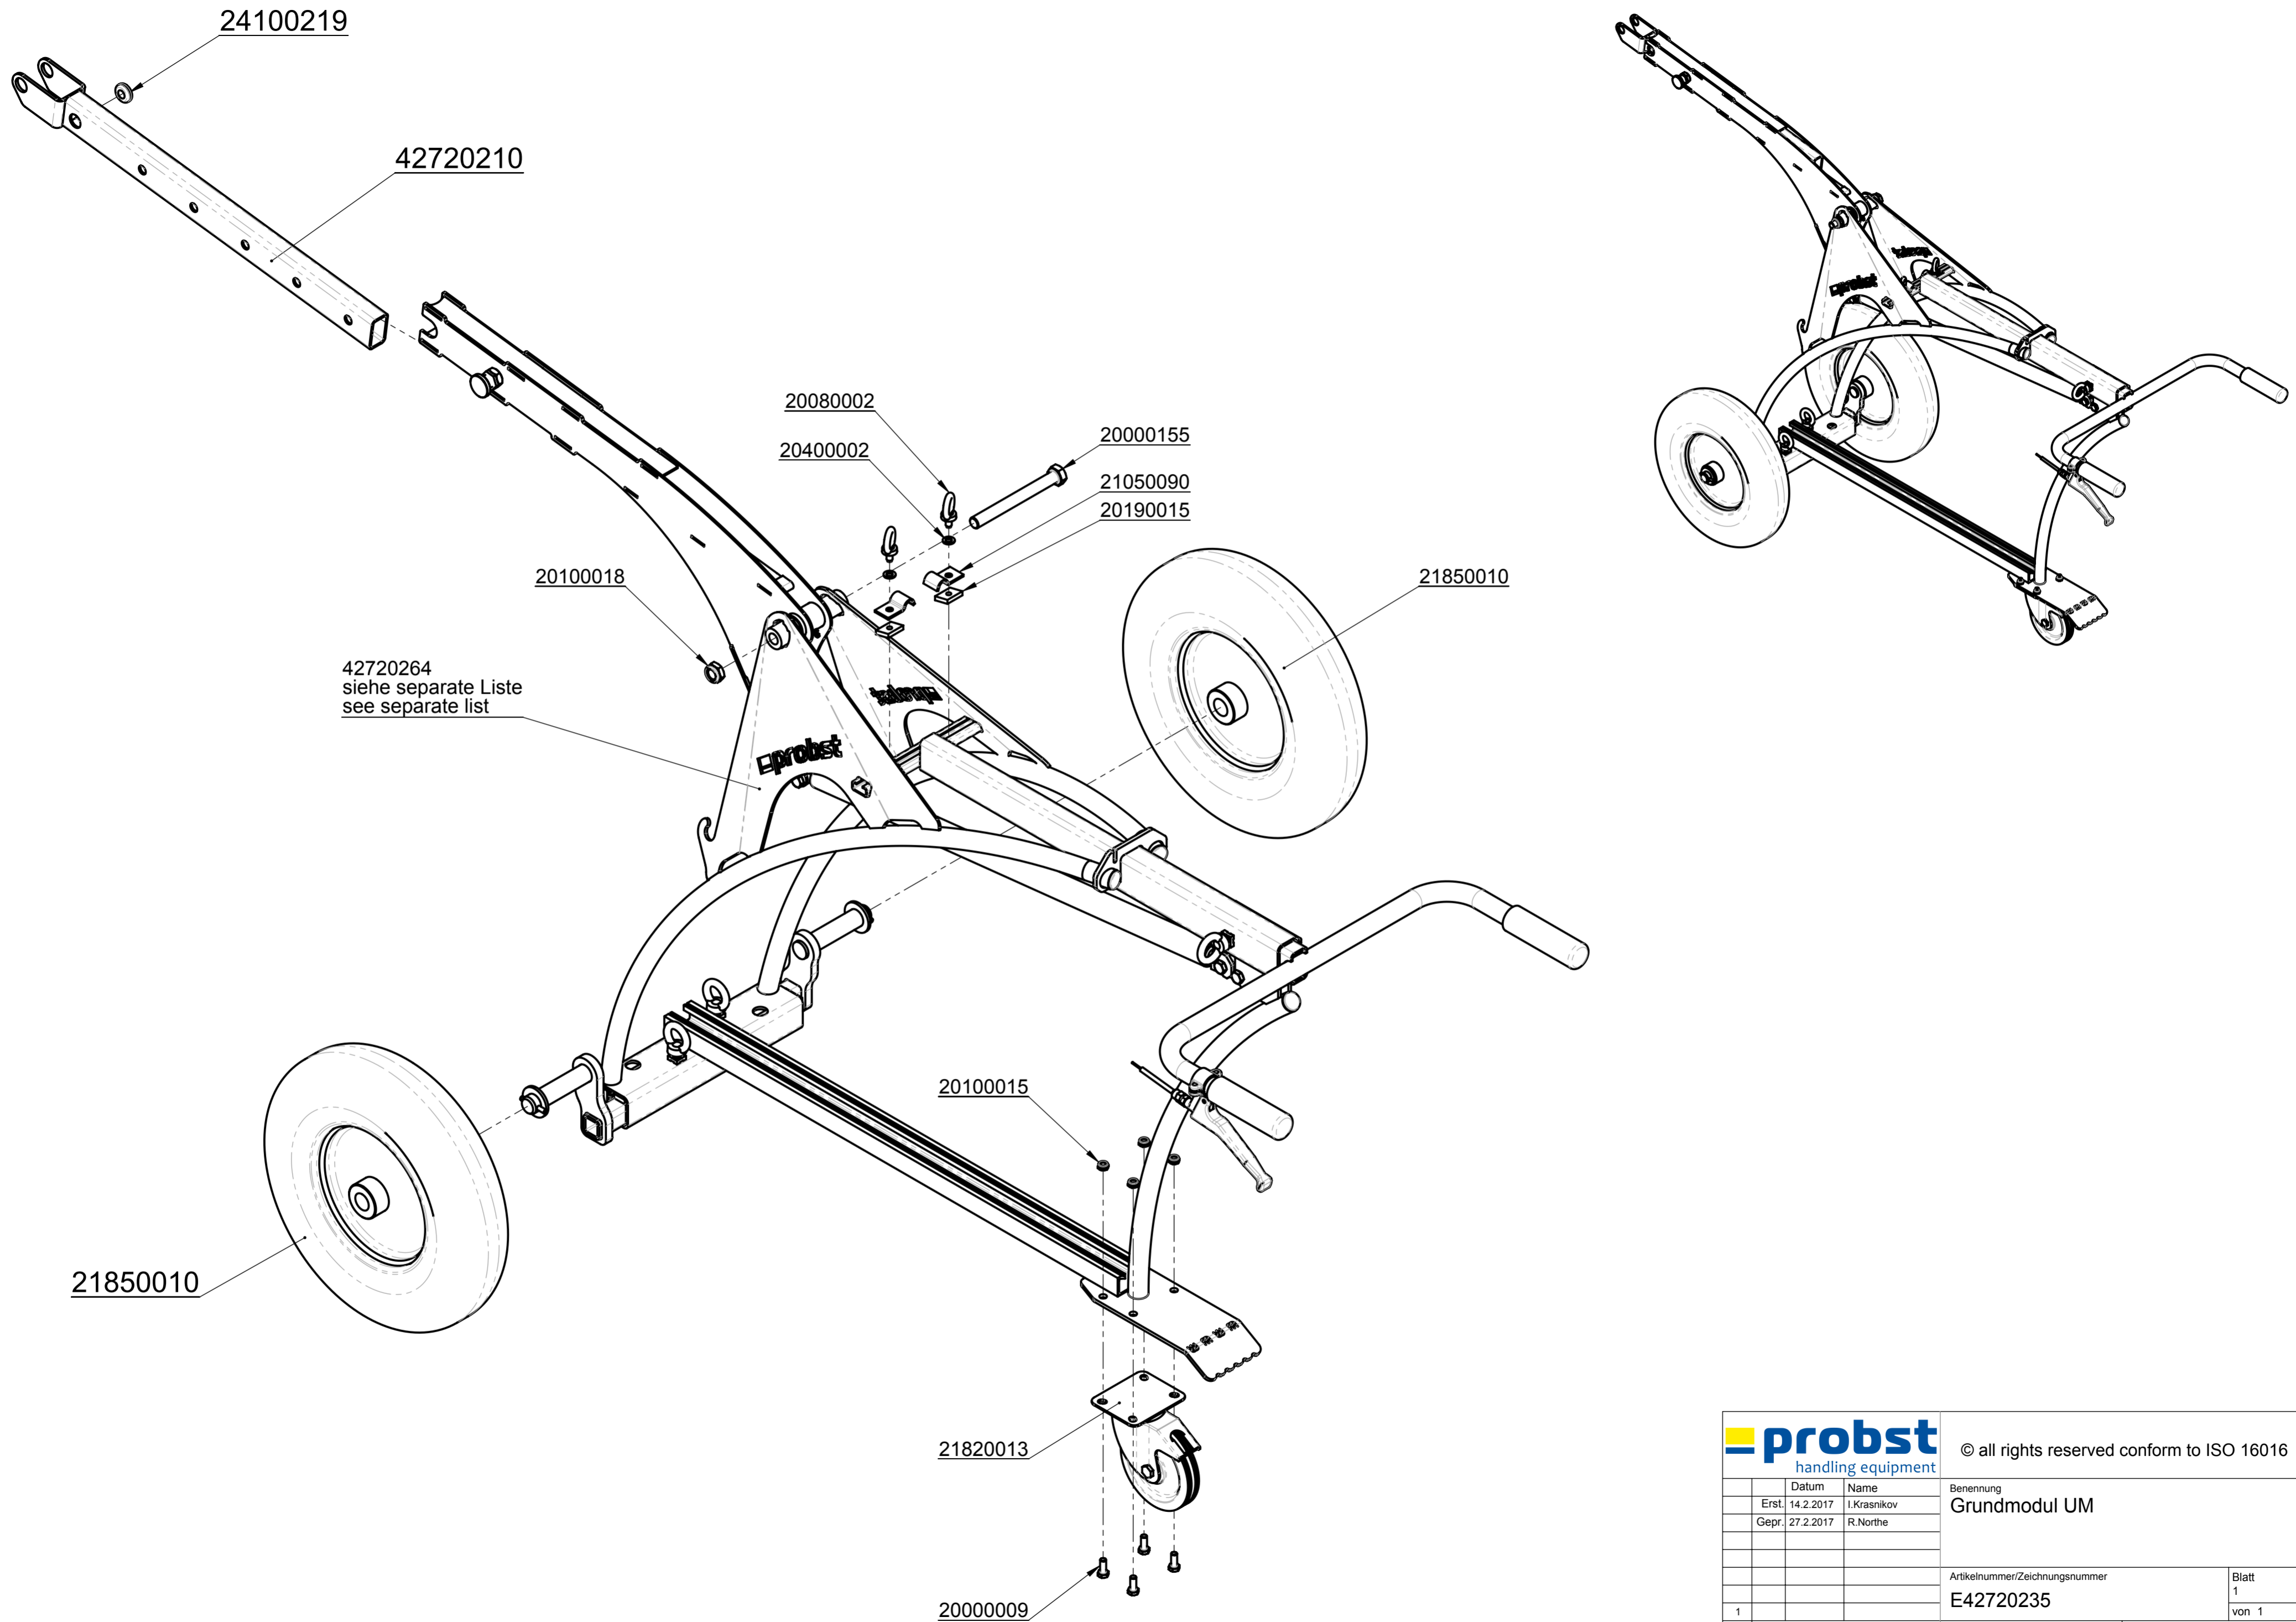

42720264  
siehe separate Liste  
see separate list

|       |        |  |         |
|-------|--------|--|---------|
|       |        | © all rights reserved conform to ISO 16016 |         |
|       |        | Benennung                                  |         |
|       |        | Grundmodul UM                              |         |
|       |        | Artikelnummer/Zeichnungsnummer             |         |
|       |        | E42720235                                  |         |
|       |        | Blatt                                      |         |
|       |        | 1  |         |
|       |        | von 1                                      |         |
| Zust. | Urspr. | Ers. f.                                    | Ers. d. |

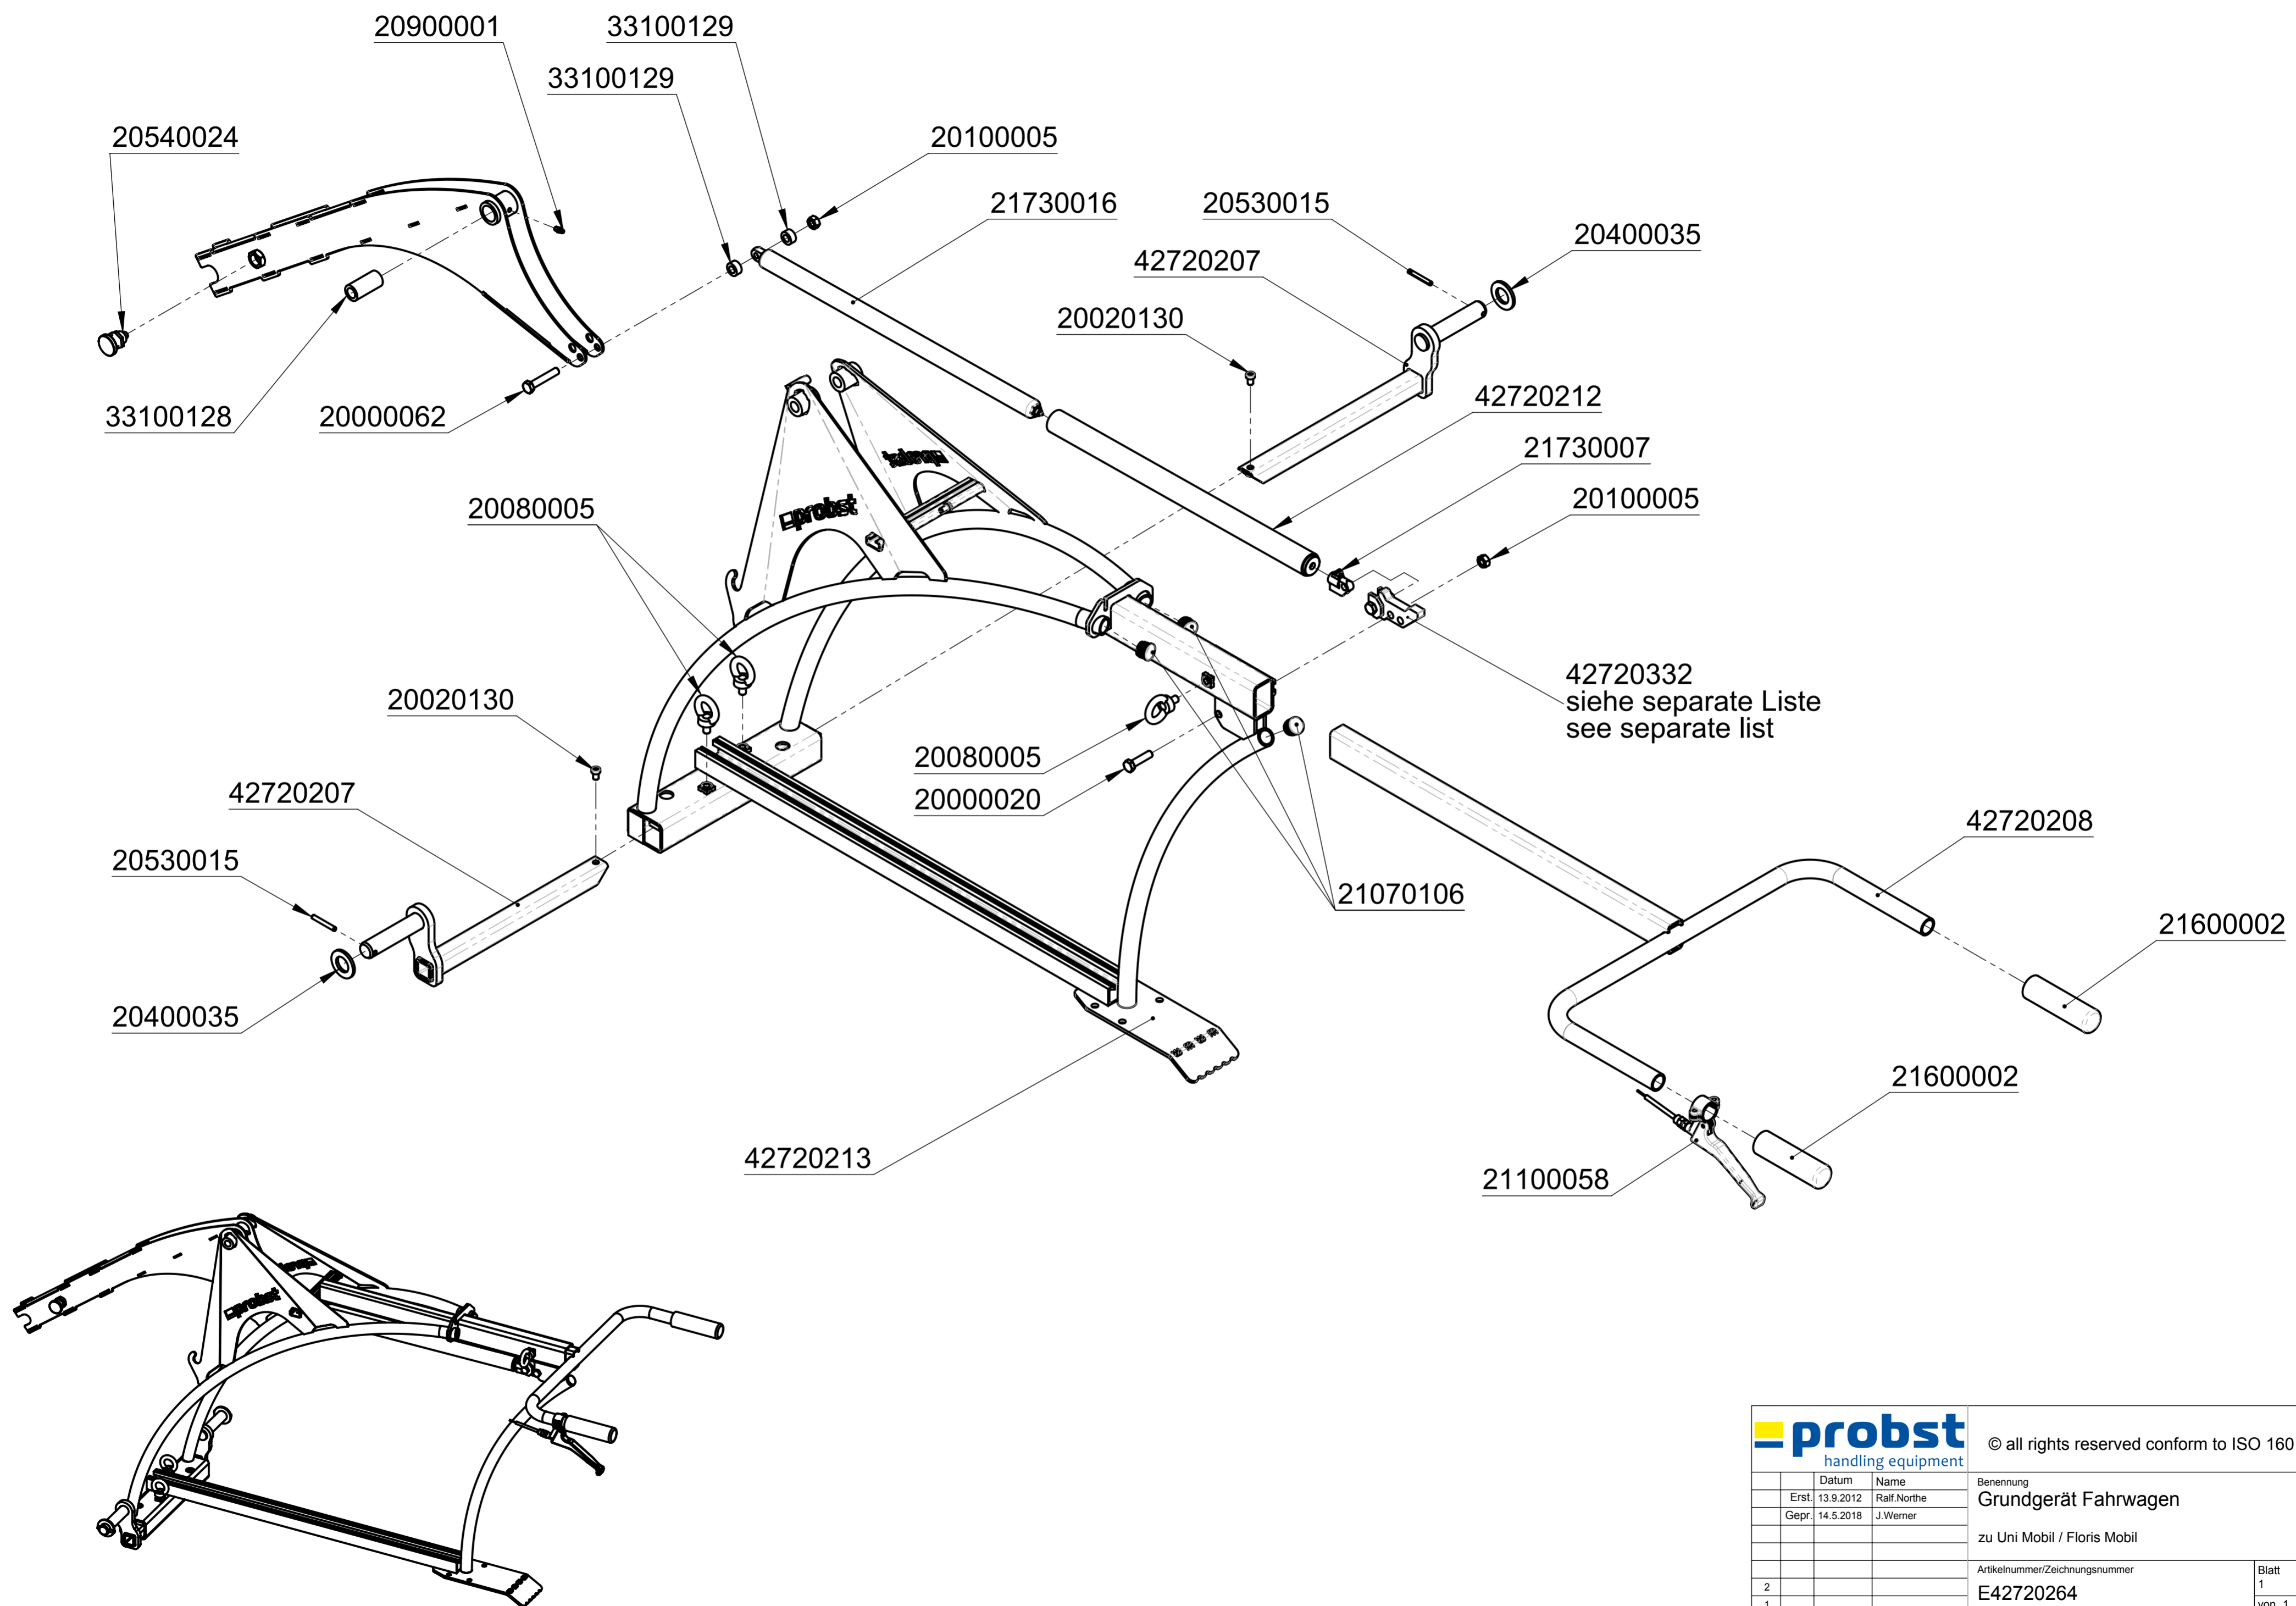

42720332  
siehe separate Liste  
see separate list

|       |                 |  |                                |
|-------|-----------------|--|--------------------------------|
|       |                 | © all rights reserved conform to ISO 16016 |                                |
|       | Datum           | Name                                       | Benennung                      |
|       | Erst. 13.9.2012 | Ralf Northe                                | Grundgerät Fahrwagen           |
|       | Gepr. 14.5.2018 | J.Werner                                   | zu Uni Mobil / Floris Mobil    |
|       |                 |  | Artikelnummer/Zeichnungsnummer |
|       |                 |  | E42720264                      |
|       |                 |  | Blatt 1 von 1                  |
| Zust. | Urspr.          | Ers. f.                                    | Ers. d.                        |

8 7 6 5 4 3 2 1

F

F

E

E

D

D

C

C



B

B

A





A

8 7 6 5 4 3 2 1

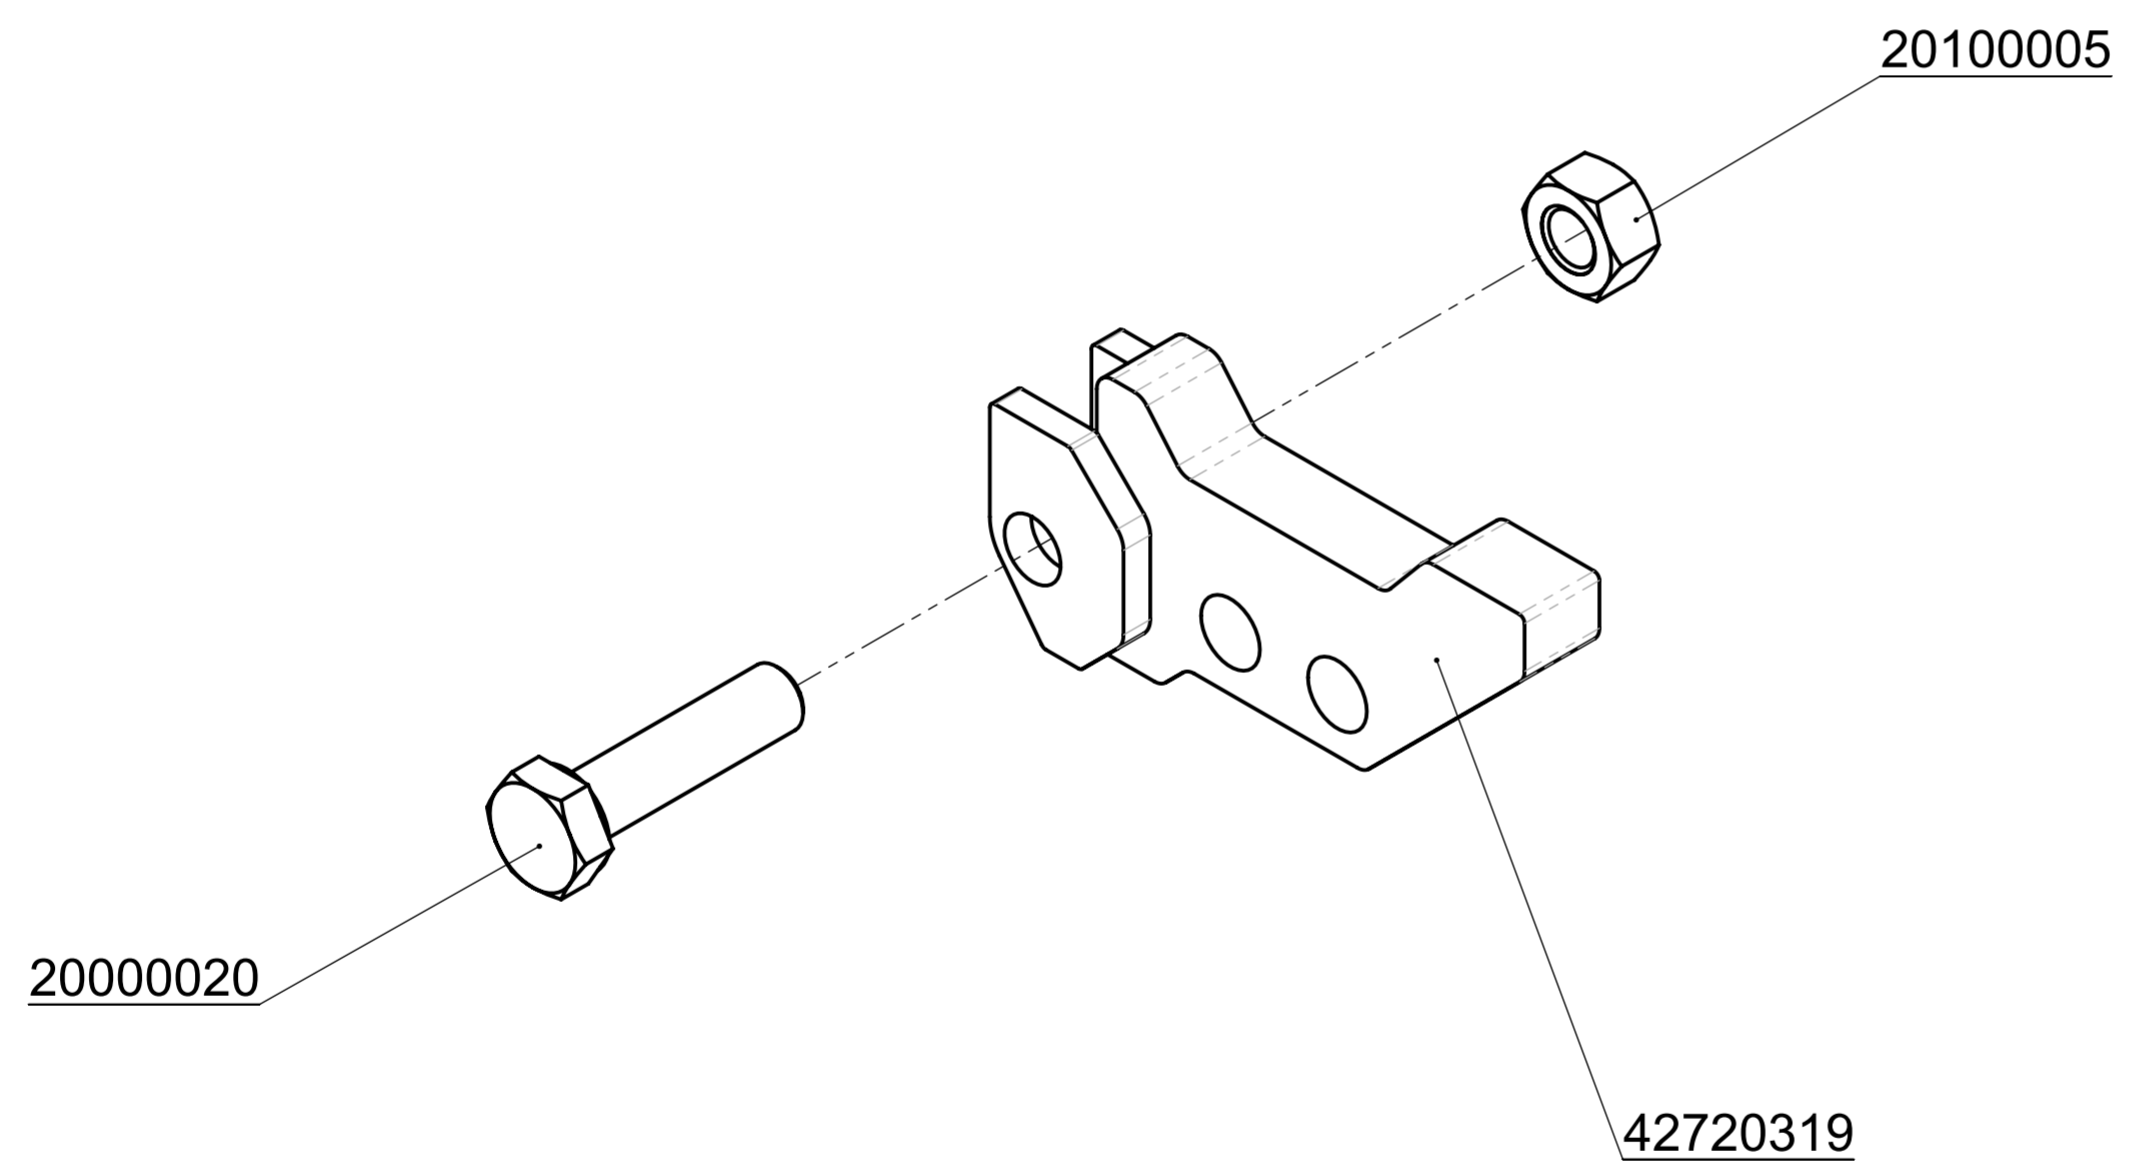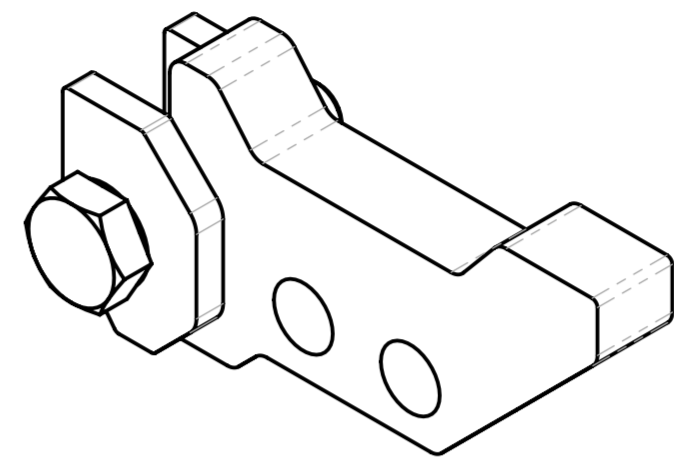

|       |                 |          |  |       |
|-------|-----------------|----------|--|-------|
|       |                 |          | © all rights reserved conform to ISO 16016 |       |
|       | Datum           | Name     | Benennung                                  |       |
|       | Erst. 24.7.2019 | R.Seidel | Hubadapter zu UM UNI MOBIL                 |       |
|       | Gepr. 24.7.2019 | R.Seidel | kpl. Baugruppe nachrüstbar                 |       |
|       |                 |          | Artikelnummer/Zeichnungsnummer             | Blatt |
|       |                 |          | E42720332                                  | 1     |
|       |                 |          |  | von 1 |
| Zust. | Urspr.          | Ers. f.  | Ers. d.                                    |       |
|       |                 |          | 1  |       |




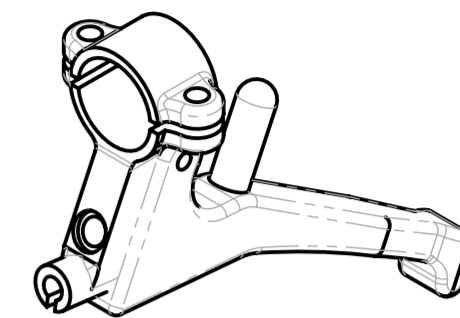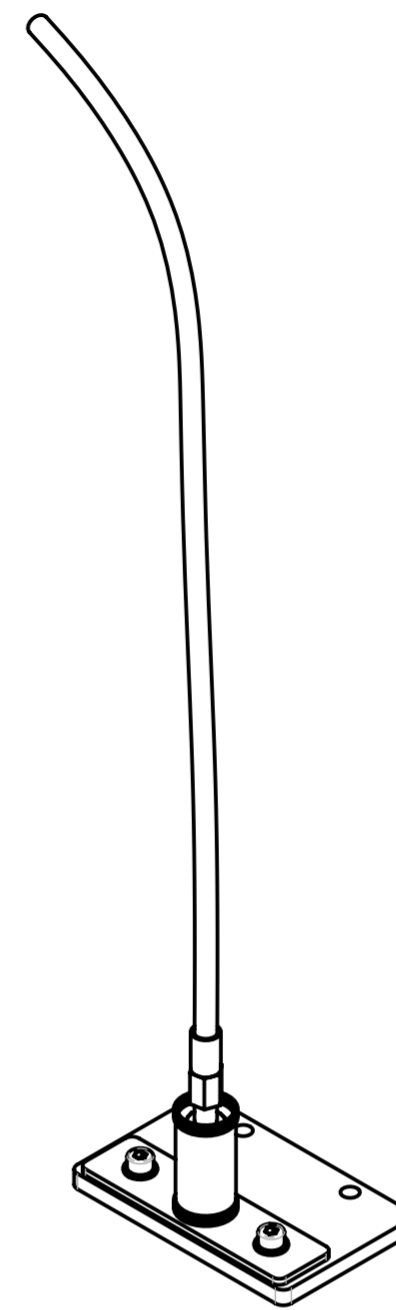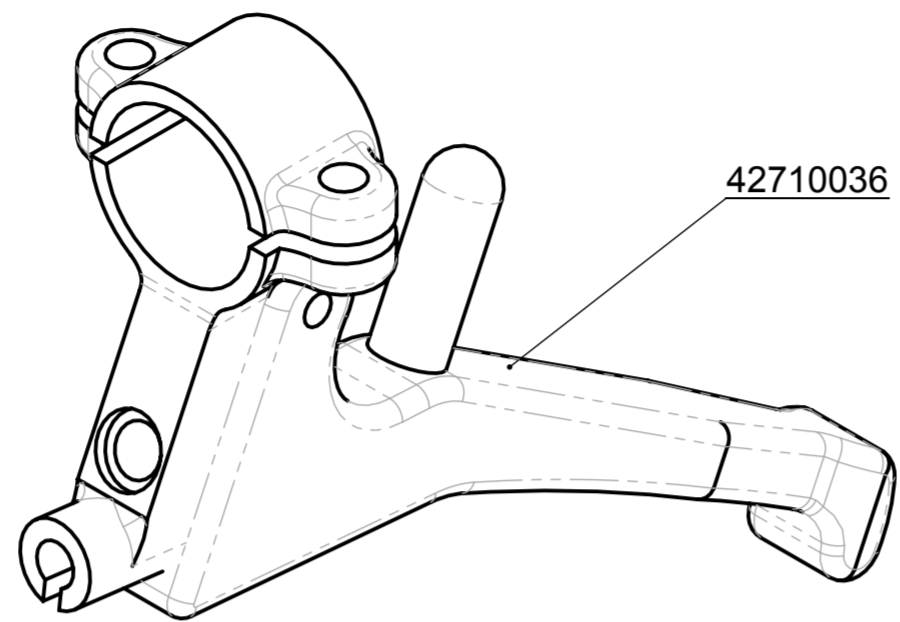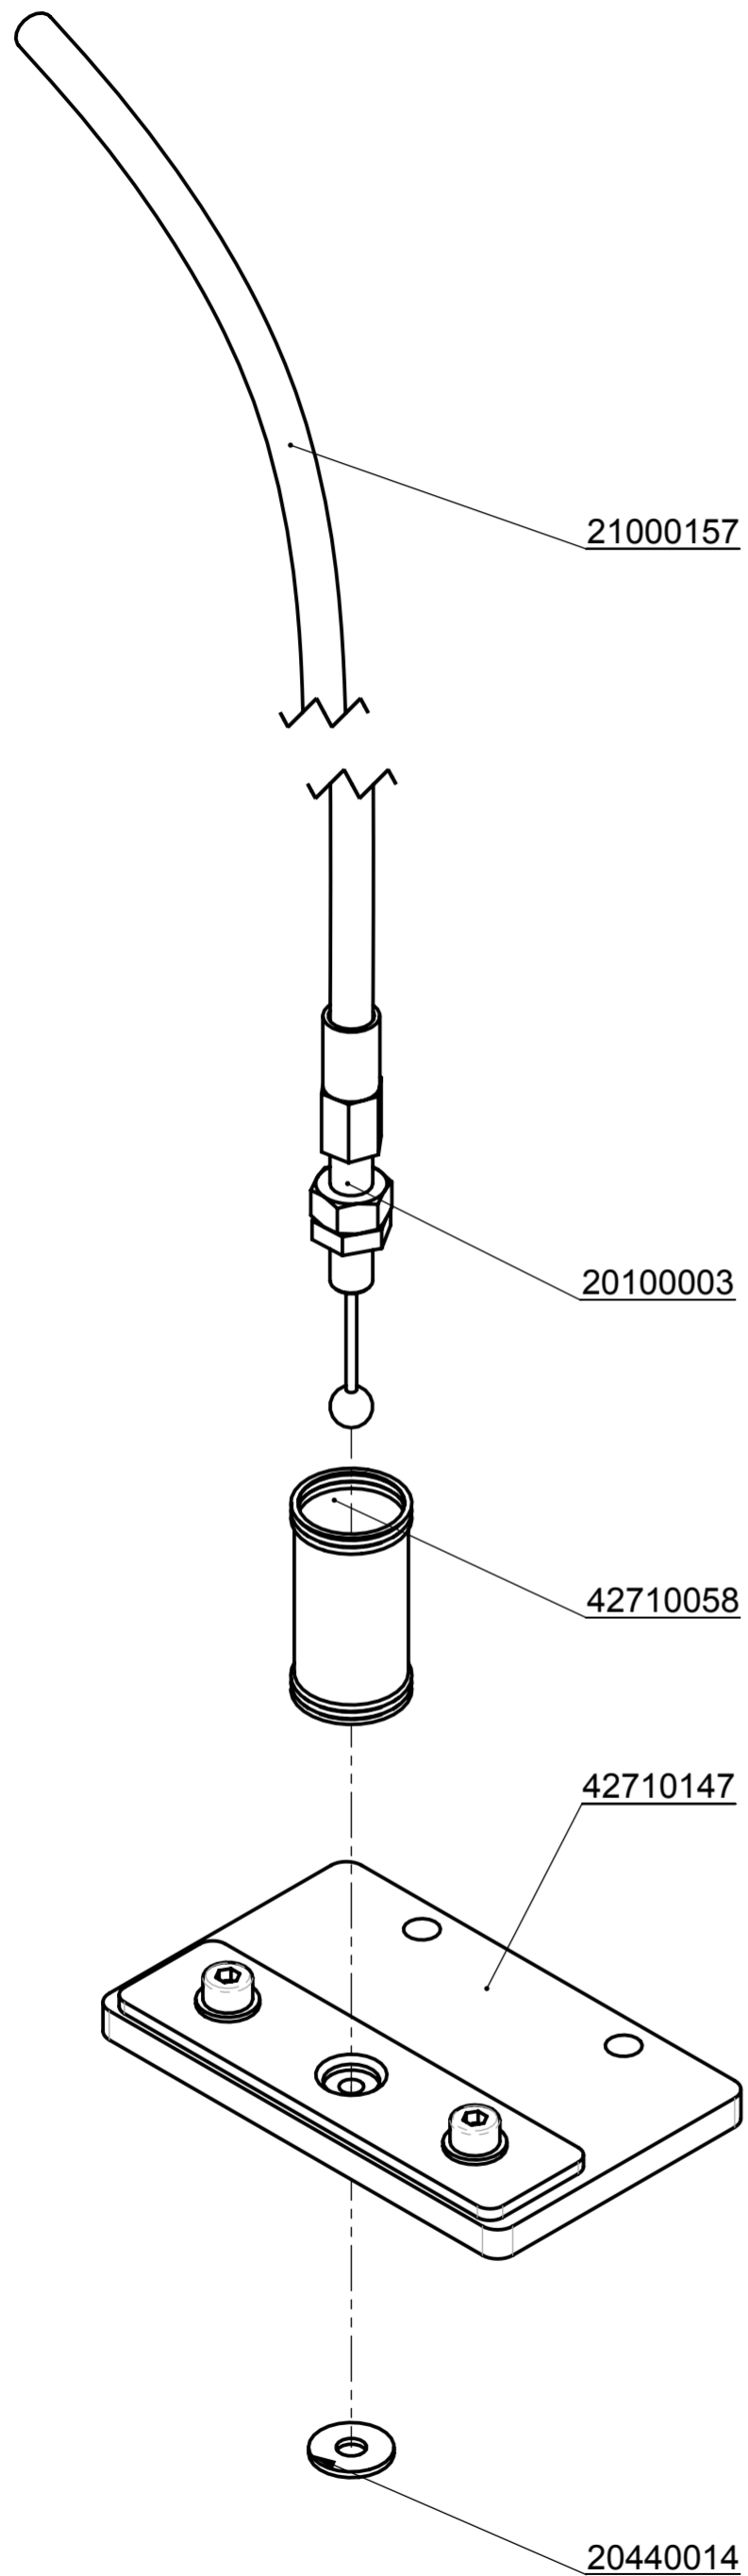


**probst**  
handling equipment

© all rights reserved conform to ISO 16016


|       |           | Datum       | Name | Benennung   |       |
|-------|-----------|-------------|------|---|-------|
| Erst. | 27.2.2017 | I.Krasnikov |      | Bowdenzug 1,5m kpl. mit<br>Handgriff zur Nachrüstung<br>an UNIMOBIL-UM-VS-140/200 |       |
| Gepr. | 27.2.2017 | I.Krasnikov |      |   |       |
|       |           |             |      | Artikelnummer/Zeichnungsnummer  | Blatt |
|       |           |             |      | E42720373   | 1     |
|       |           |             |      |   | von 1 |
| Zust. | Urspr.    | Ers. f.     |      | Ers. d.   |       |

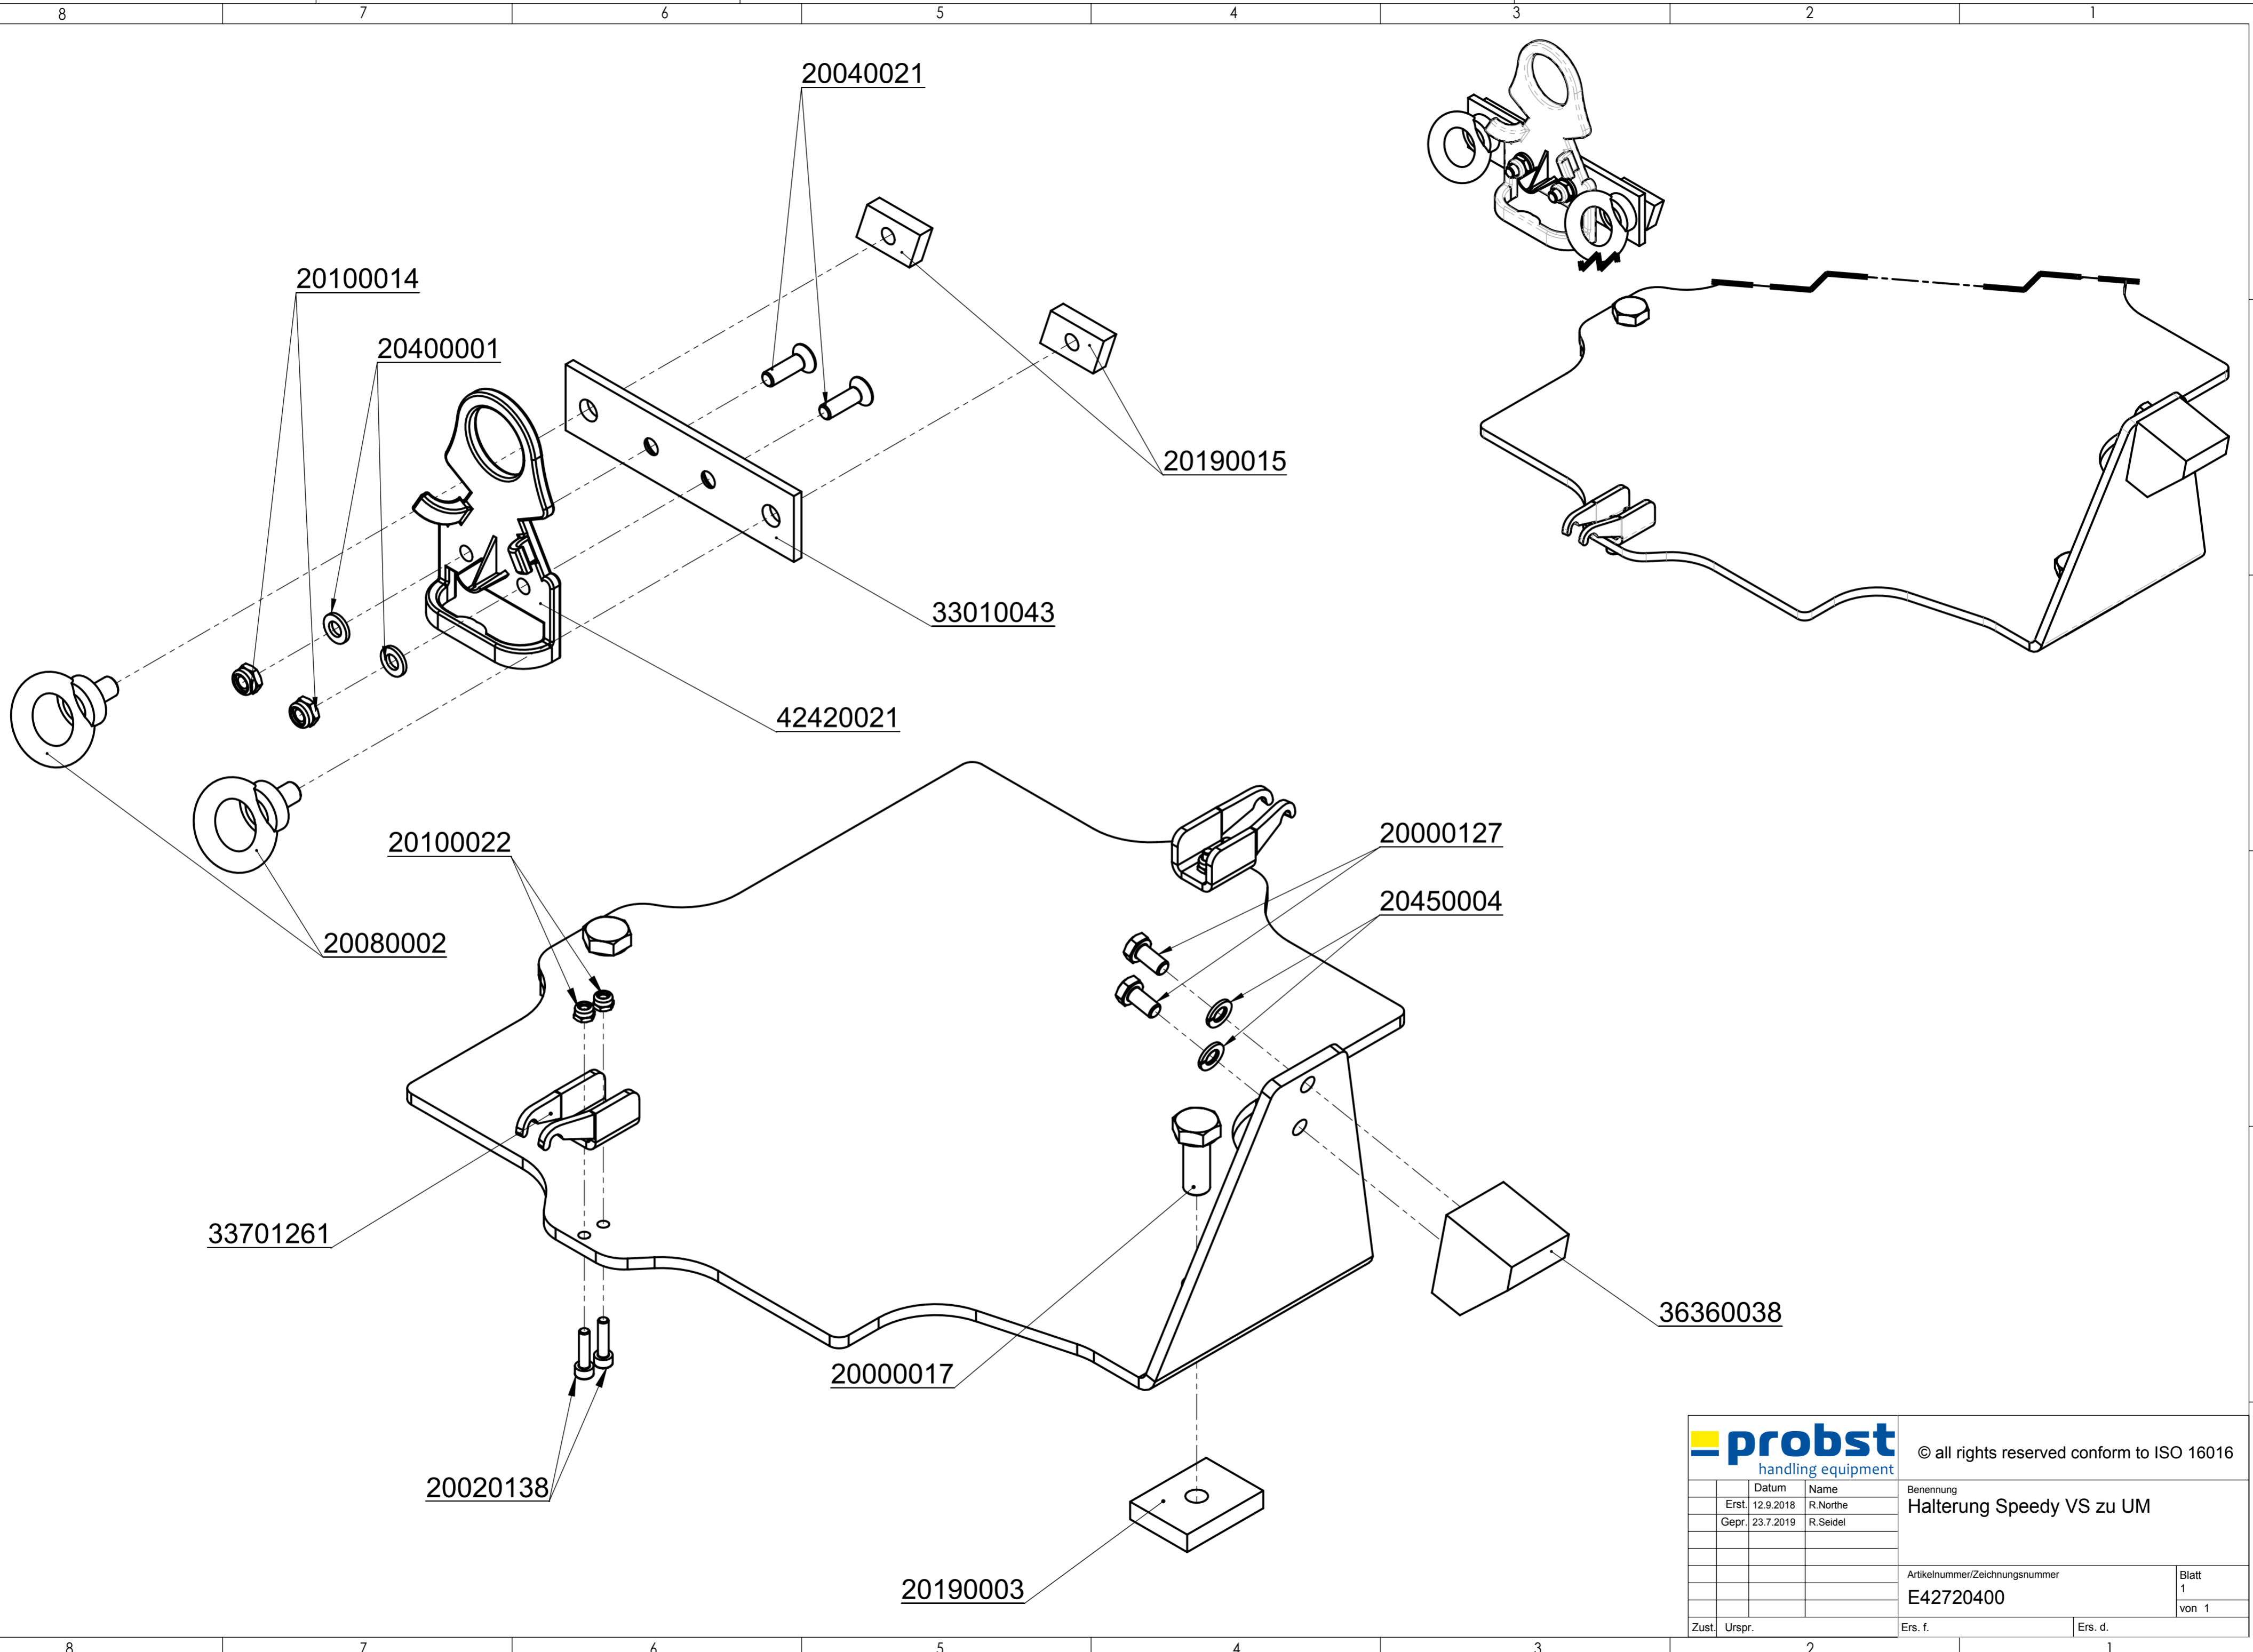

|                                |  |  |       |
|--------------------------------|--|--|-------|
|                                |  | © all rights reserved conform to ISO 16016 |       |
|                                |  | Benennung                                  |       |
| Erst. 12.9.2018                |  | R.Northe                                   |       |
| Gepr. 23.7.2019                |  | R.Seidel                                   |       |
| Zust.                          |  | Ers. f.                                    |       |
| Urspr.                         |  | Ers. d.                                    |       |
| Artikelnummer/Zeichnungsnummer |  |  | Blatt |
| E42720400                      |  |  | 1     |
|                                |  |  | von 1 |

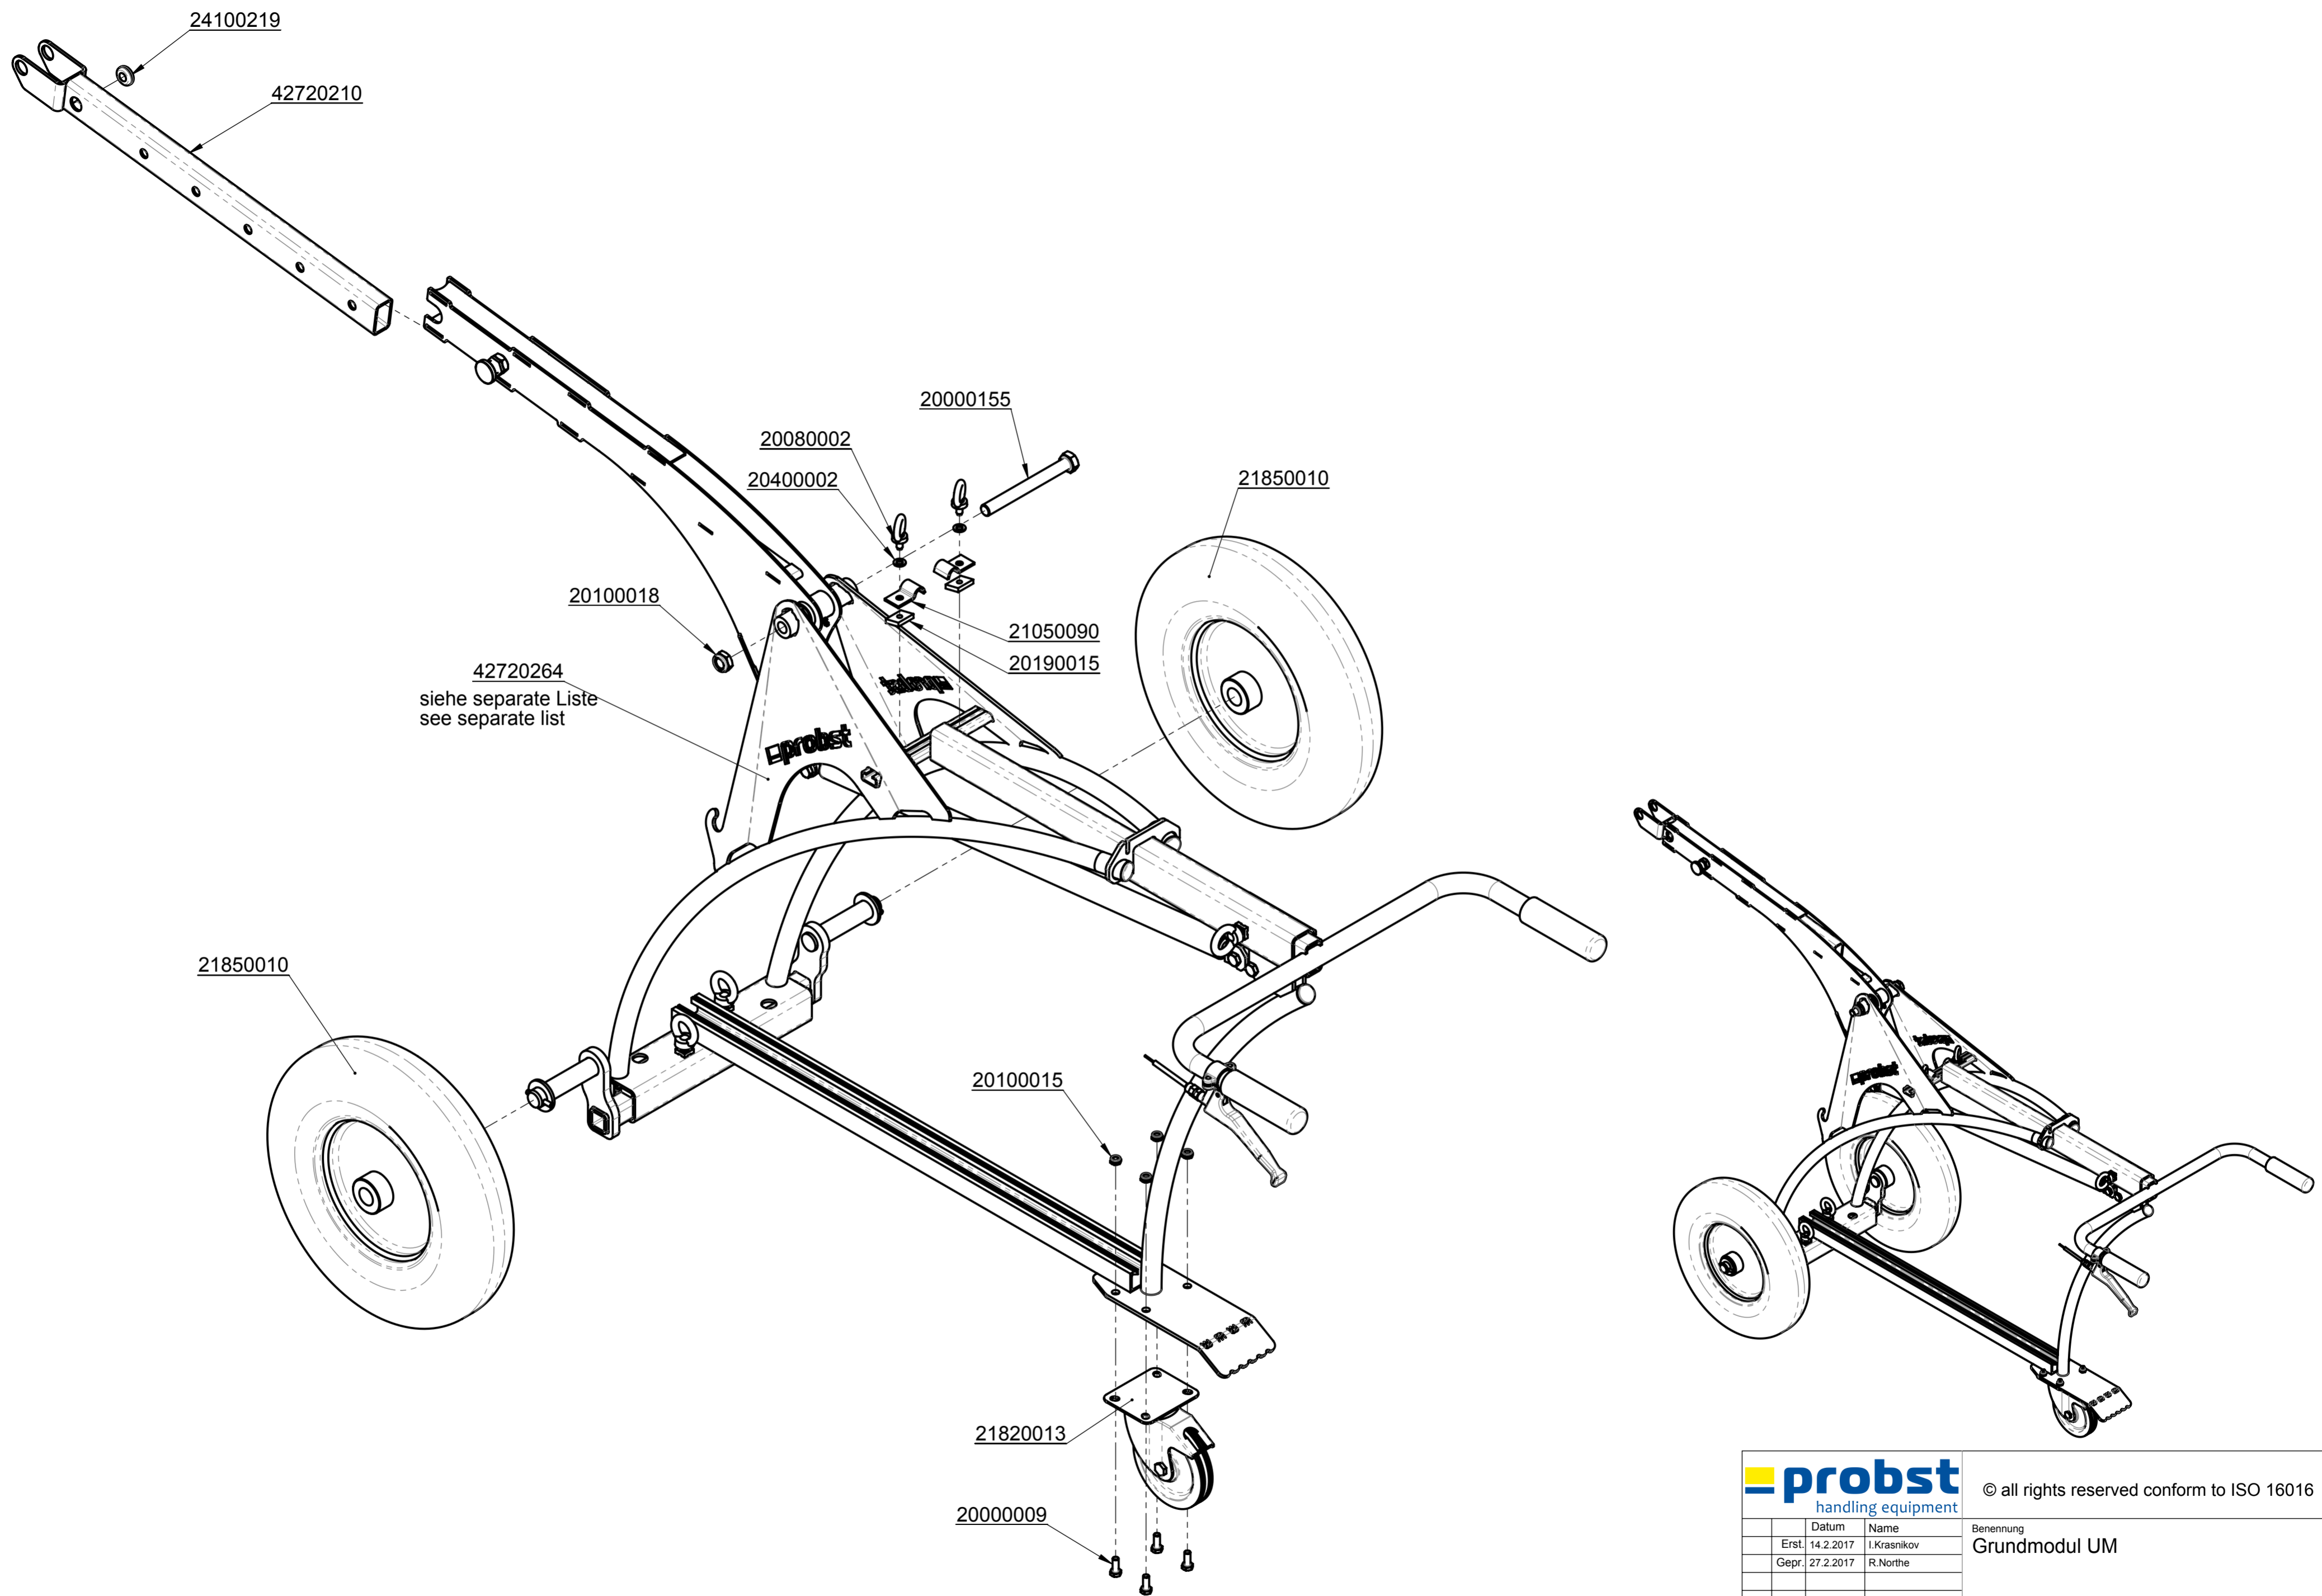

|   |                 |             |  |         |       |
|---|-----------------|-------------|--|---------|-------|
|  |                 |             | © all rights reserved conform to ISO 16016 |         |       |
|   | Datum           | Name        | Benennung                                  |         |       |
|   | Erst. 14.2.2017 | I.Krasnikov | Grundmodul UM                              |         |       |
|   | Gepr. 27.2.2017 | R.Northe    |  |         |       |
|   |                 |             |  |         |       |
|   |                 |             |  |         |       |
|   |                 |             | Artikelnummer/Zeichnungsnummer             |         | Blatt |
|   |                 |             | E42720235                                  |         | 1     |
|   |                 |             |  |         | von 1 |
| 1   | Zust.           | Urspr.      | Ers. f.                                    | Ers. d. |       |

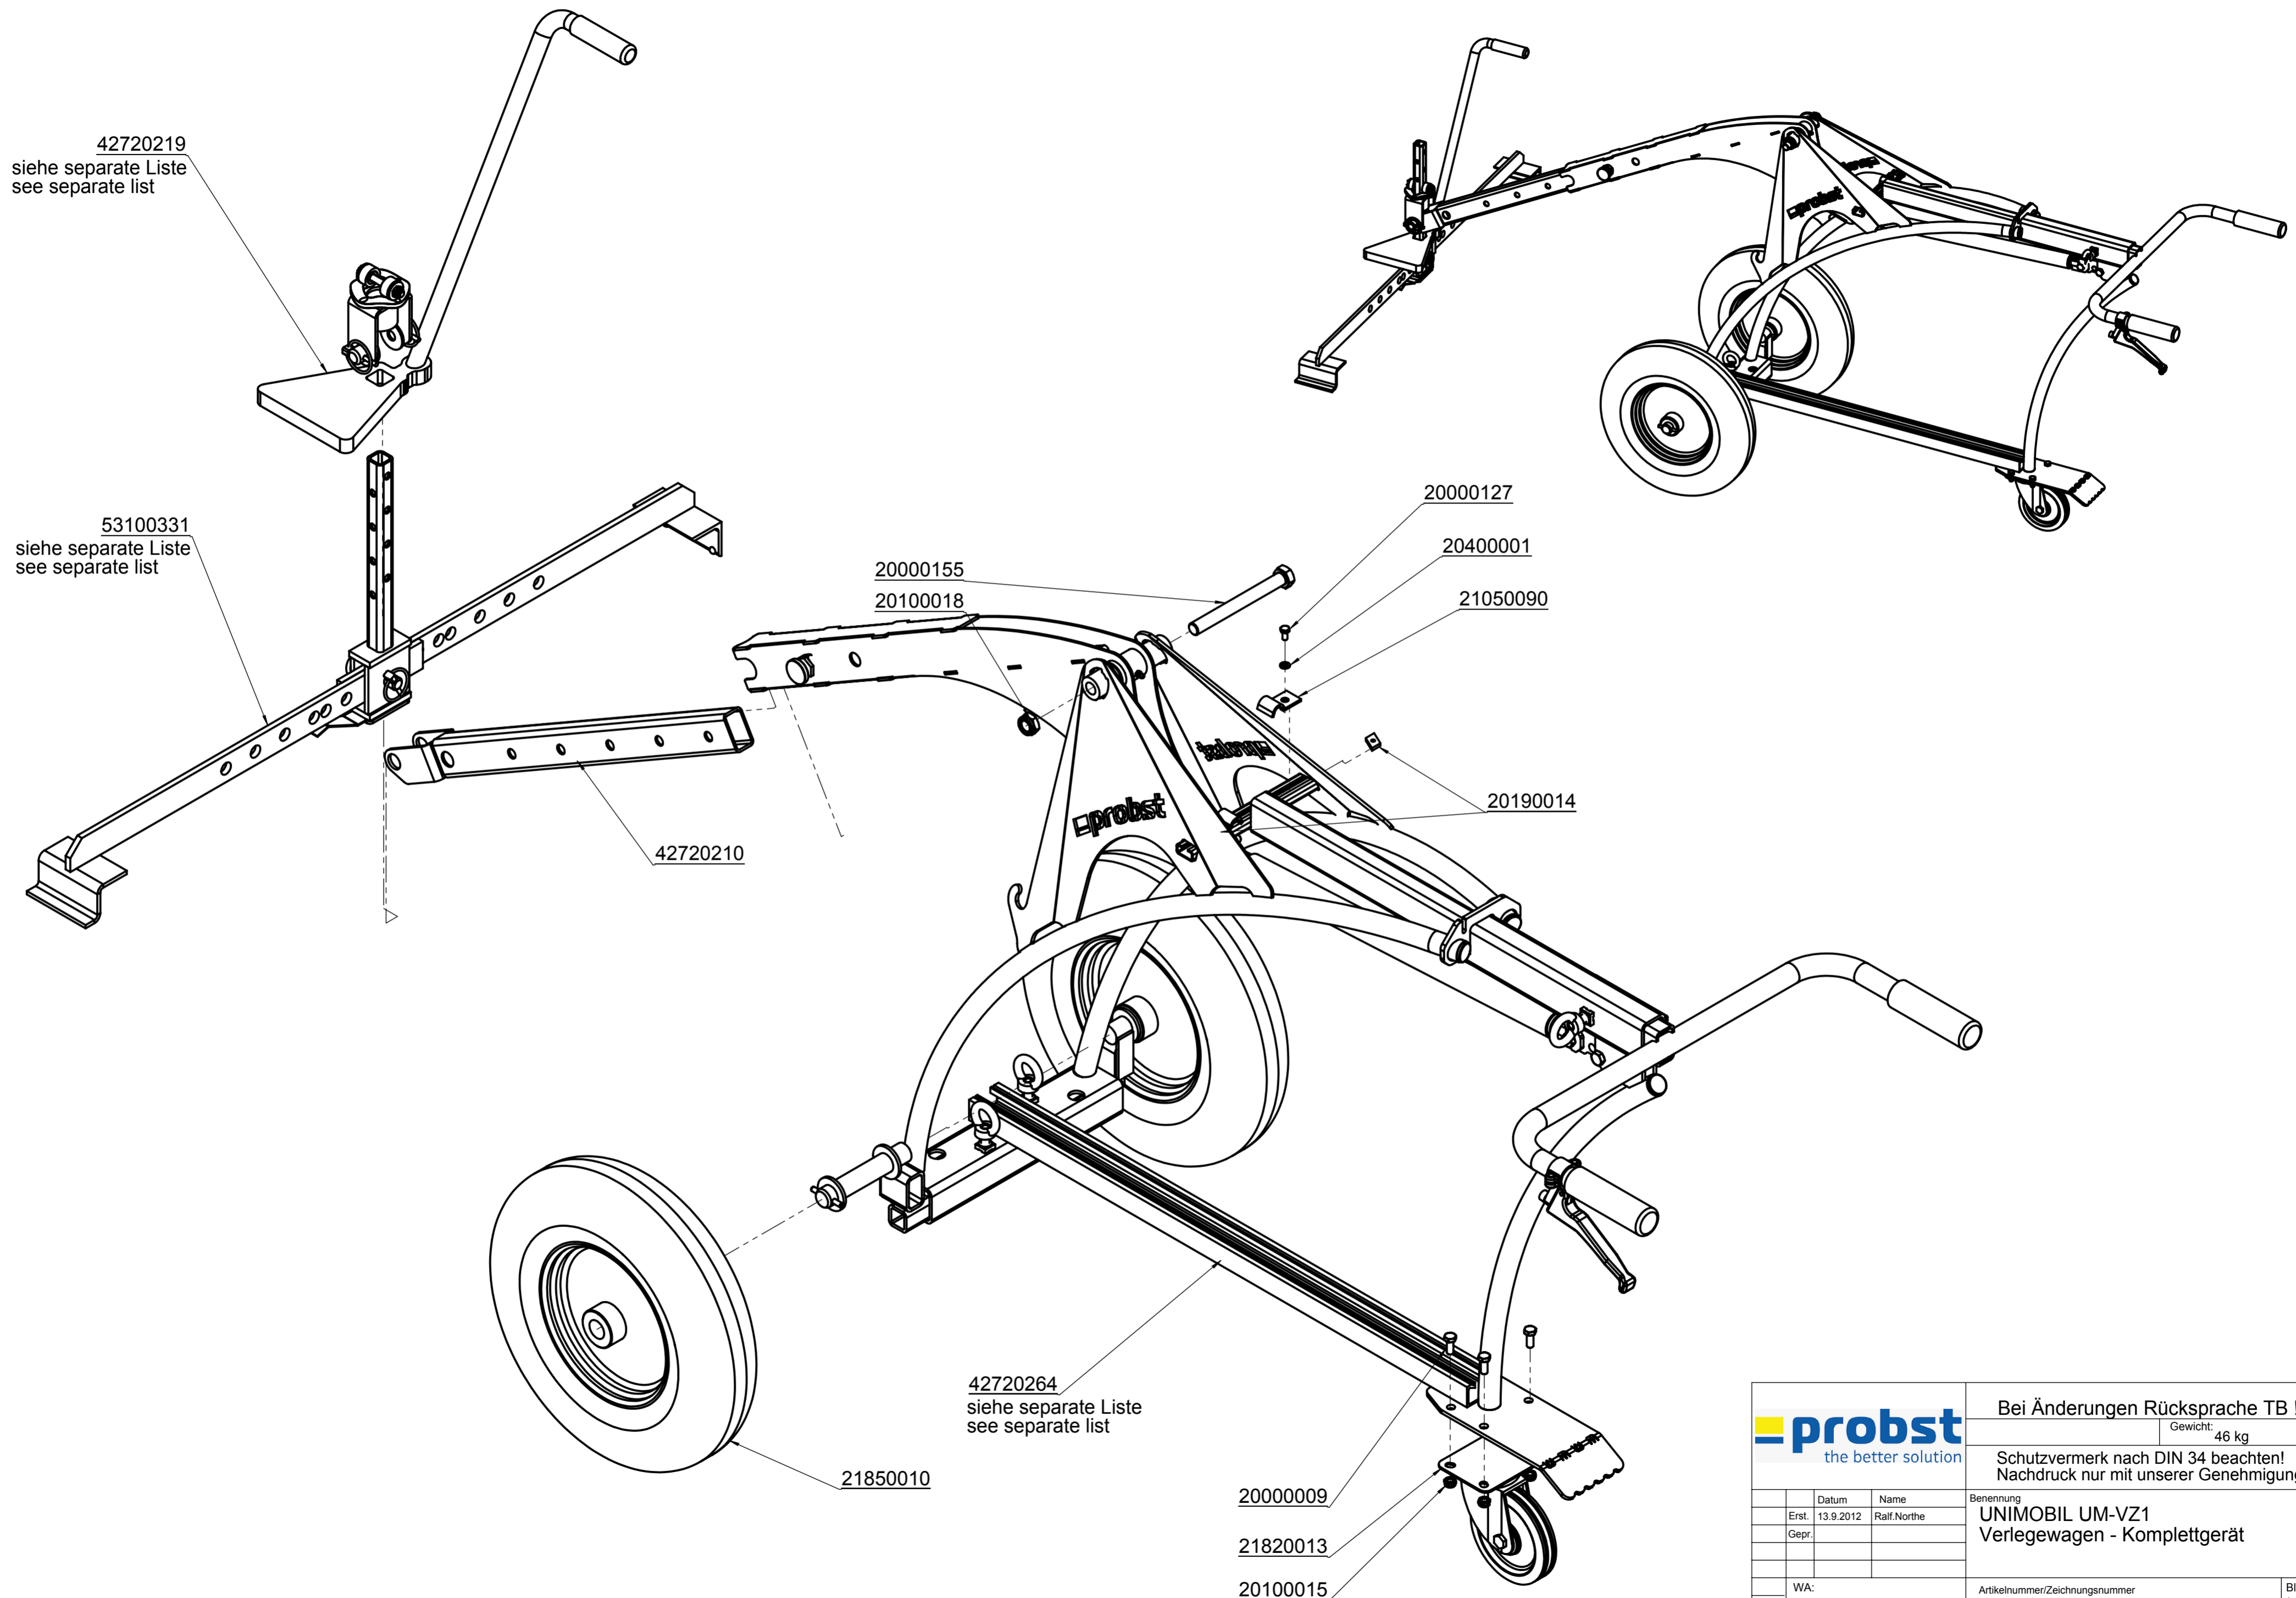

42720219  
siehe separate Liste  
see separate list

53100331  
siehe separate Liste  
see separate list

42720210

20000155  
20100018

20000127

20400001

21050090

20190014


42720264  
siehe separate Liste  
see separate list



21850010


20000009

21820013

20100015

|   |        |   |         |
|---|--------|---|---------|
|  |        | Bei Änderungen Rücksprache TB !   |         |
|   |        | Gewicht: 46 kg  |         |
|   |        | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |         |
|   |        | Benennung<br><b>UNIMOBIL UM-VZ1</b><br>Verlegewagen - Komplettgerät           |         |
| WA:   |        | Artikelnummer/Zeichnungsnummer  |         |
| Kunde:  |        | E52740015   |         |
| 1   |        | Blatt 1   |         |
| Zust.   | Urspr. | Ers. f.   | Ers. d. |

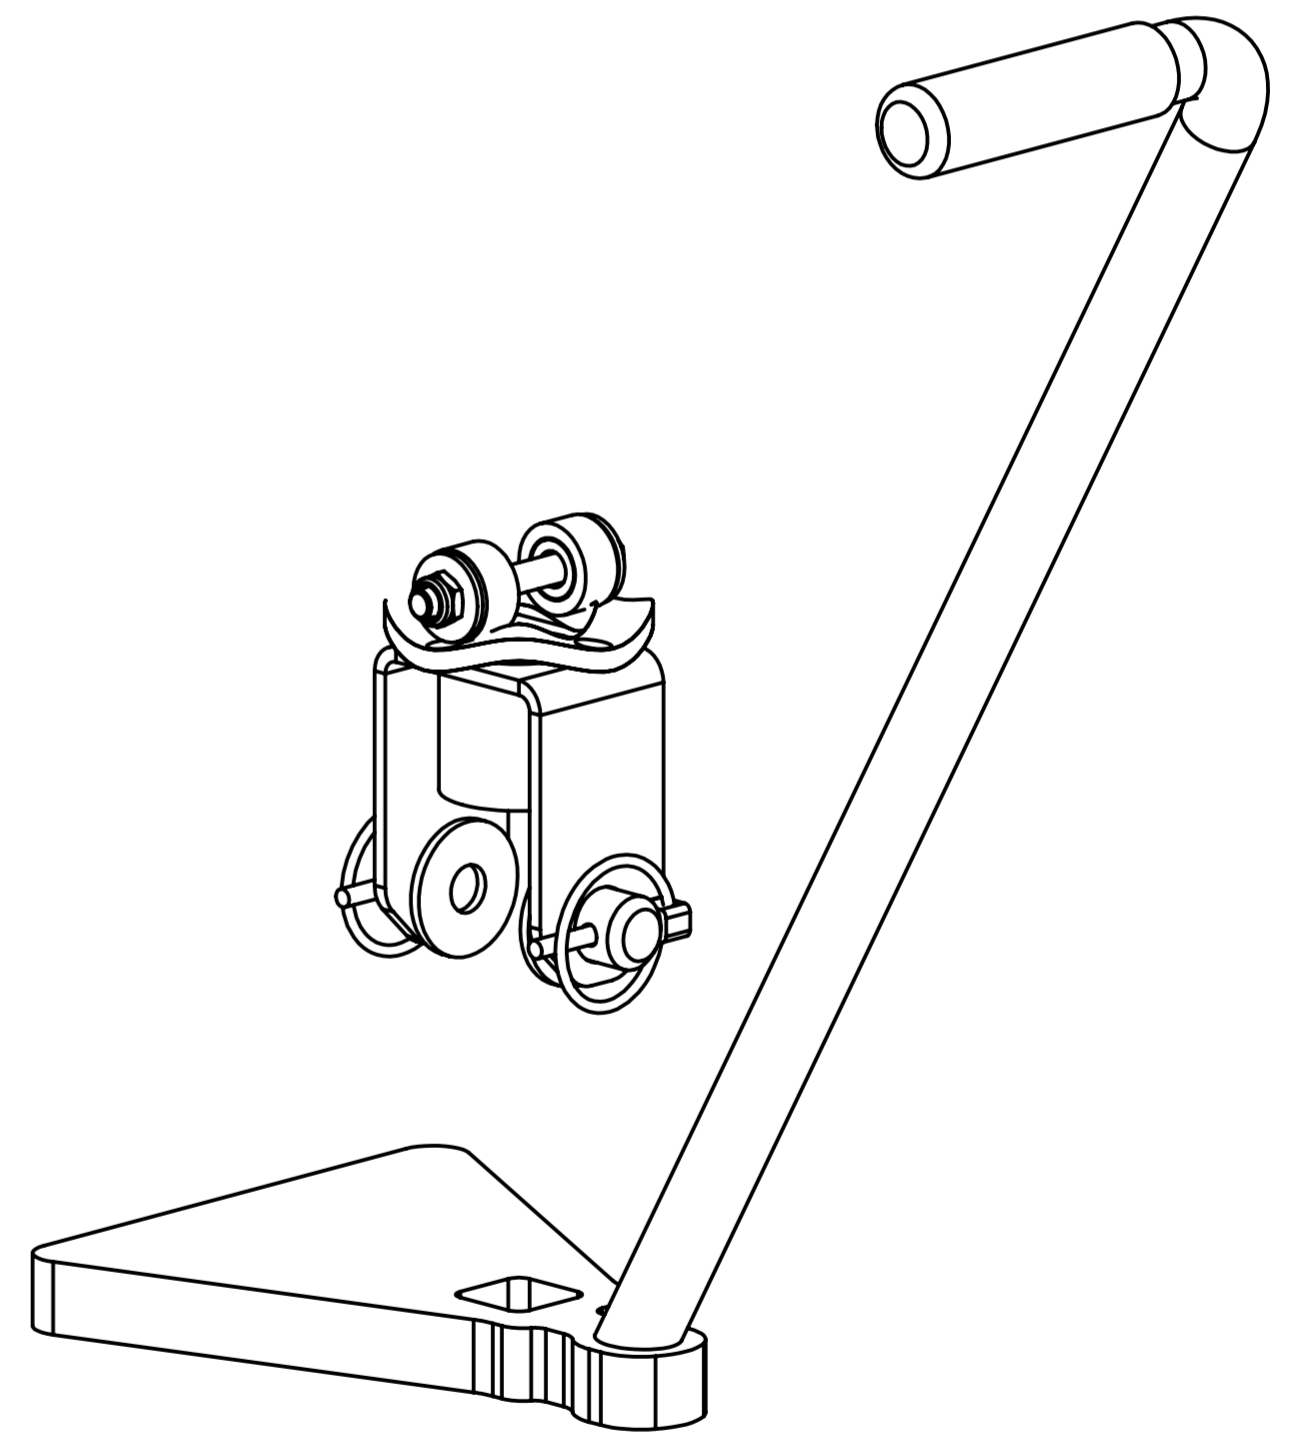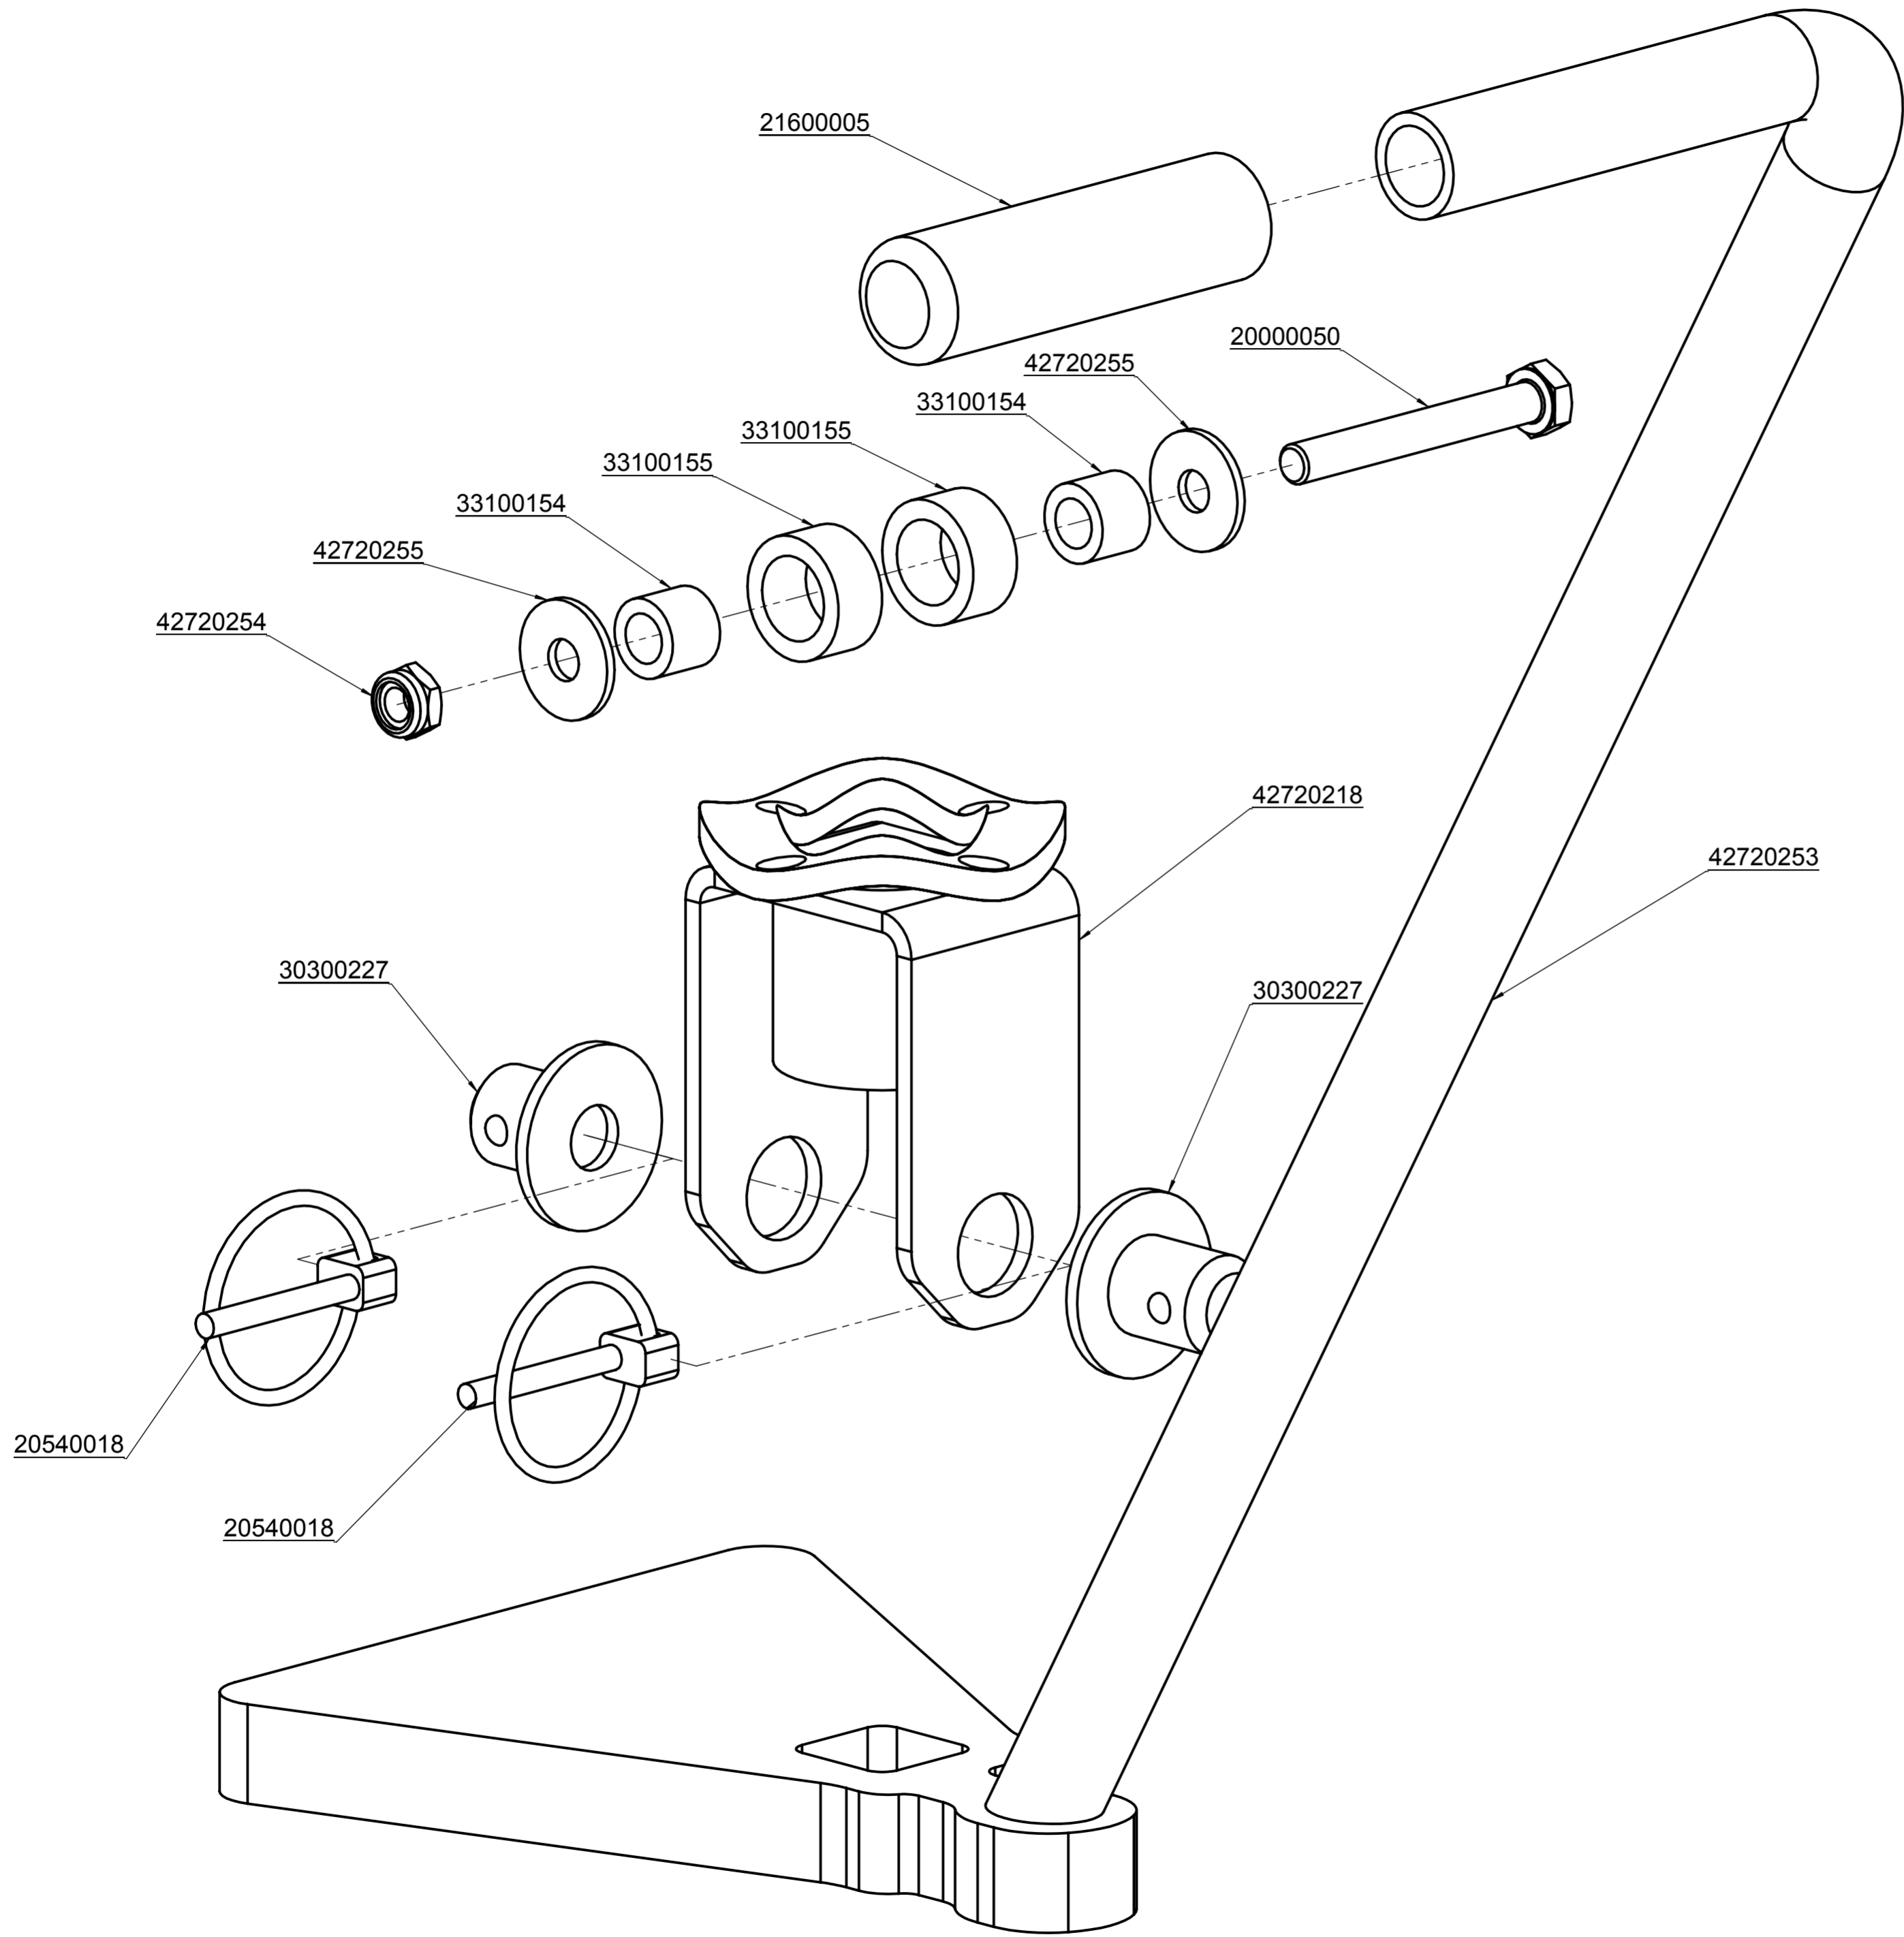

|   |  |   |  |
|---|--|---|--|
|  |  | Bei Änderungen Rücksprache TB !   |  |
|   |  | Gewicht: 3,9 kg   |  |
|   |  | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |  |
|   |  | Benennung   |  |
|   |  | Gelenkaufnahme VPH / VZ1 zu UM  |  |
|   |  | Artikelnummer/Zeichnungsnummer  |  |
|   |  | E42720219   |  |
|   |  | Blatt   |  |
|   |  | 1   |  |
|   |  | von 1   |  |
| WA:   |  | Ers. f.   |  |
| Kunde:  |  | Ers. d.   |  |
| Zust. Urspr.  |  |   |  |

8 7 6 5 4 3 2 1

F


E

D

C

B

A

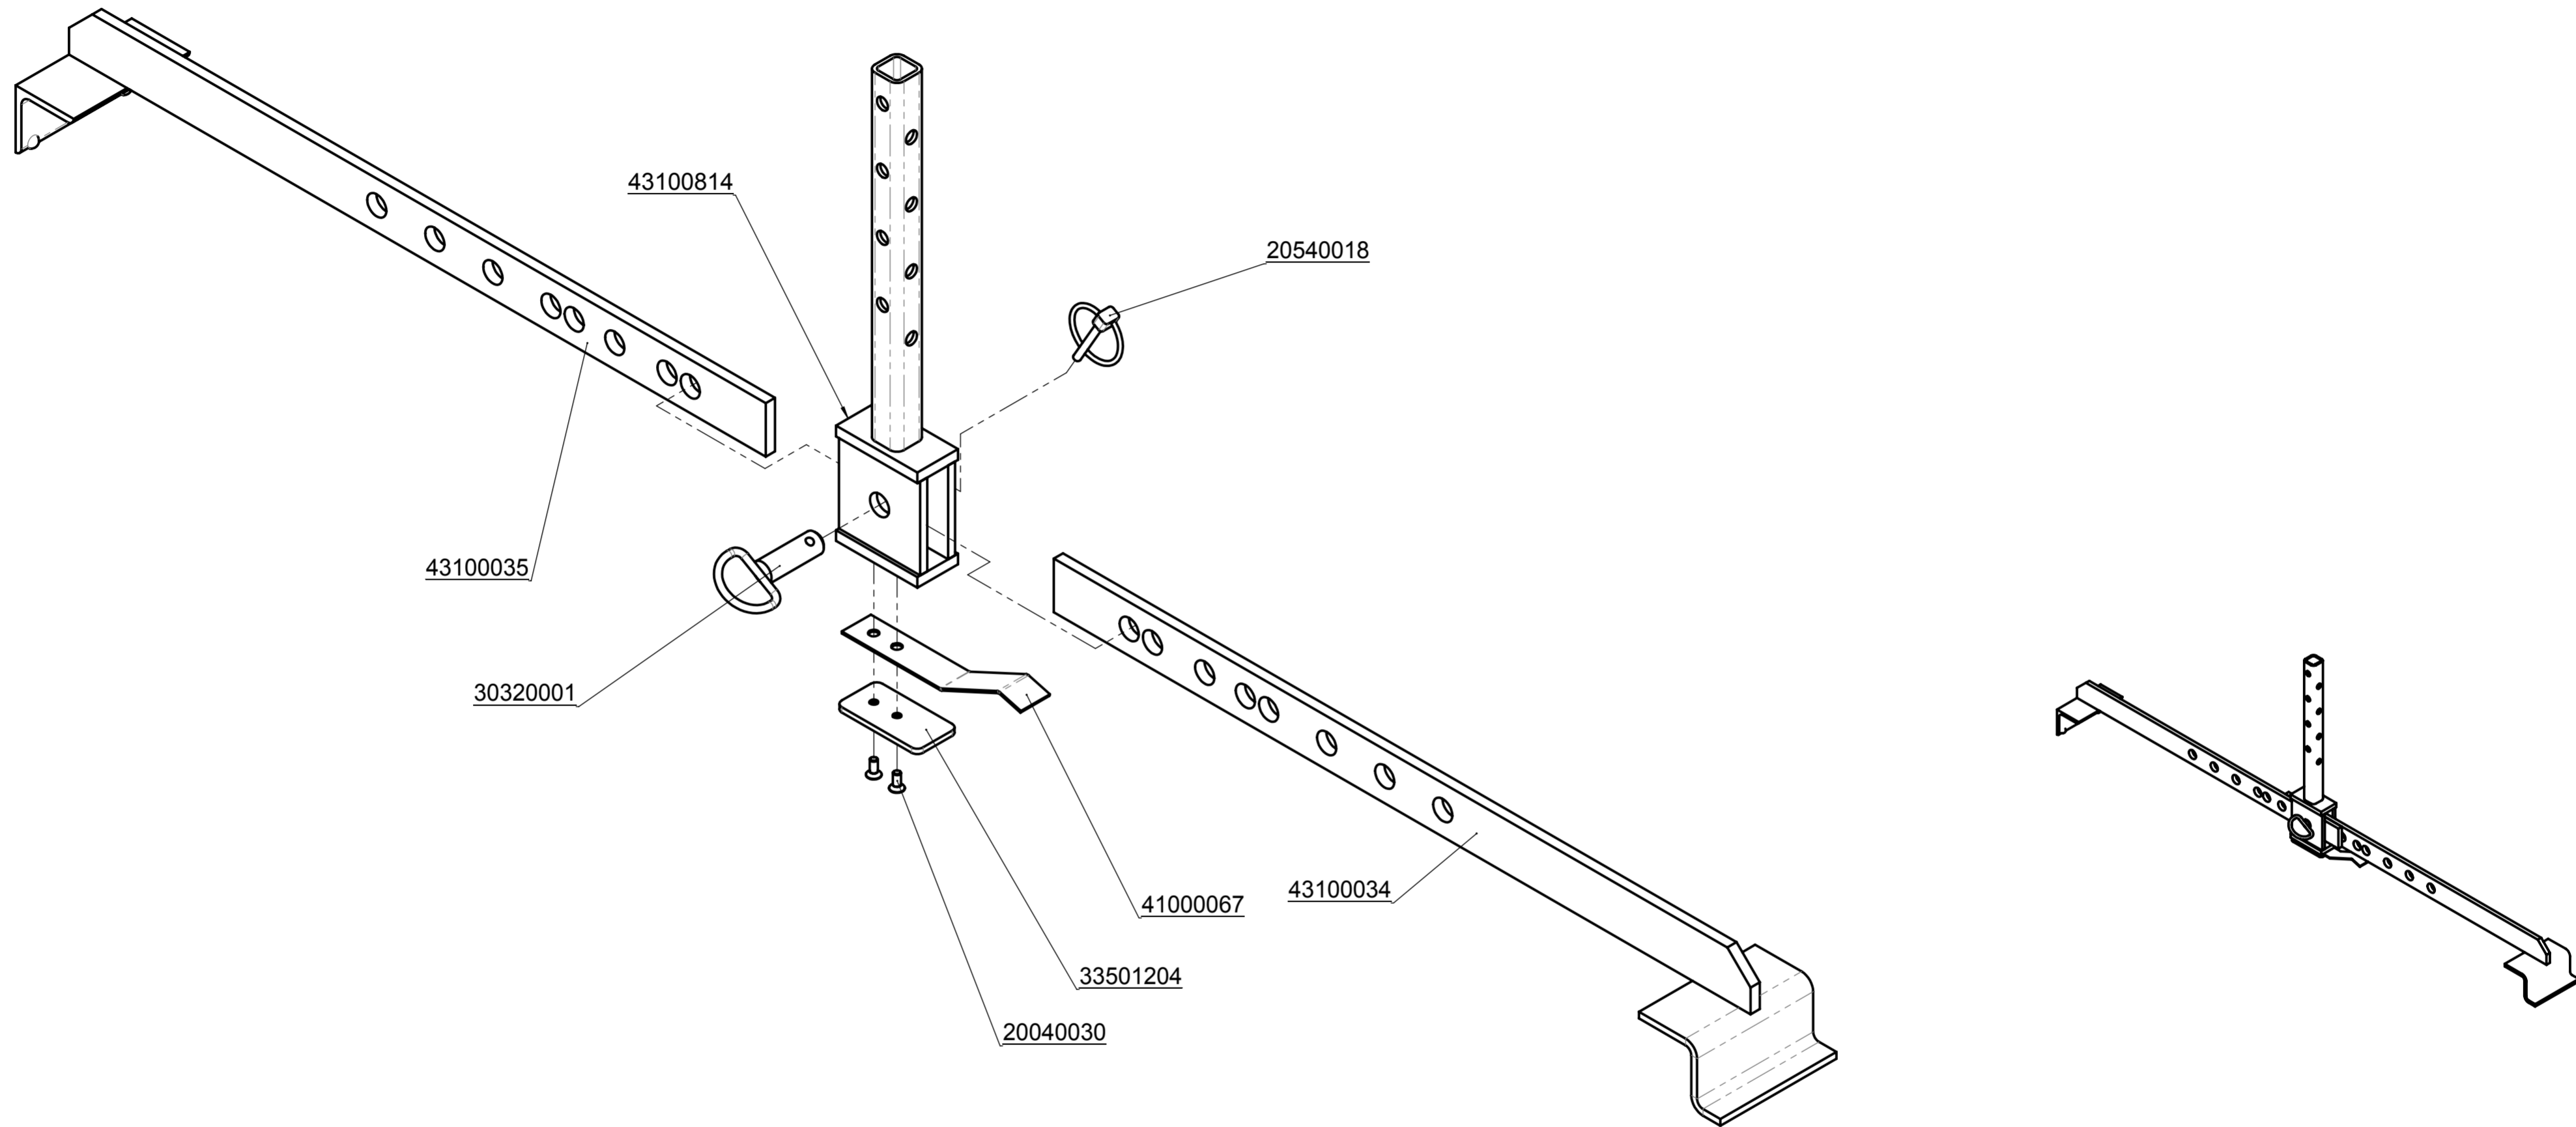

Bei Änderungen Rücksprache TB !

**probst**  
Greiftechnik - Verlegesysteme

Gewicht: 5,1 kg

Schutzvermerk nach DIN 34 beachten!  
Nachdruck nur mit unserer Genehmigung!


|        |                   |             |                                |
|--------|-------------------|-------------|--------------------------------|
|        | Datum             | Name        | Benennung                      |
| Erst.  | 16.3.2009         | Ralf Northe |                                |
| Gepf.  |                   |             |                                |
| WA:    |                   |             | Artikelnummer/Zeichnungsnummer |
| Kunde: |                   |             |                                |
| Zust.  | Urspr. H020-10001 | Ers. f.     | Ers. d.                        |


Versetzzange VZ zu Uni Mobil UM

E53100331

Blatt 1 von 1

8 7 6 5 4 3 2 1

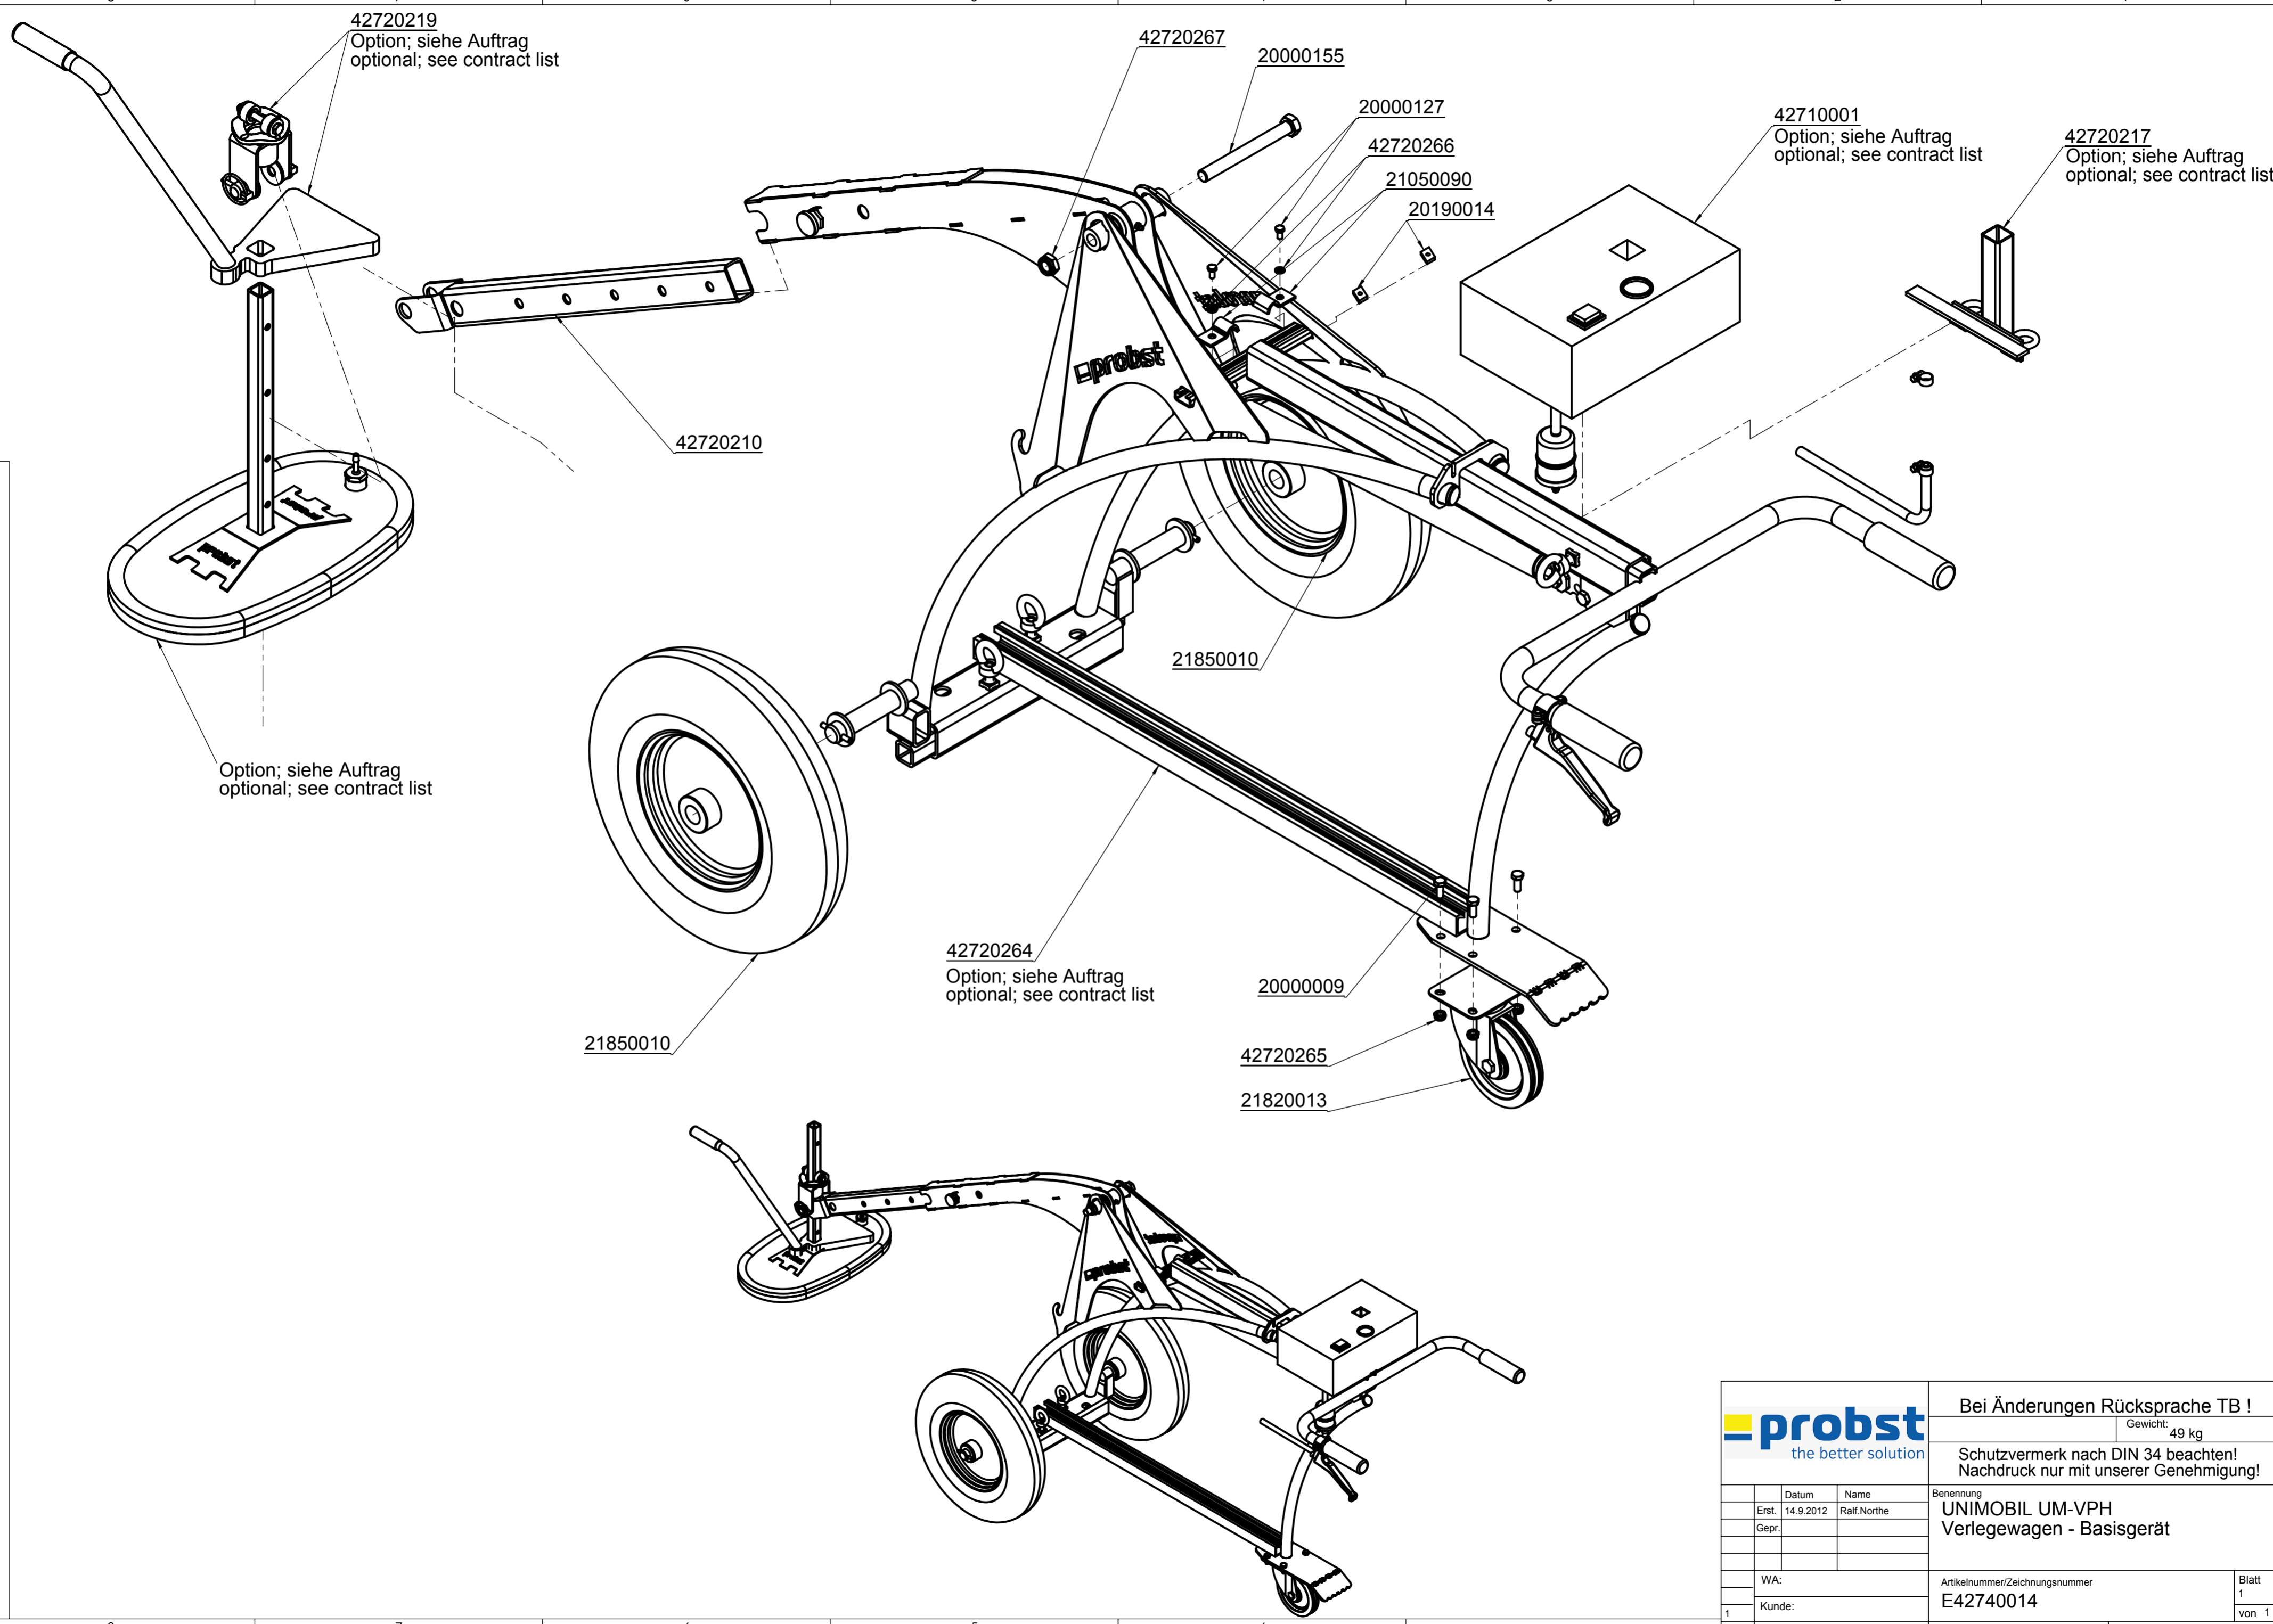

|   |                                |   |         |
|---|--------------------------------|---|---------|
|  |                                | Bei Änderungen Rücksprache TB !   |         |
|   |                                | Gewicht: 49 kg  |         |
|   |                                | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |         |
|   | Datum                          | Name  |         |
| Erst.   | 14.9.2012                      | Ralf Northe   |         |
| Gepr.   |                                |   |         |
|   |                                | Benennung   |         |
|   |                                | UNIMOBIL UM-VPH   |         |
|   |                                | Verlegewagen - Basisgerät   |         |
| WA:   | Artikelnummer/Zeichnungsnummer |   | Blatt   |
| Kunde:  | E42740014                      |   | 1       |
| Zust.   | Urspr.                         | Ers. f.   | Ers. d. |
|   |                                |   | von 1   |

Option; siehe Auftrag  
option; see contract list

2000090

20000127

20400001

21050090

20190014

42720215  
siehe separate Liste  
see separate list

20100018

probst

42720225  
siehe separate Liste  
see separate list

42720214  
siehe separate Liste  
see separate list

20000009

20100015

21820013

42720264  
siehe separate Liste  
see separate list

Option; siehe Auftrag  
optional; see contract list

21850010



Bei Änderungen Rücksprache TB !

Gewicht: 49 kg

Schutzvermerk nach DIN 34 beachten!  
Nachdruck nur mit unserer Genehmigung!

|       | Datum     | Name        |
|-------|-----------|-------------|
| Erst. | 17.9.2012 | Ralf Northe |
| Gepr. |           |             |



Benennung  
**UNIMOBIL UM-SM**  
Verlegewagen - Basisgerät

|        |        |
|--------|--------|
| WA:    |        |
| Kunde: |        |
| 1      |        |
| Zust.  | Urspr. |

Artikelnummer/Zeichnungsnummer  
**E42740011**

Blatt  
1  
von 1



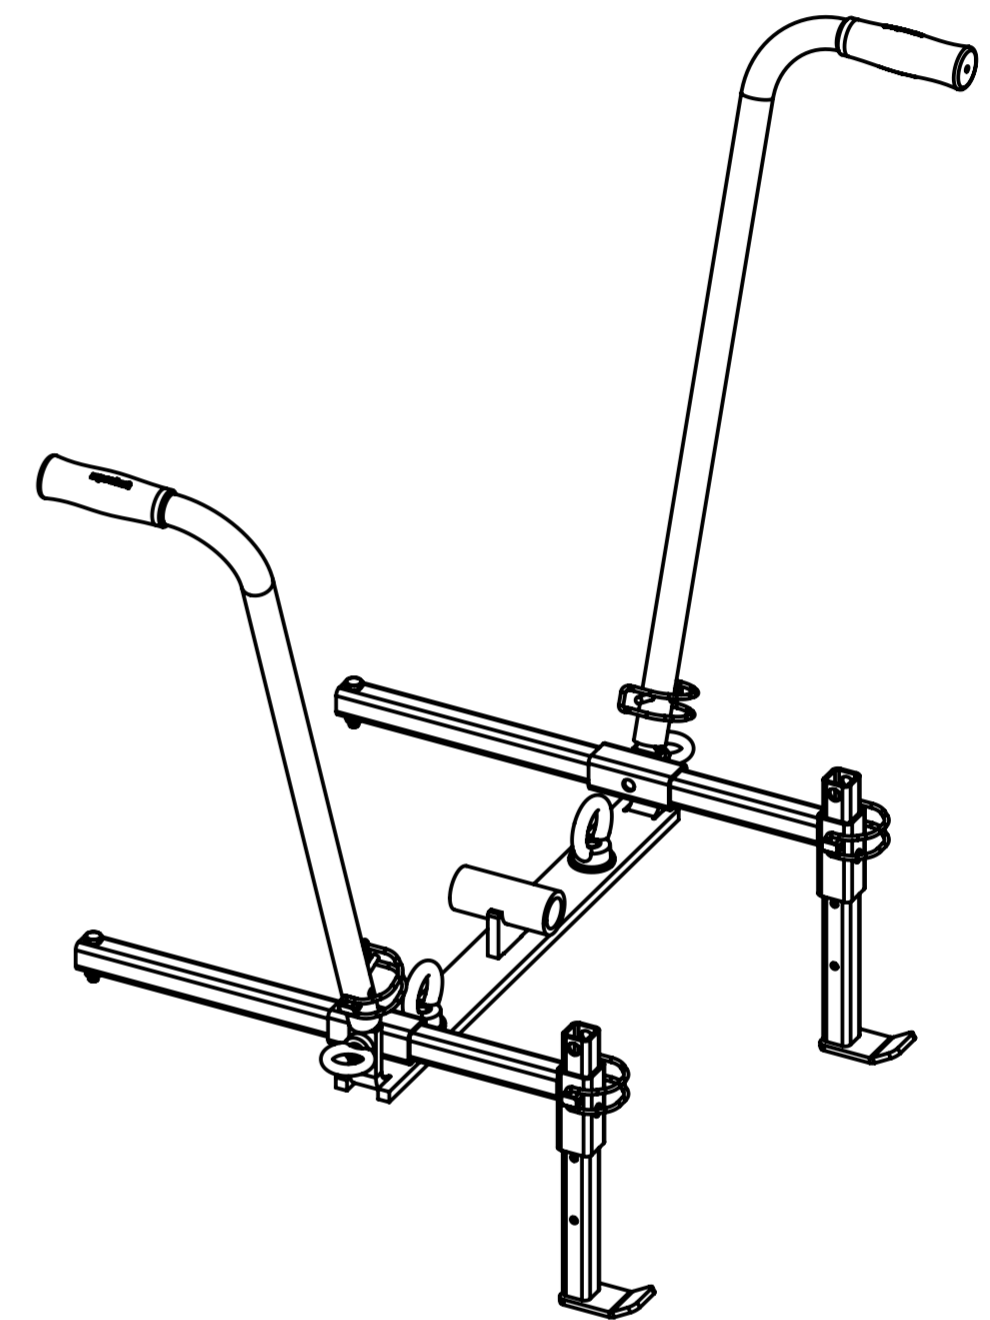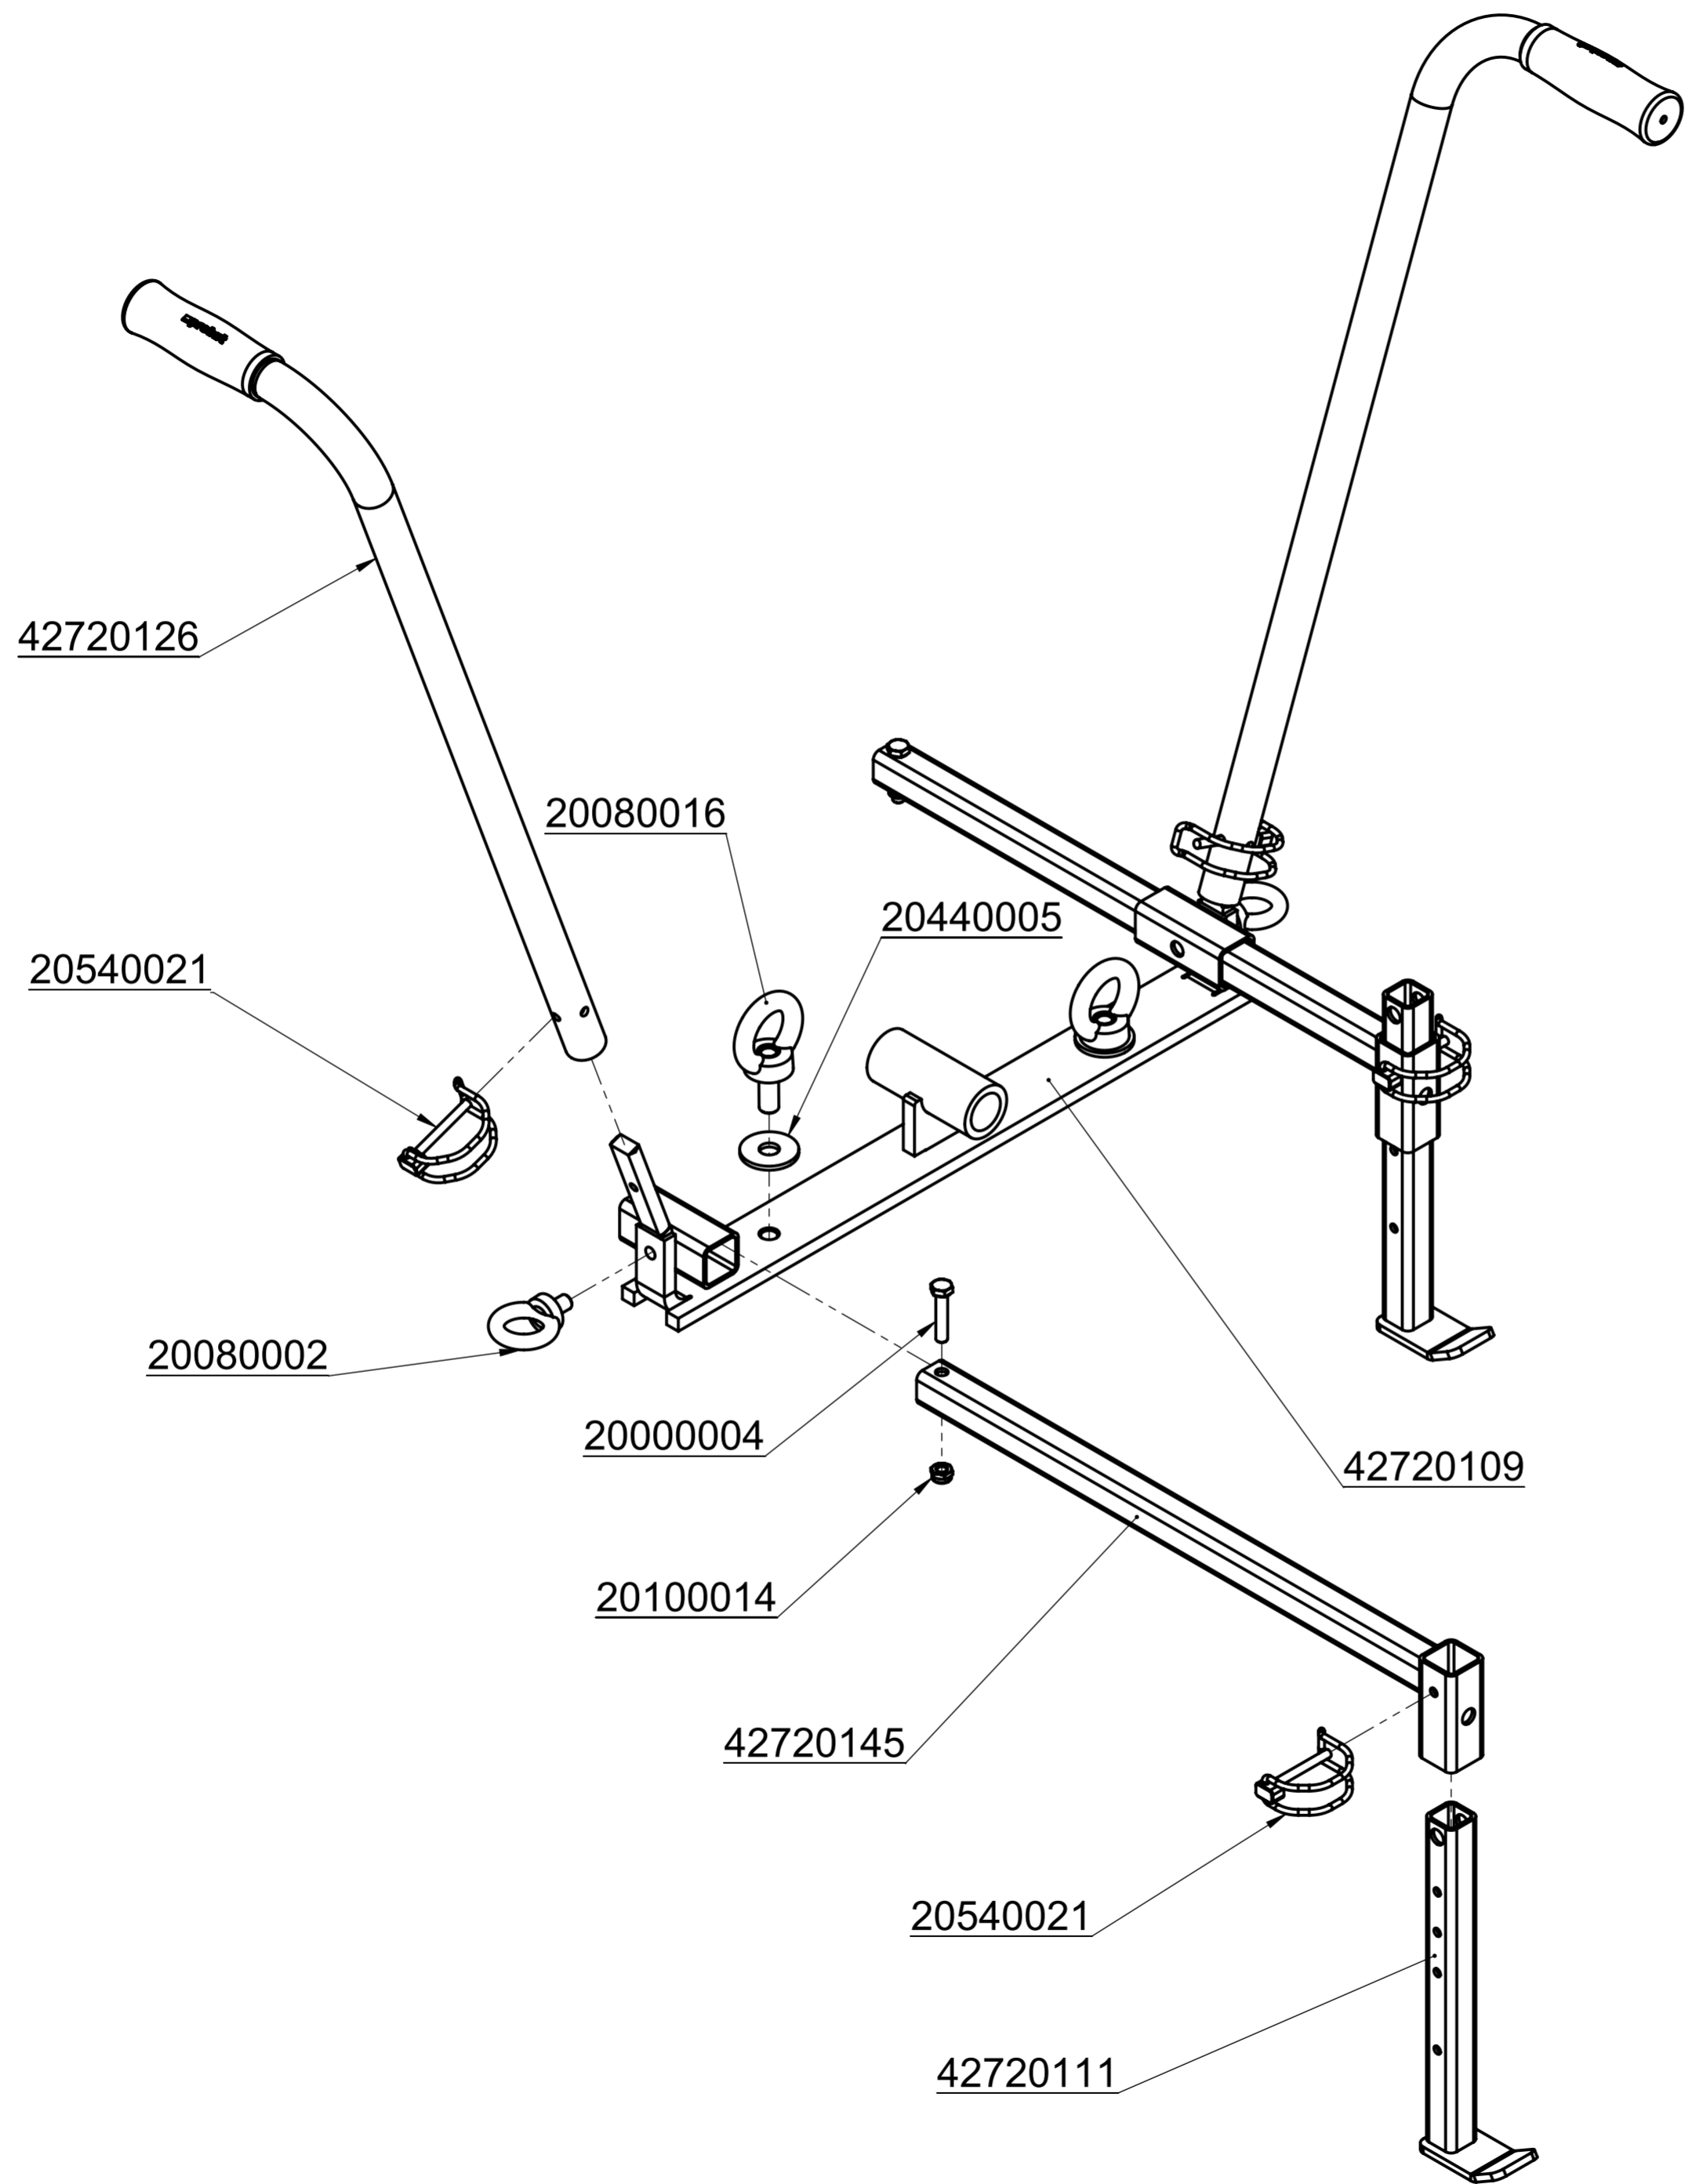

|                                     |           |  |                                  |
|-------------------------------------|-----------|--|----------------------------------|
| <b>probst</b><br>handling equipment |           | © all rights reserved conform to ISO 16016 |                                  |
|                                     | Datum     | Name                                       | Benennung                        |
| Erst.                               | 17.9.2012 | Ralf.Northe                                | Aufnahme für Saugplatte<br>zu UM |
| Gepr.                               | 27.2.2017 | I.Krasnikov                                |                                  |
|                                     |           |  | Artikelnummer/Zeichnungsnummer   |
|                                     |           |  | E42720214                        |
| Zust.                               | Urspr.    | Ers. f.                                    | Ers. d.                          |
|                                     |           |  |                                  |
|                                     |           |  | Blatt<br>1<br>von 1              |

23070007  
siehe separate Liste  
see separate list

20080002

20080002


33020062

25290003

25290003

42720027

42720027

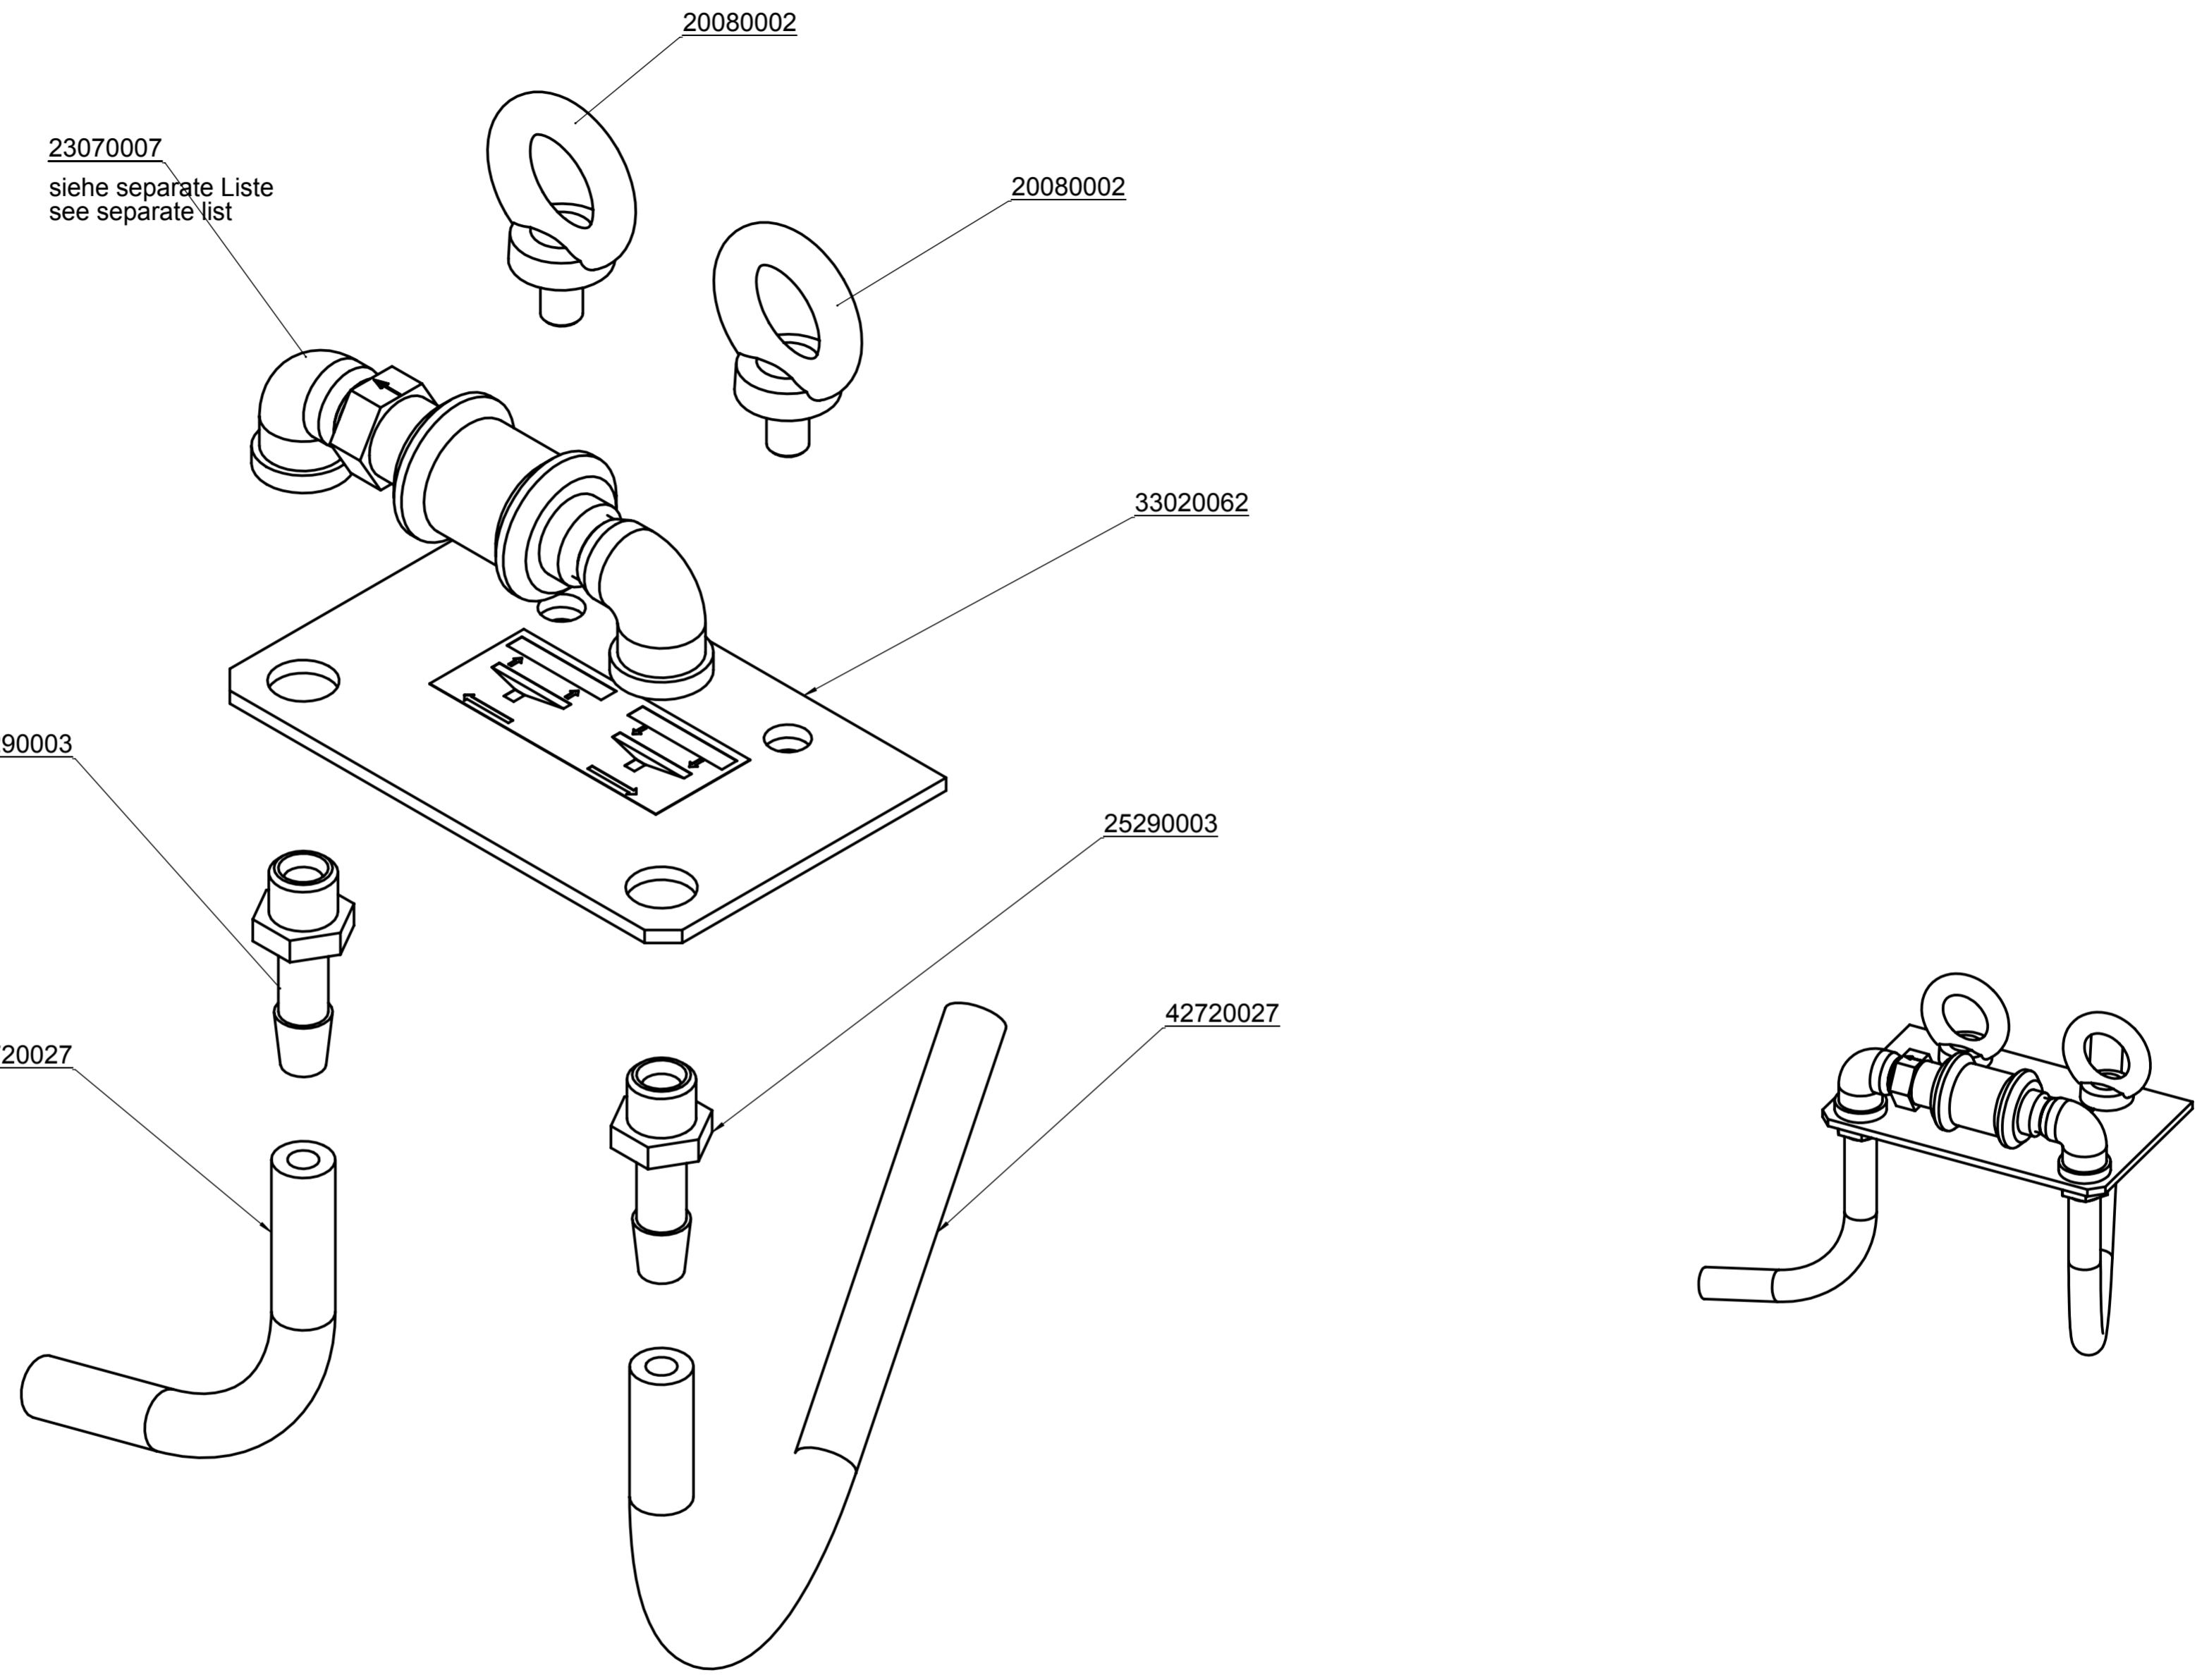

Bei Änderungen Rücksprache TB !

Gewicht: 0,7 kg


Schutzvermerk nach DIN 34 beachten!  
Nachdruck nur mit unserer Genehmigung!


|       | Datum     | Name        |
|-------|-----------|-------------|
| Erst. | 17.9.2012 | Ralf Northe |
| Gepr. |           |             |
|       |           |             |

Benennung  
**Anbausatz SM zu UM**

|        |        |                                |          |
|--------|--------|--------------------------------|----------|
| WA:    |        | Artikelnummer/Zeichnungsnummer | Blatt    |
| Kunde: |        | <b>E42720215</b>               | <b>1</b> |
| Zust.  | Urspr. | Ers. f.                        | Ers. d.  |

von 1

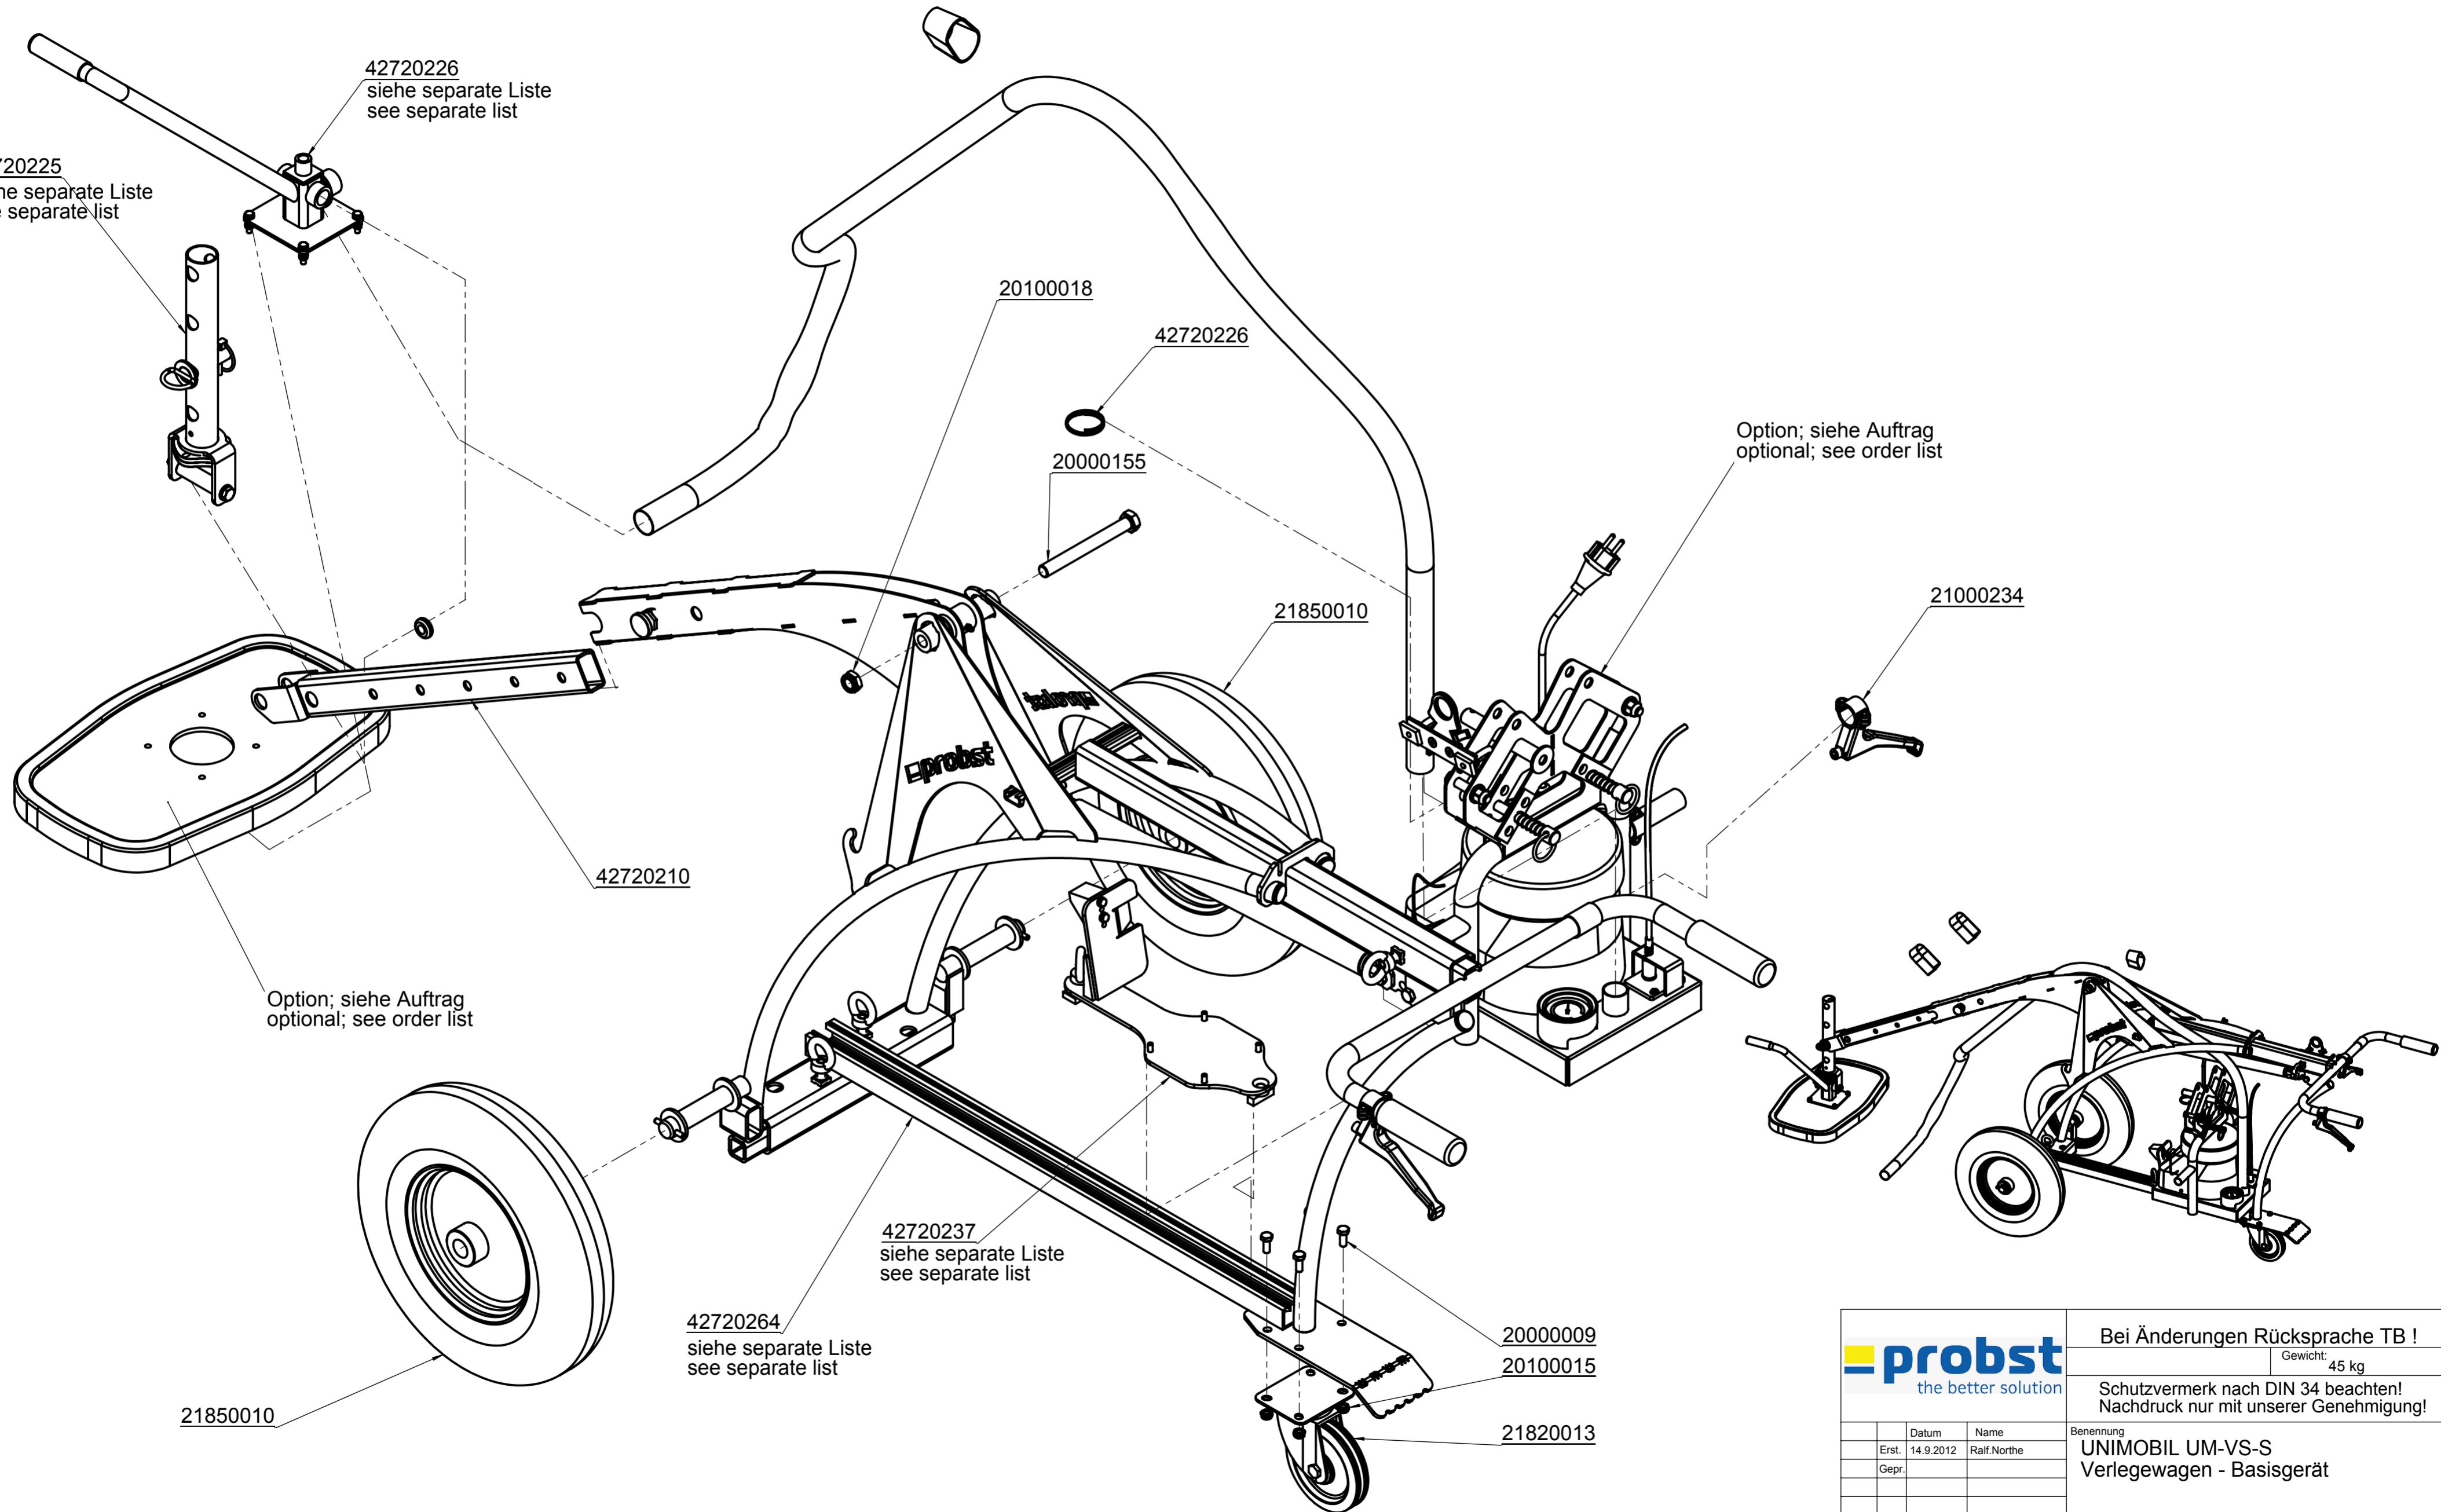

|   |        |   |  |
|---|--------|---|--|
|  |        | Bei Änderungen Rücksprache TB !   |  |
|   |        | Gewicht: 45 kg  |  |
|   |        | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |  |
|   |        | Benennung<br>UNIMOBIL UM-VS-S<br>Verlegewagen - Basisgerät                    |  |
|   |        | Artikelnummer/Zeichnungsnummer<br>E42740012                                   |  |
|   |        | Blatt<br>1<br>von 1   |  |
| WA:   |        | Ers. f.   |  |
| Kunde:  |        | Ers. d.   |  |
| 1   |        |   |  |
| Zust.   | Urspr. |   |  |

8 7 6 5 4 3 2 1

F



E

D

C



B

A

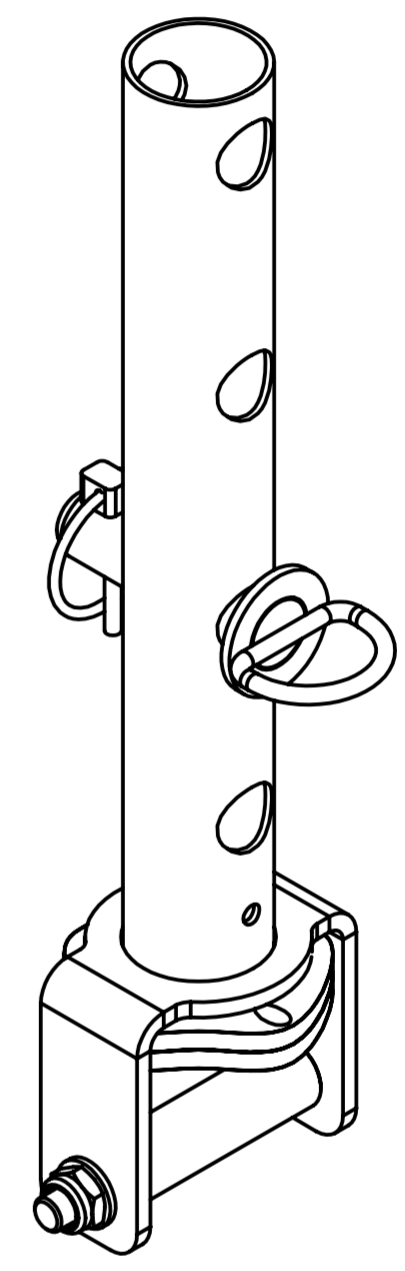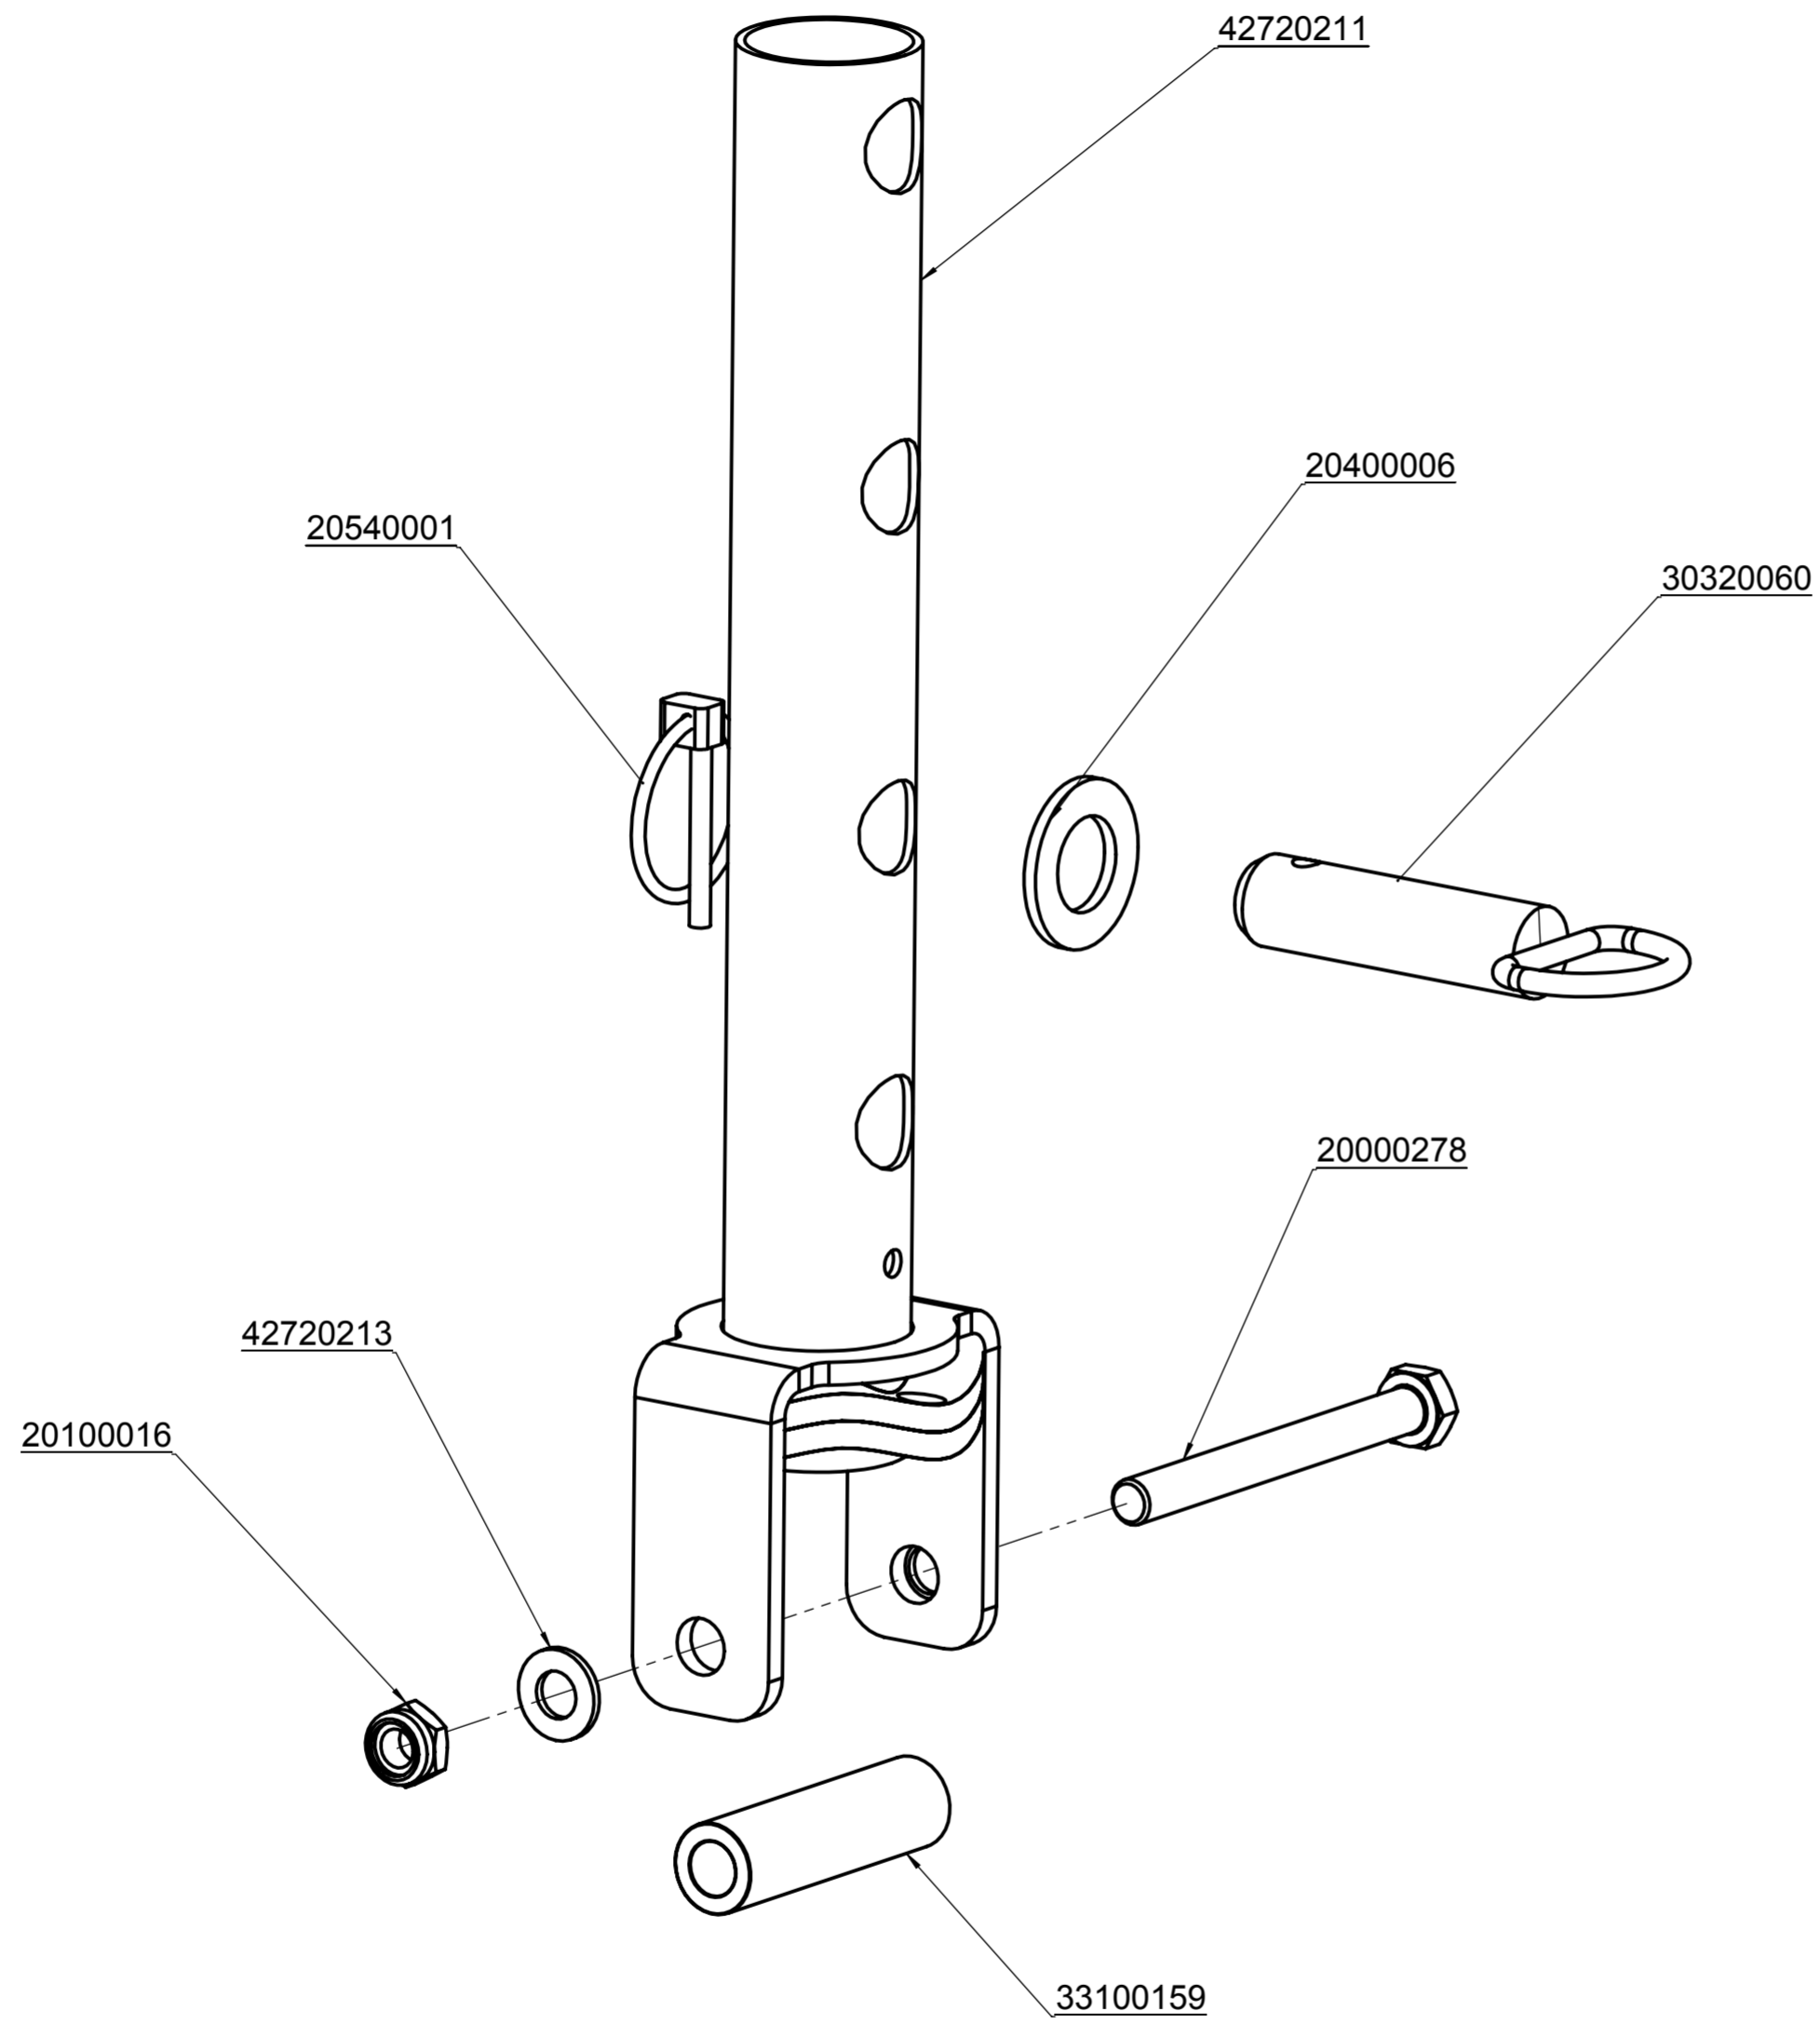


|   |  |   |  |
|---|--|---|--|
|  |  | Bei Änderungen Rücksprache TB !   |  |
|   |  | Gewicht: 1,5 kg   |  |
|   |  | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |  |
|   |  | Benennung   |  |
|   |  | Drehaufhängung SM+Speedy VS zu UM   |  |
|   |  | Artikelnummer/Zeichnungsnummer  |  |
|   |  | E42720225   |  |
|   |  | Blatt   |  |
|   |  | 1   |  |
|   |  | von 1   |  |
| Zust.   |  | Ers. d.   |  |
| Urspr.  |  | Ers. f.   |  |


8 7 6 5 4 3 2 1

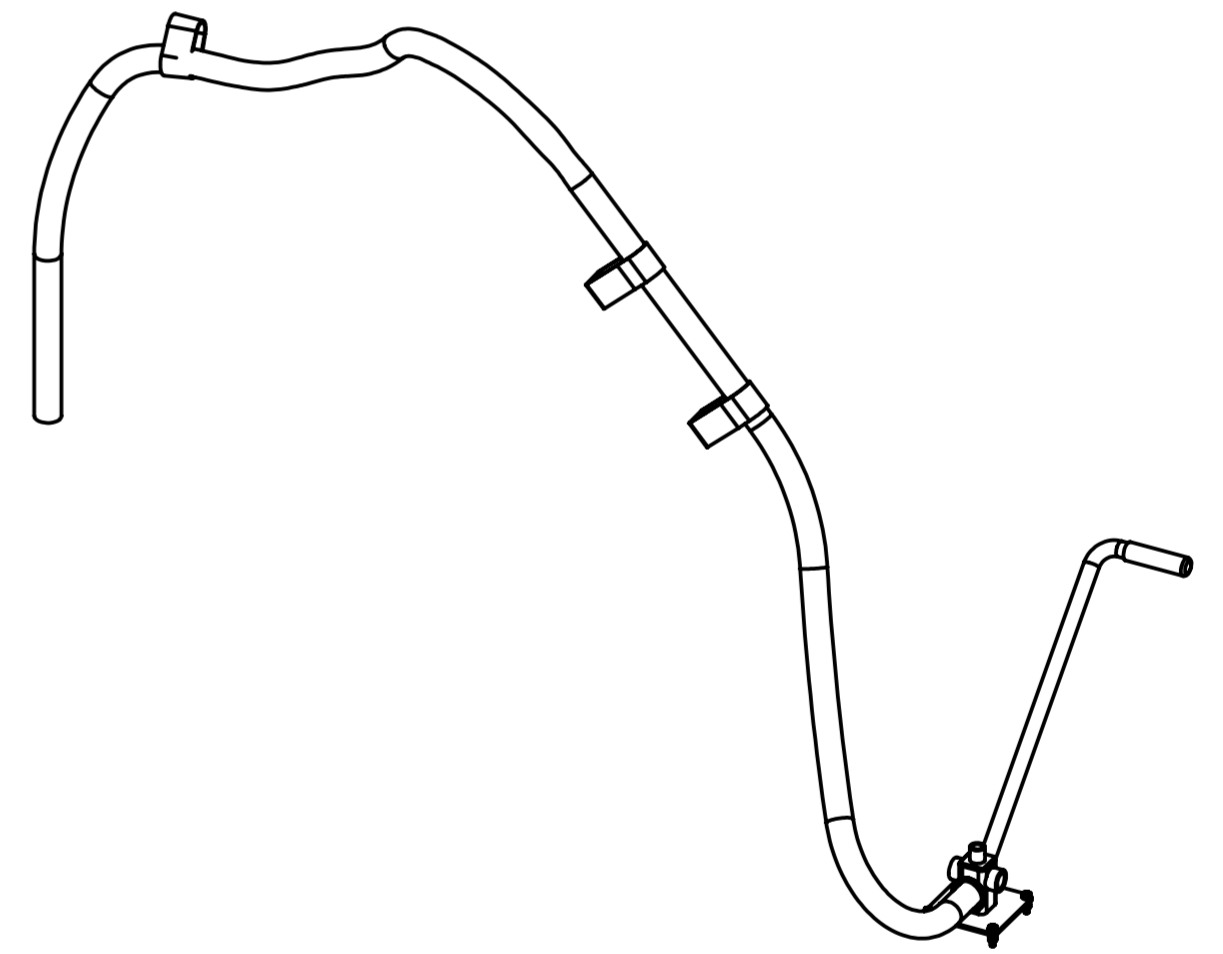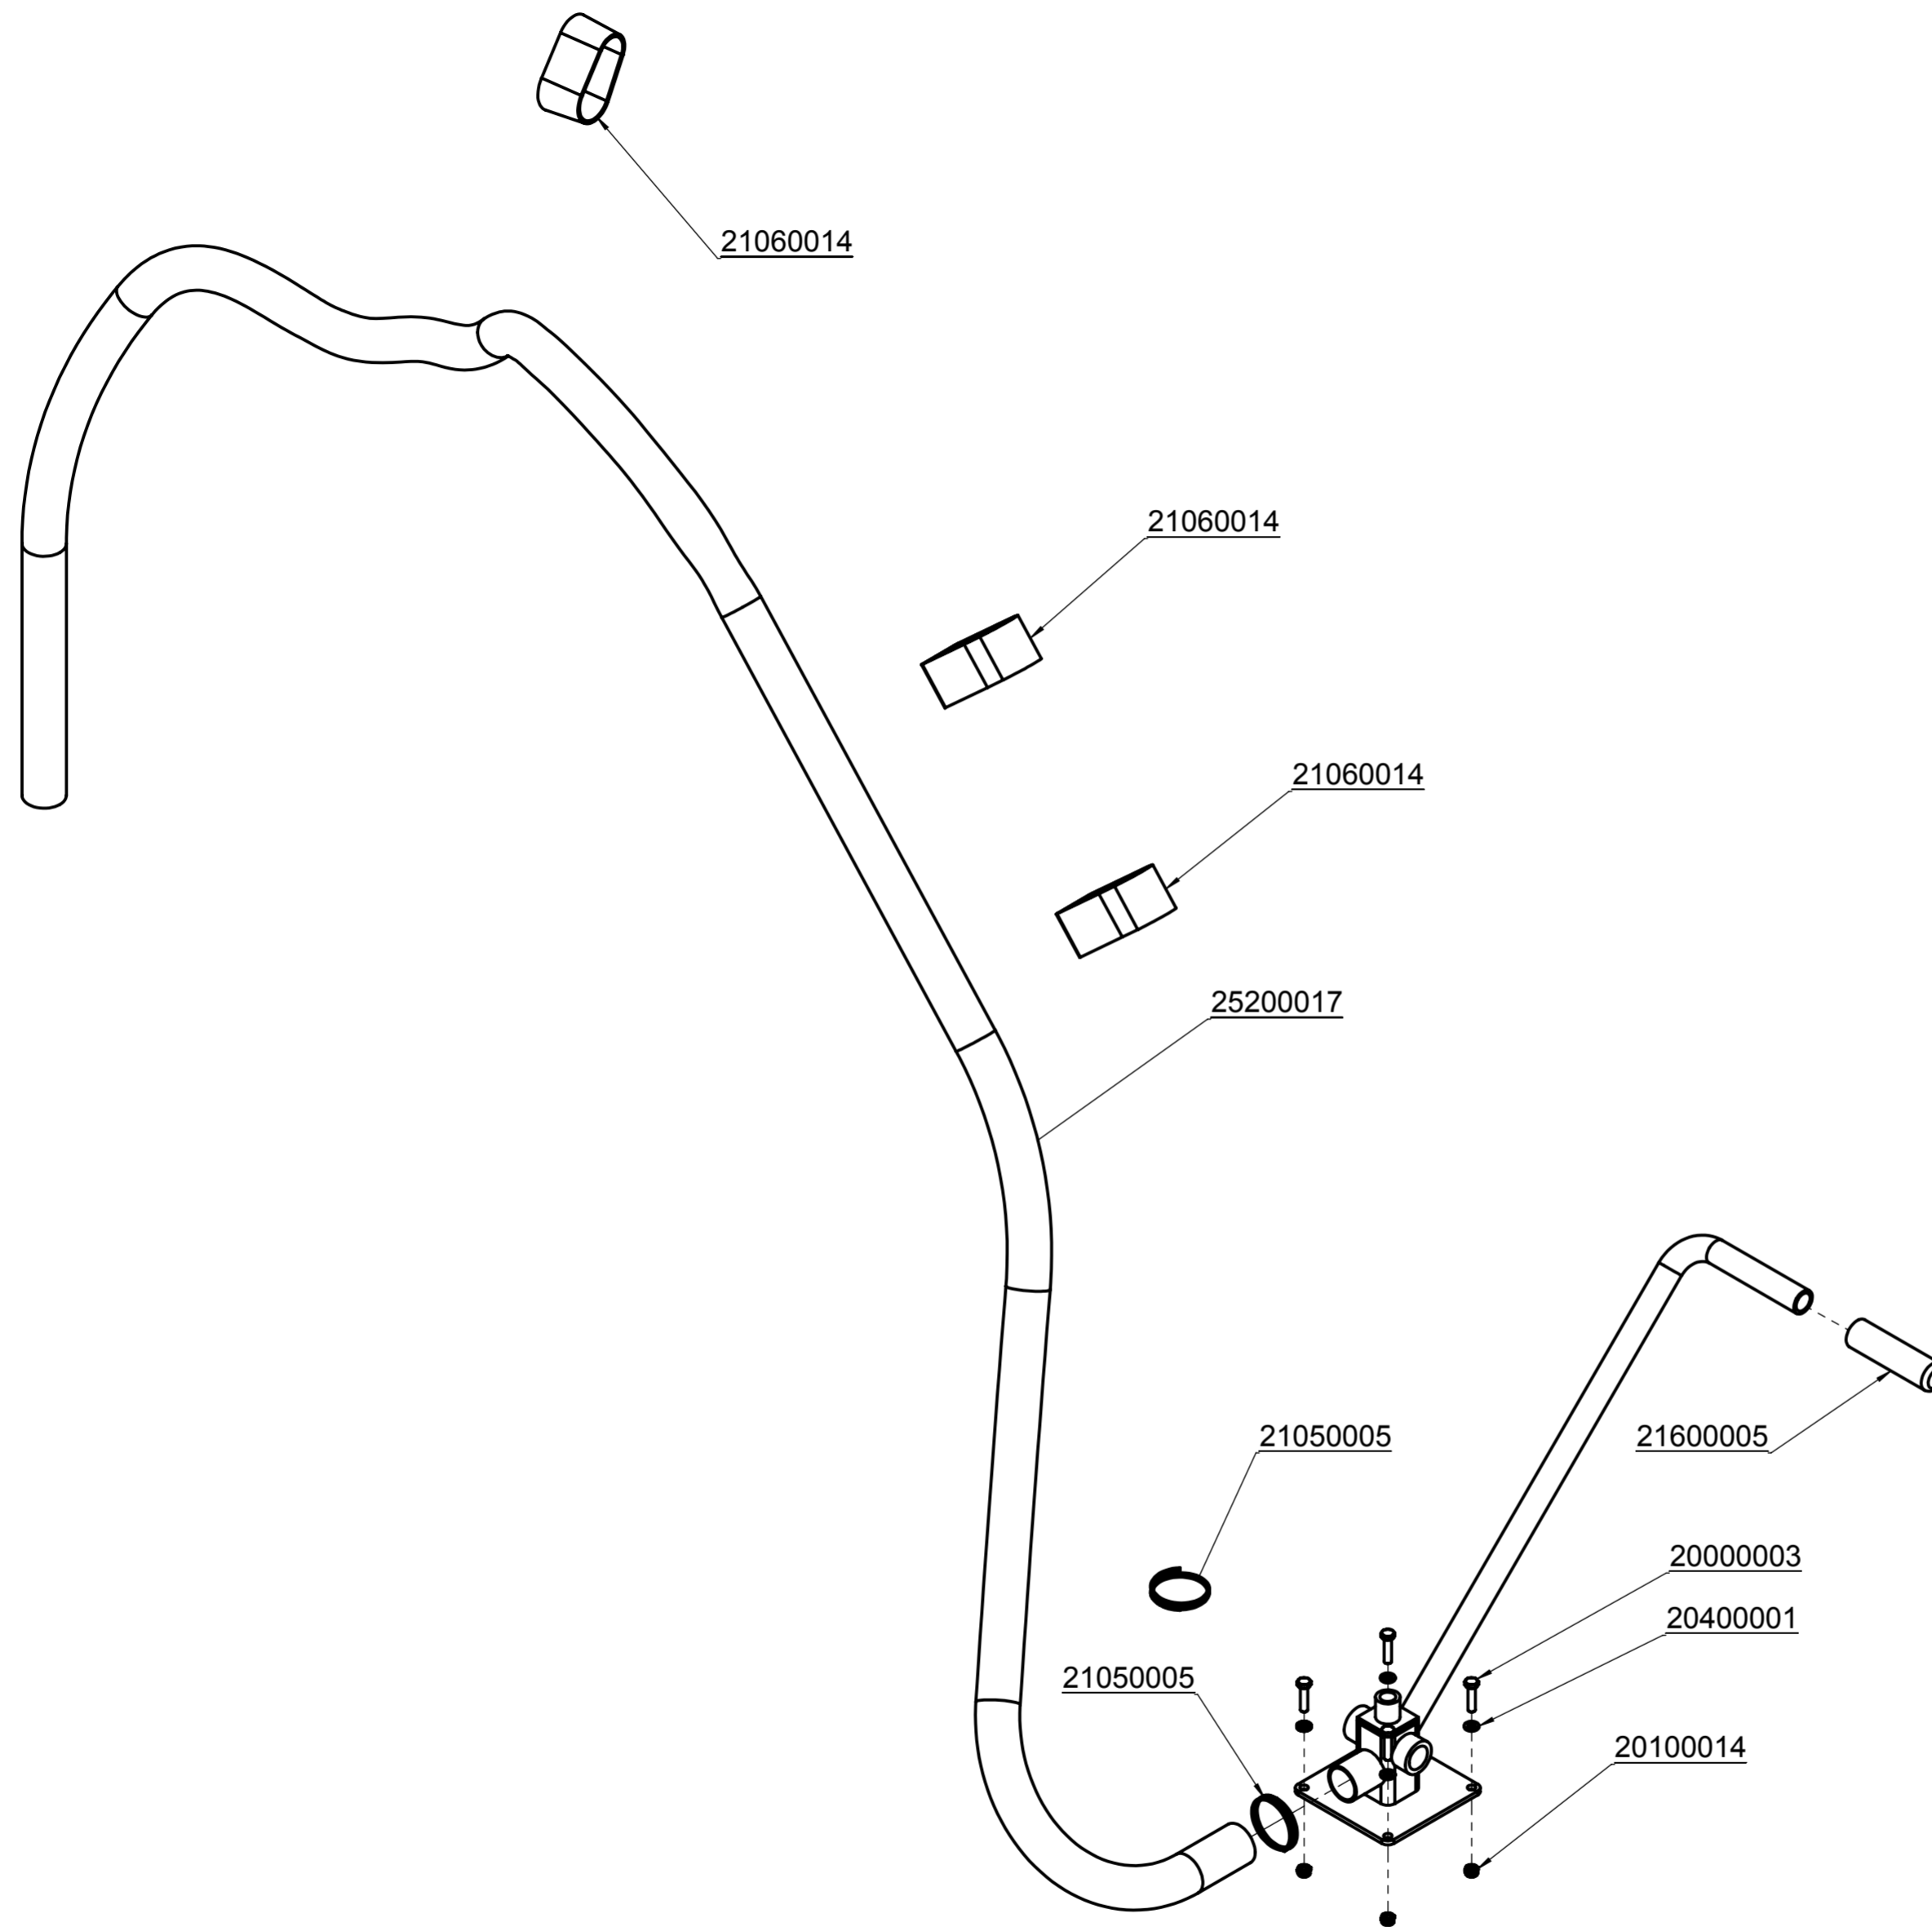



|   |  |   |  |
|---|--|---|--|
|  |  | Bei Änderungen Rücksprache TB !   |  |
|   |  | Gewicht: 3,4 kg   |  |
|   |  | Schutzvermerk nach DIN 34 beachten!<br>Nachdruck nur mit unserer Genehmigung! |  |
|   |  | Benennung   |  |
|   |  | Adapter Saugplatte Speedy VS zu UM  |  |
|   |  | Artikelnummer/Zeichnungsnummer  |  |
|   |  | E42720226   |  |
|   |  | Blatt   |  |
|   |  | 1   |  |
|   |  | von 1   |  |
| WA:   |  | Ers. f.   |  |
| Kunde:  |  | Ers. d.   |  |
| Zust. Urspr.  |  |   |  |

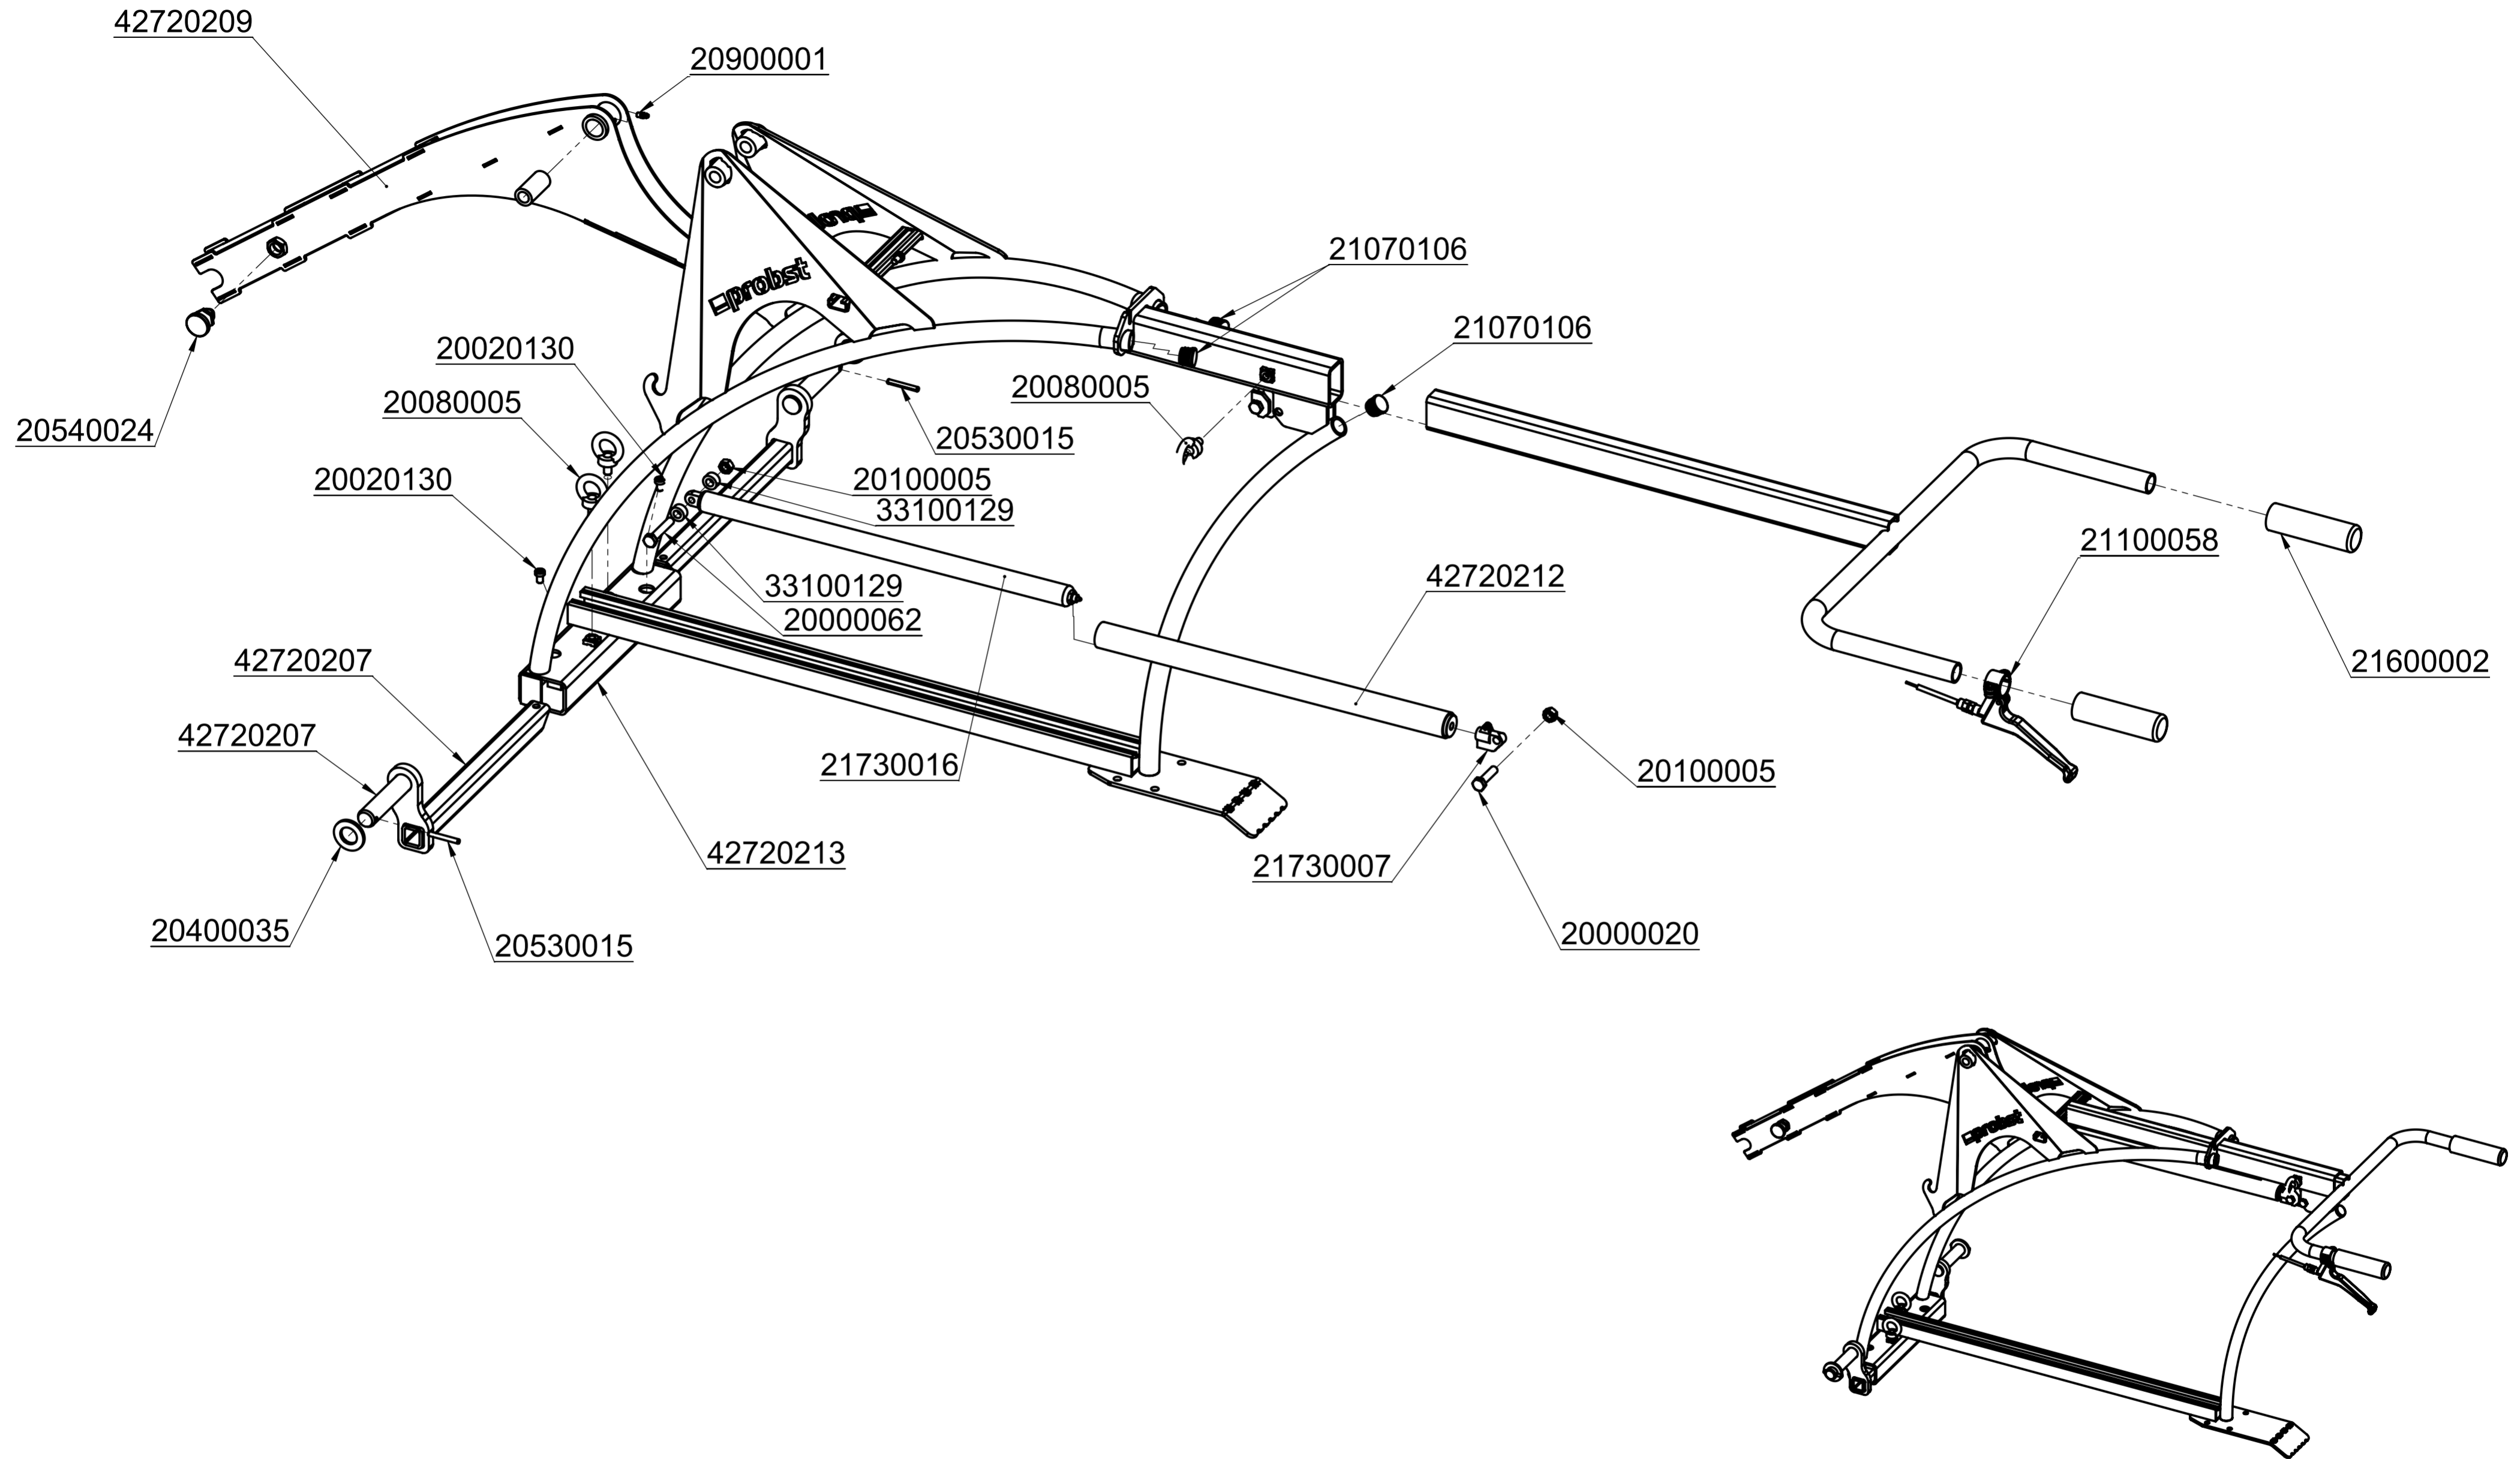

|       |        |  |                                |
|-------|--------|--|--------------------------------|
|       |        | © all rights reserved conform to ISO 16016 |                                |
|       | Datum  | Name                                       | Benennung                      |
|       | Erst.  | 13.9.2012                                  | Ralf Northe                    |
|       | Gepr.  | 14.5.2018                                  | J.Werner                       |
|       |        |  | zu Uni Mobil / Floris Mobil    |
|       |        |  | Artikelnummer/Zeichnungsnummer |
|       |        |  | E42720264                      |
|       |        |  | Blatt 1 von 1                  |
| Zust. | Urspr. | Ers. f.                                    | Ers. d.                        |

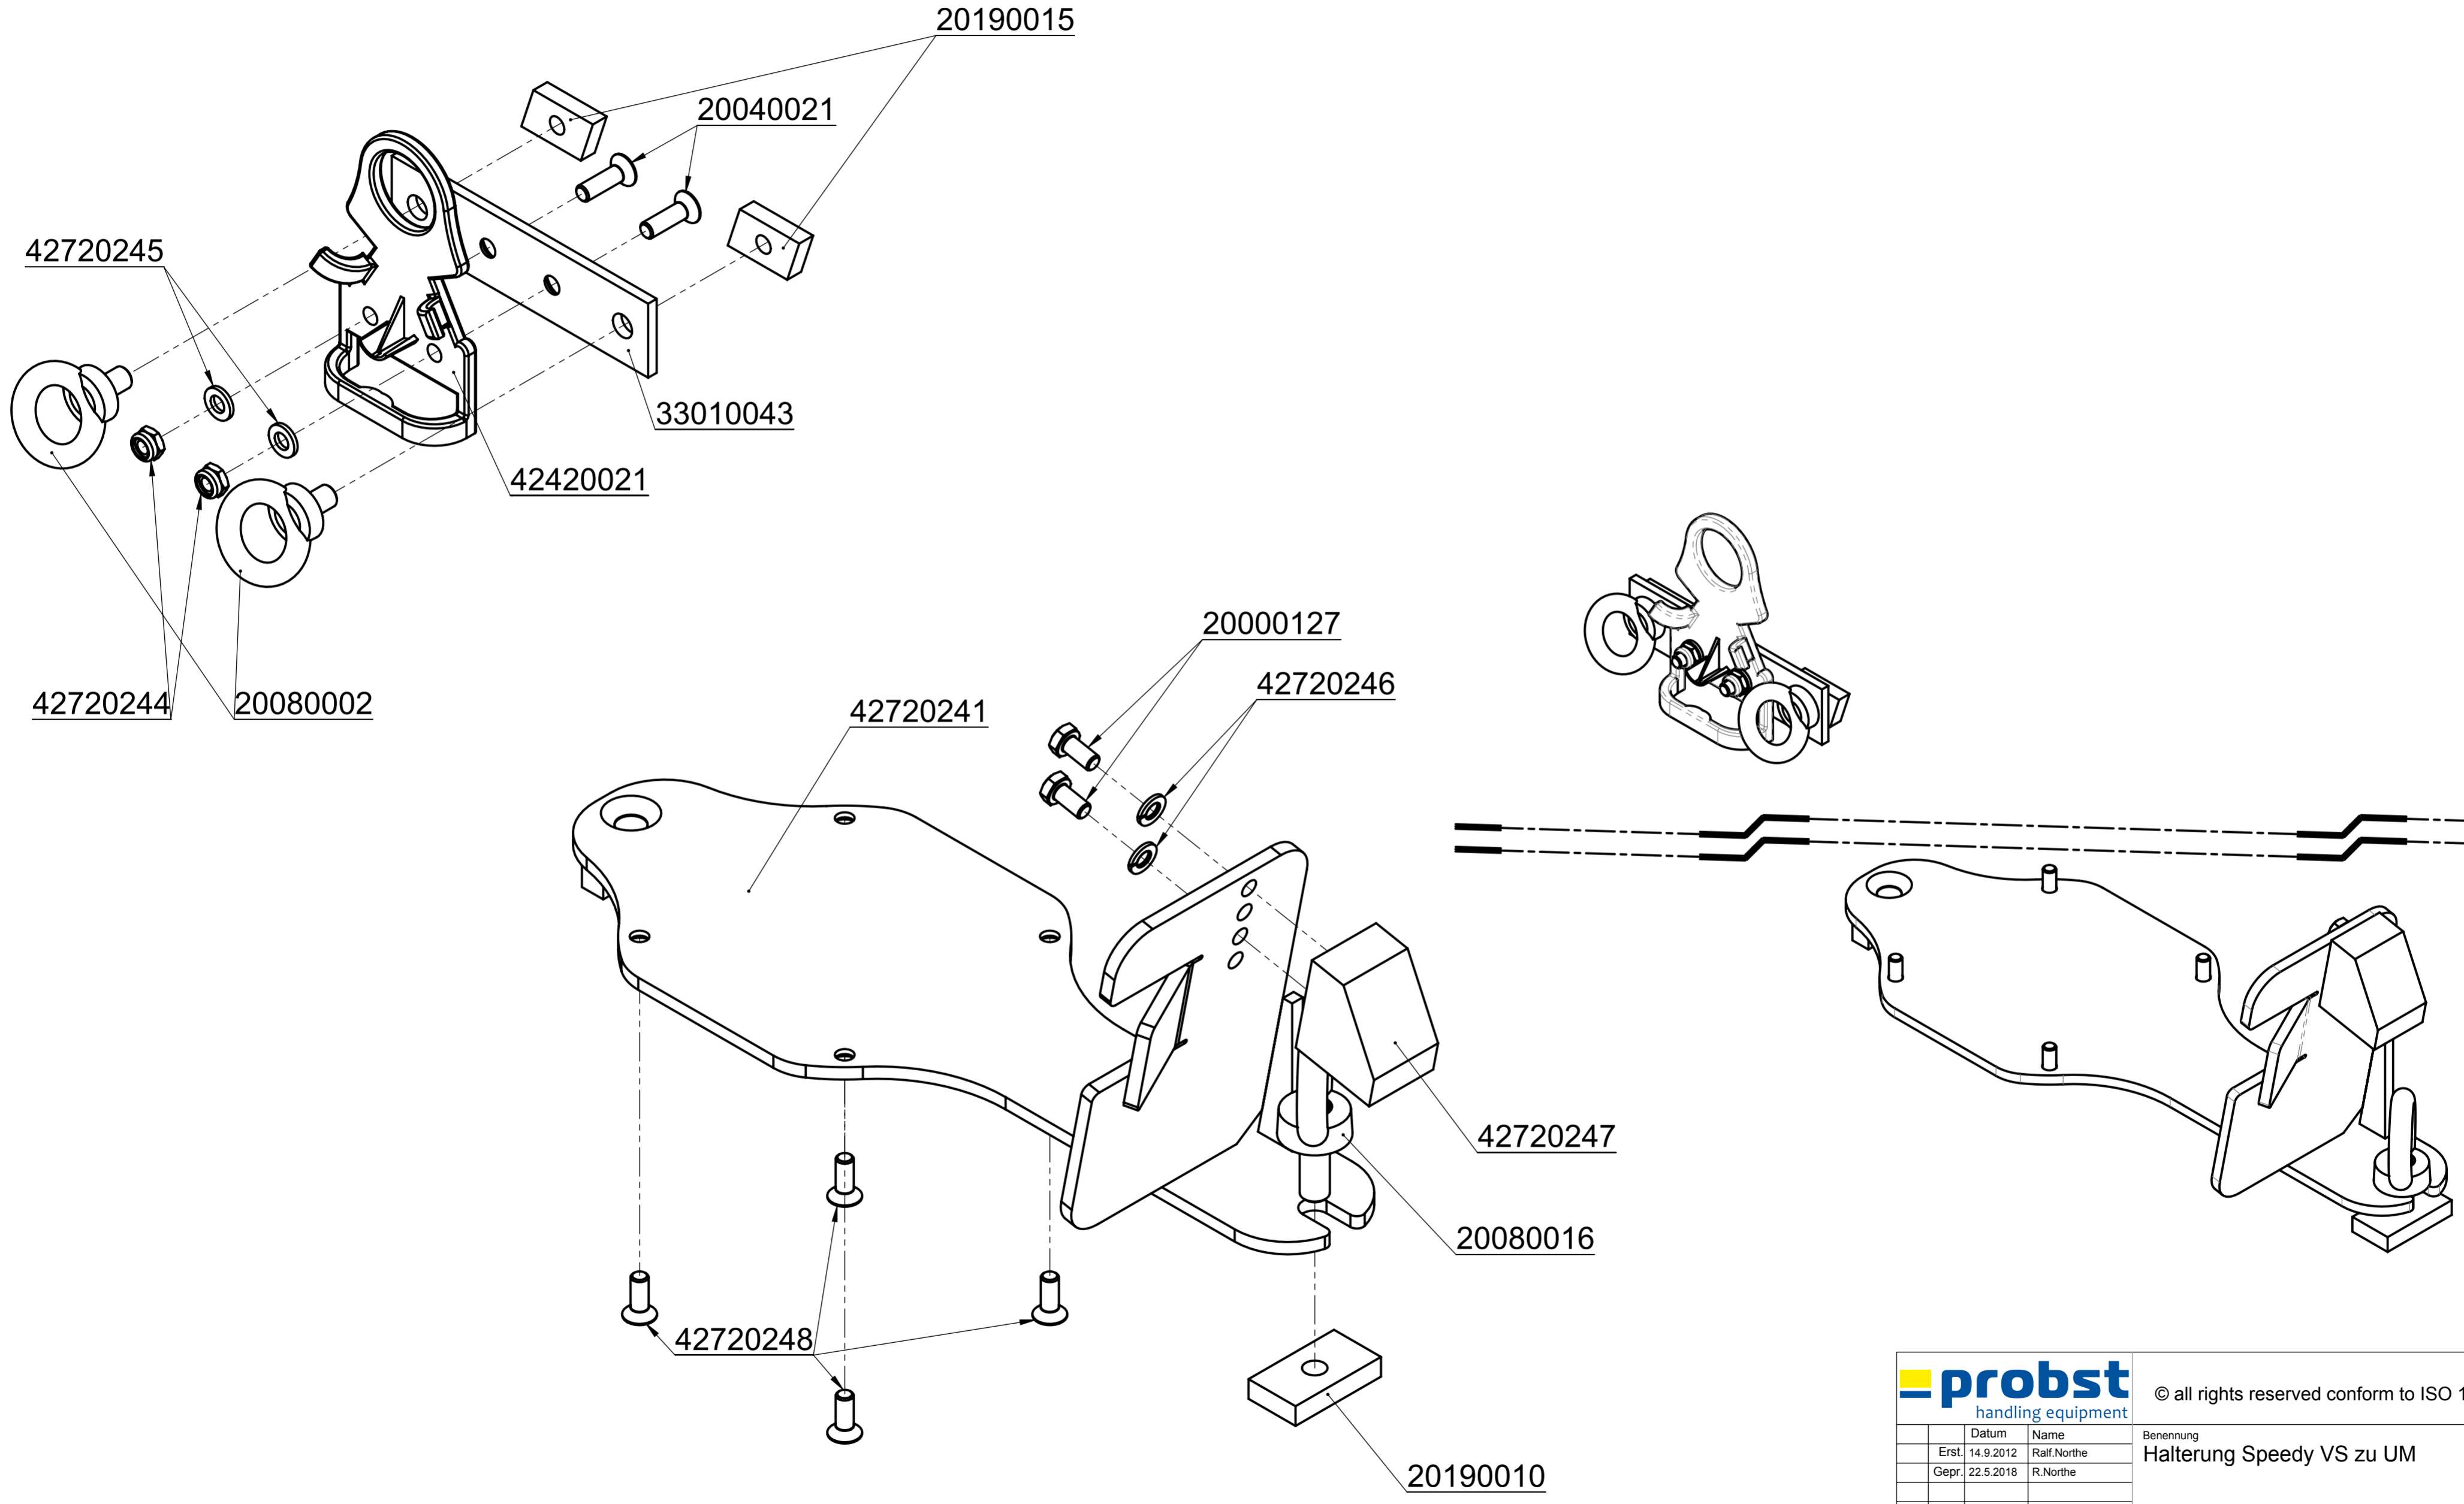

|                                |           |  |         |
|--------------------------------|-----------|--|---------|
|                                |           | © all rights reserved conform to ISO 16016 |         |
| Datum                          |           | Name                                       |         |
| Erst.                          | 14.9.2012 | Ralf.Northe                                |         |
| Gepr.                          | 22.5.2018 | R.Northe                                   |         |
| Benennung                      |           | Halterung Speedy VS zu UM                  |         |
| Artikelnummer/Zeichnungsnummer |           | Blatt                                      |         |
| E42720237                      |           | 1  |         |
| von 1                          |           |  |         |
| Zust.                          | Urspr.    | Ers. f.                                    | Ers. d. |

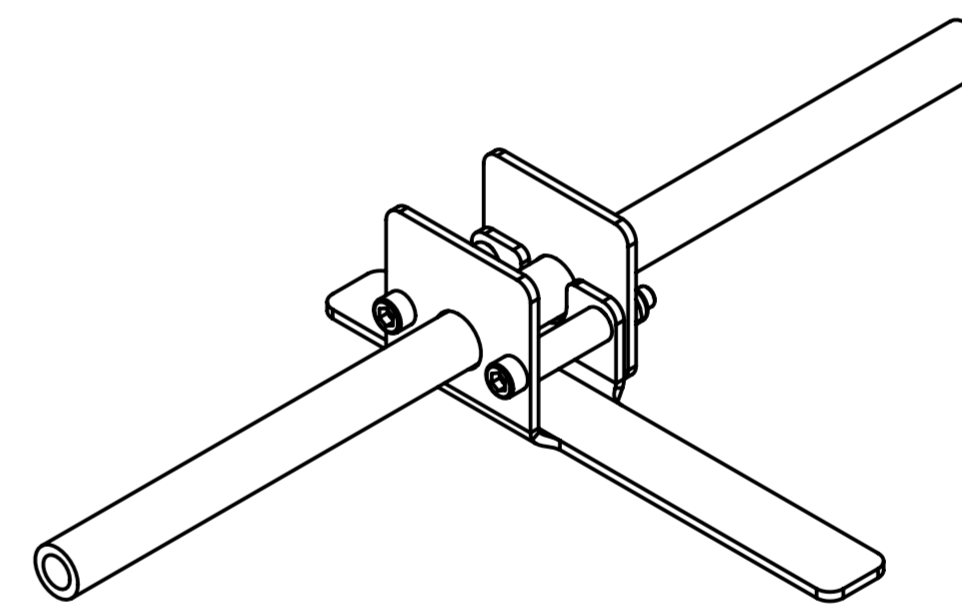
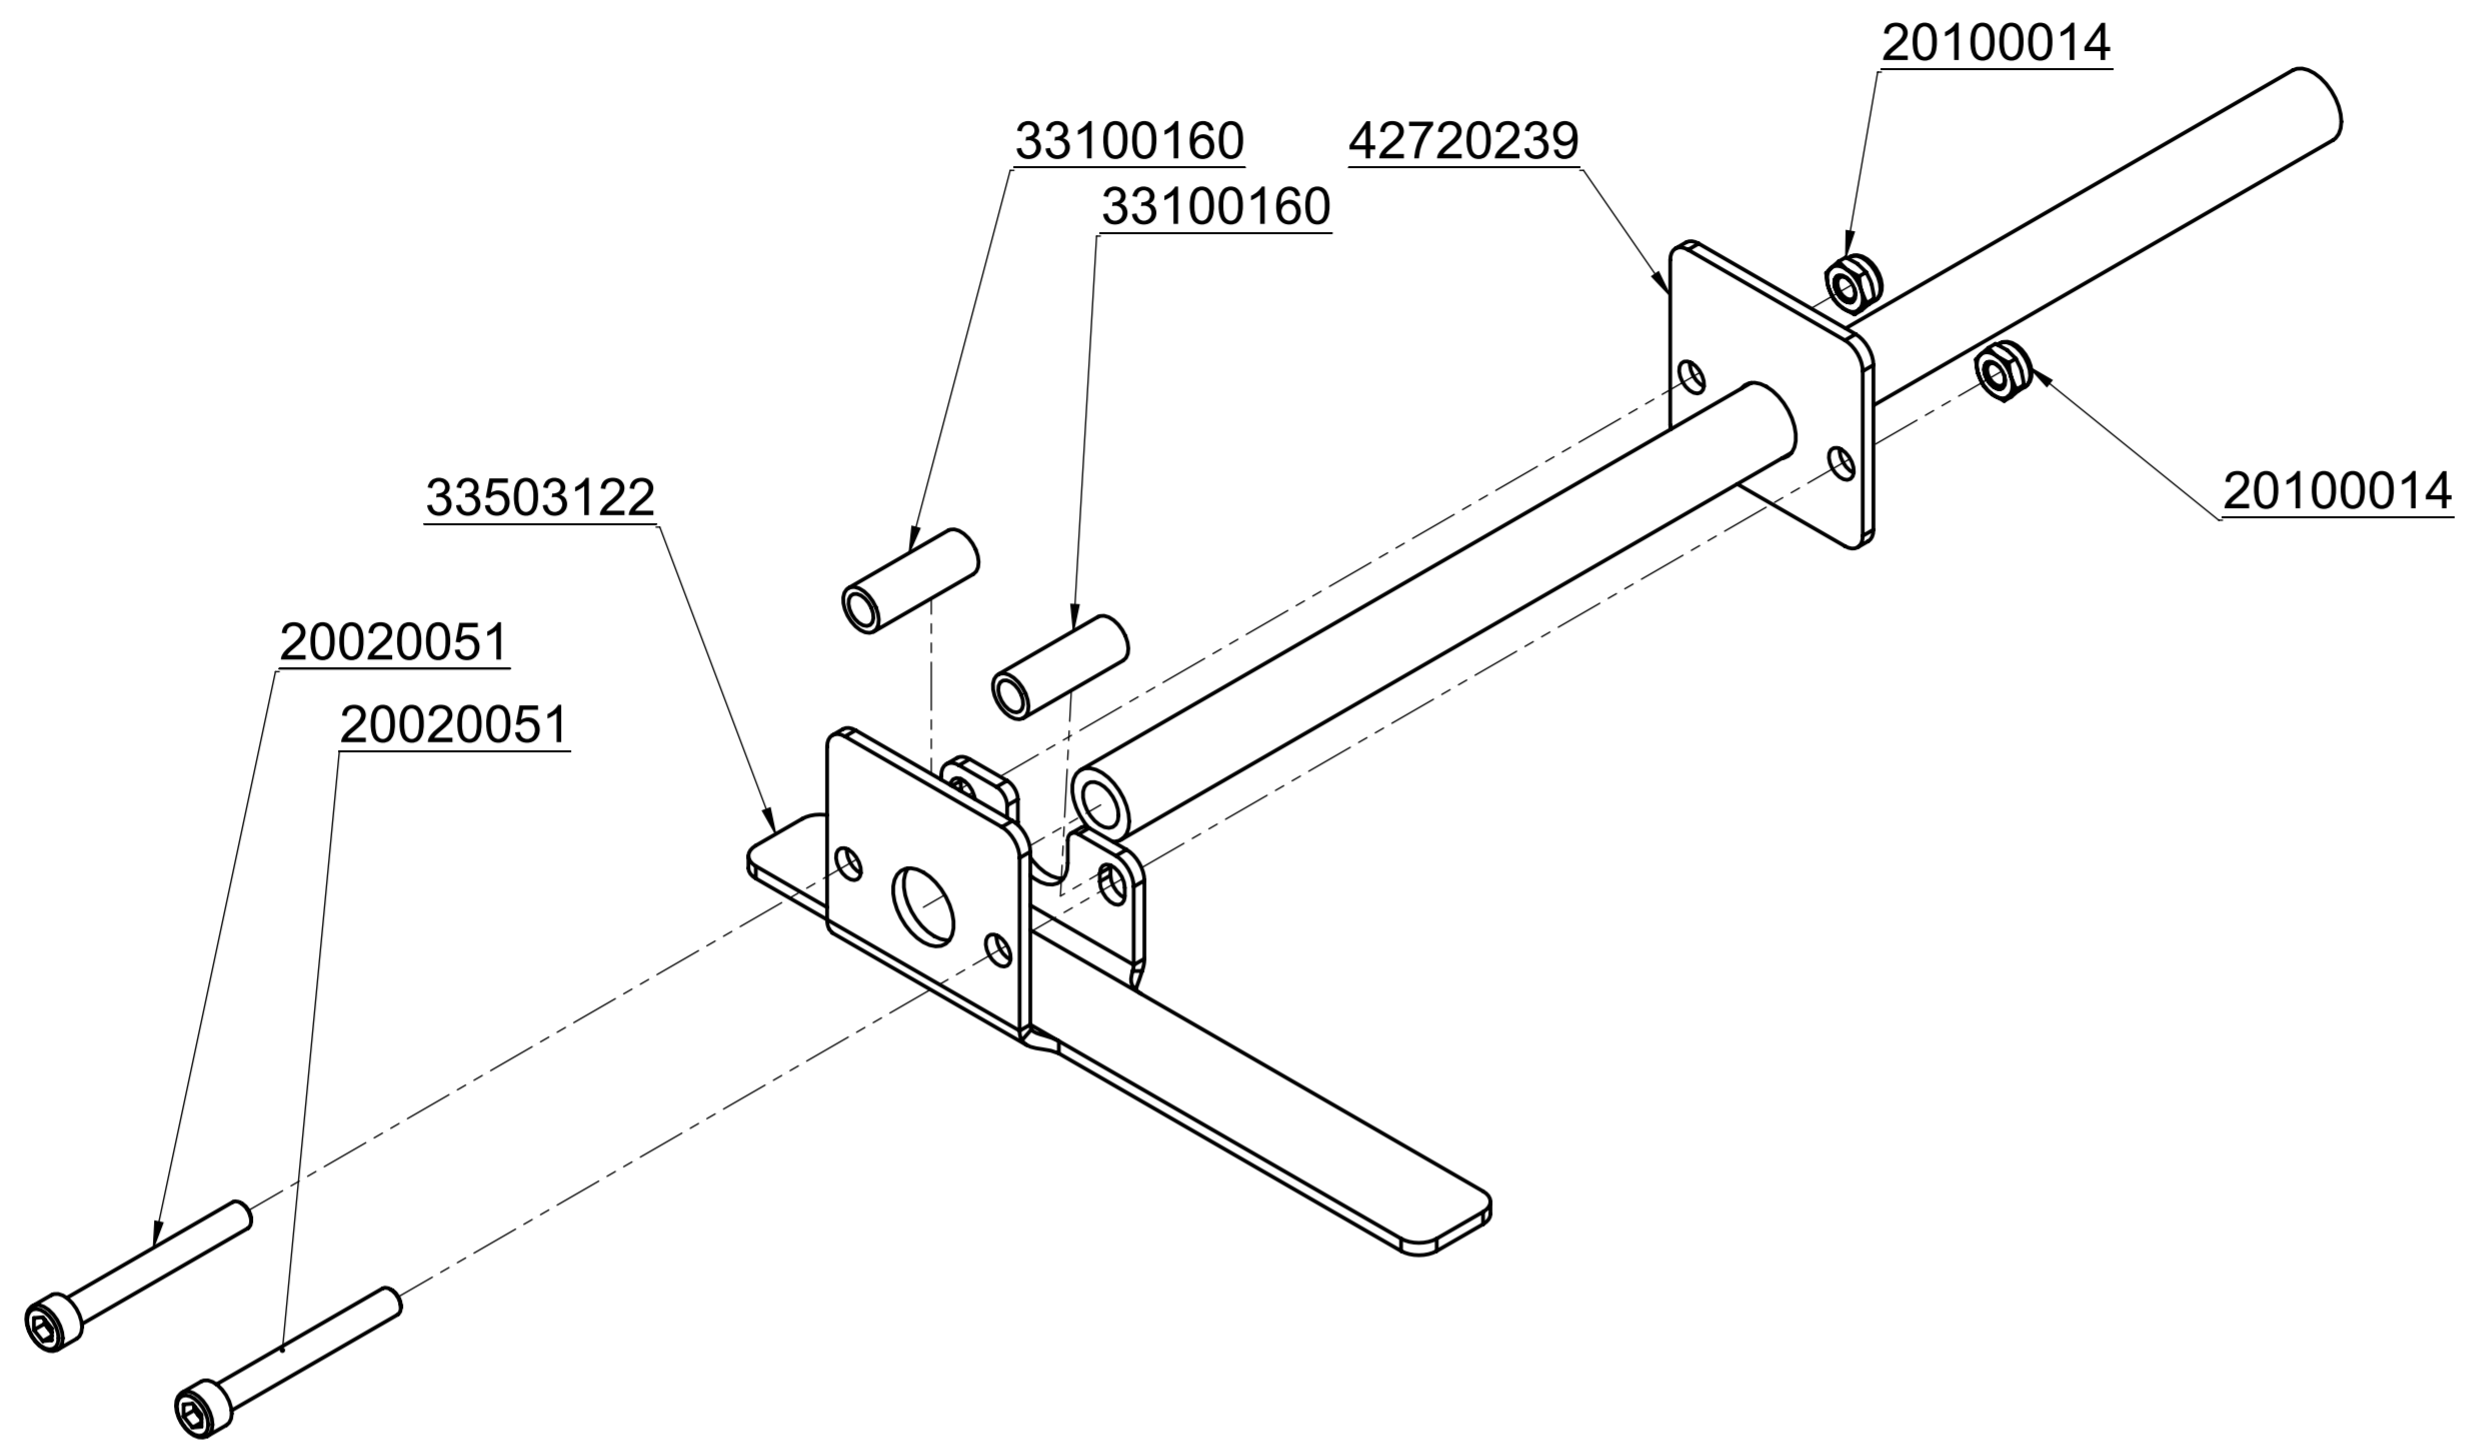


**probst**  
handling equipment

© all rights reserved conform to ISO 16016





| Datum                          |            | Name        |  | Benennung   |  |
|--------------------------------|------------|-------------|--|---|--|
| Erst.                          | 12.10.2012 | Ralf.Northe |  | Pendelaufhängung zu UM<br>für Honda-Stromerzeuger<br>ohne Netzkabelverlängerung |  |
| Gepr.                          | 22.5.2018  | R.Northe    |  |   |  |
| Artikelnummer/Zeichnungsnummer |            |             |  | Blatt   |  |
| E42720238                      |            |             |  | 1   |  |
| Zust. Urspr.                   |            |             |  | Ers. f. Ers. d.   |  |
|                                |            |             |  | von 1   |  |



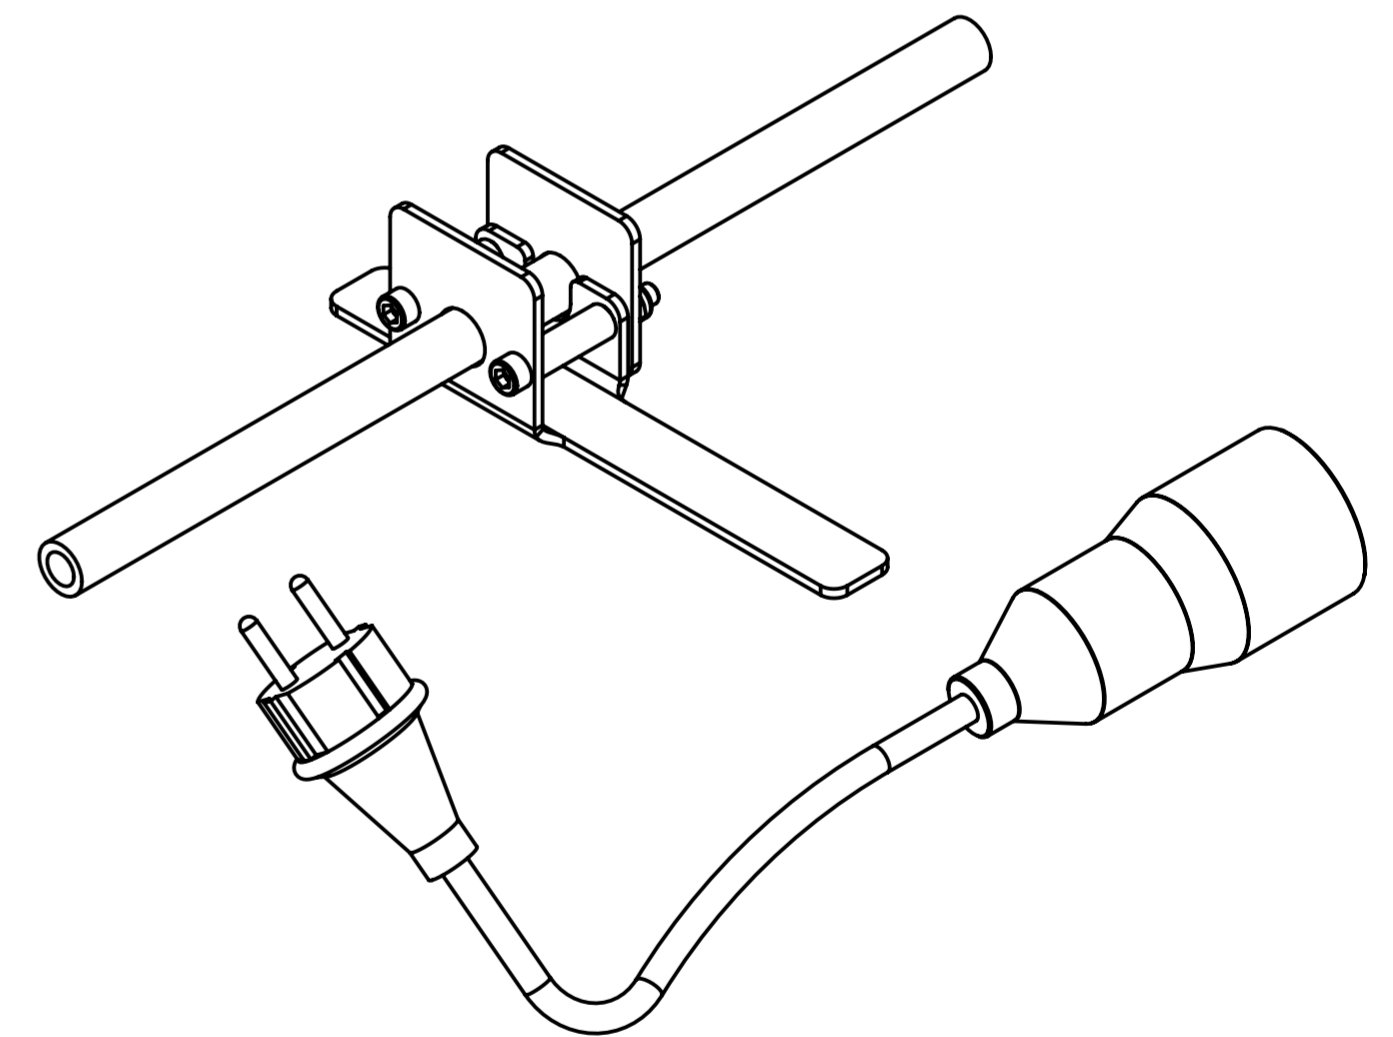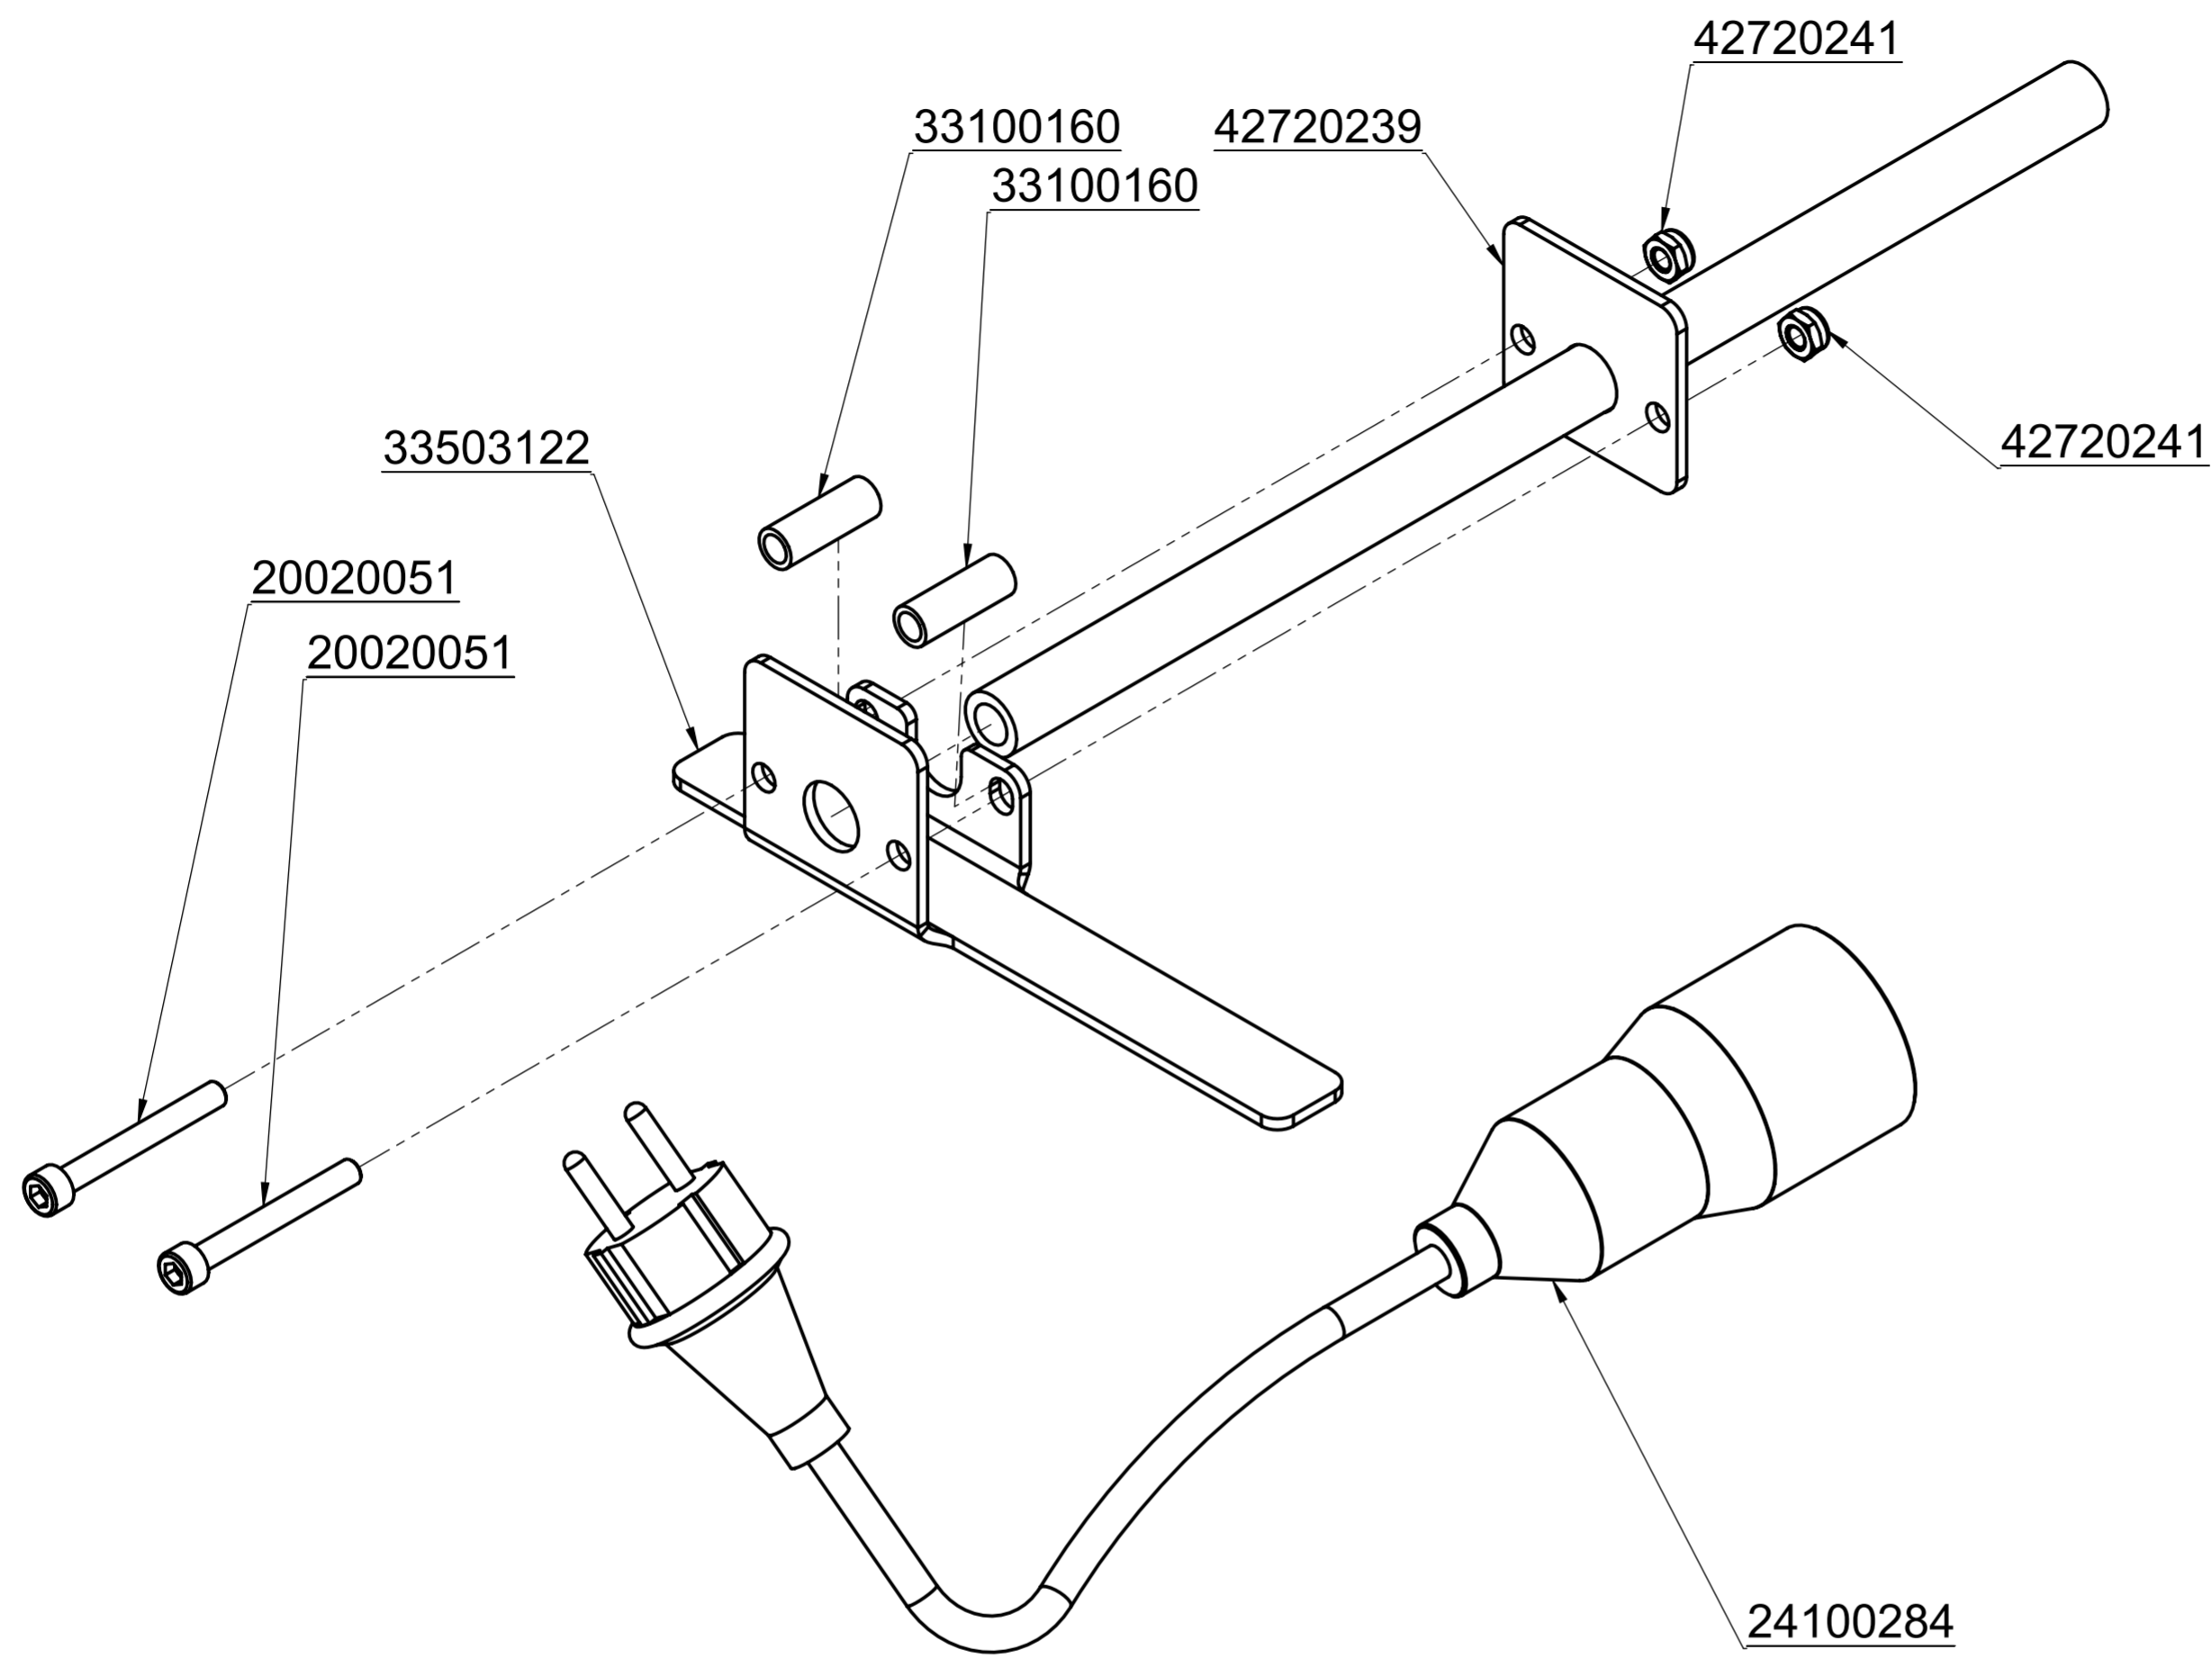

© all rights reserved conform to ISO 16016

| Datum                          | Name        | Benennung  |
|--------------------------------|-------------|--|
| Erst. 15.5.2013                | Ralf.Northe | Pendelaufhängung zu UM<br>für Honda-Stromerzeuger<br>mit Netzkabelverlängerung |
| Gepr. 22.5.2018                | R.Northe    |  |
| Artikelnummer/Zeichnungsnummer |             | Blatt  |
| E42720290                      |             | 1  |
| Zust. Urspr.                   |             | von 1  |
| Ers. f.                        |             | Ers. d.  |

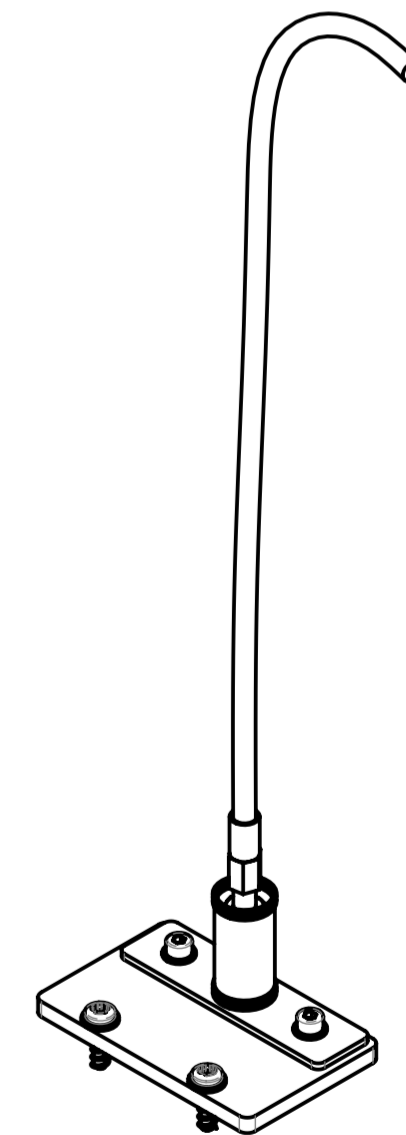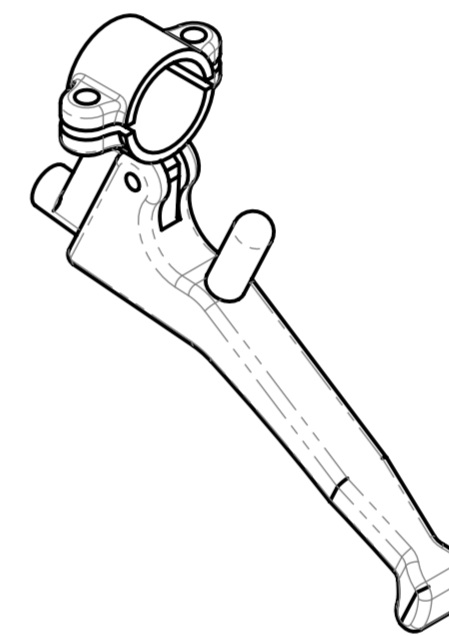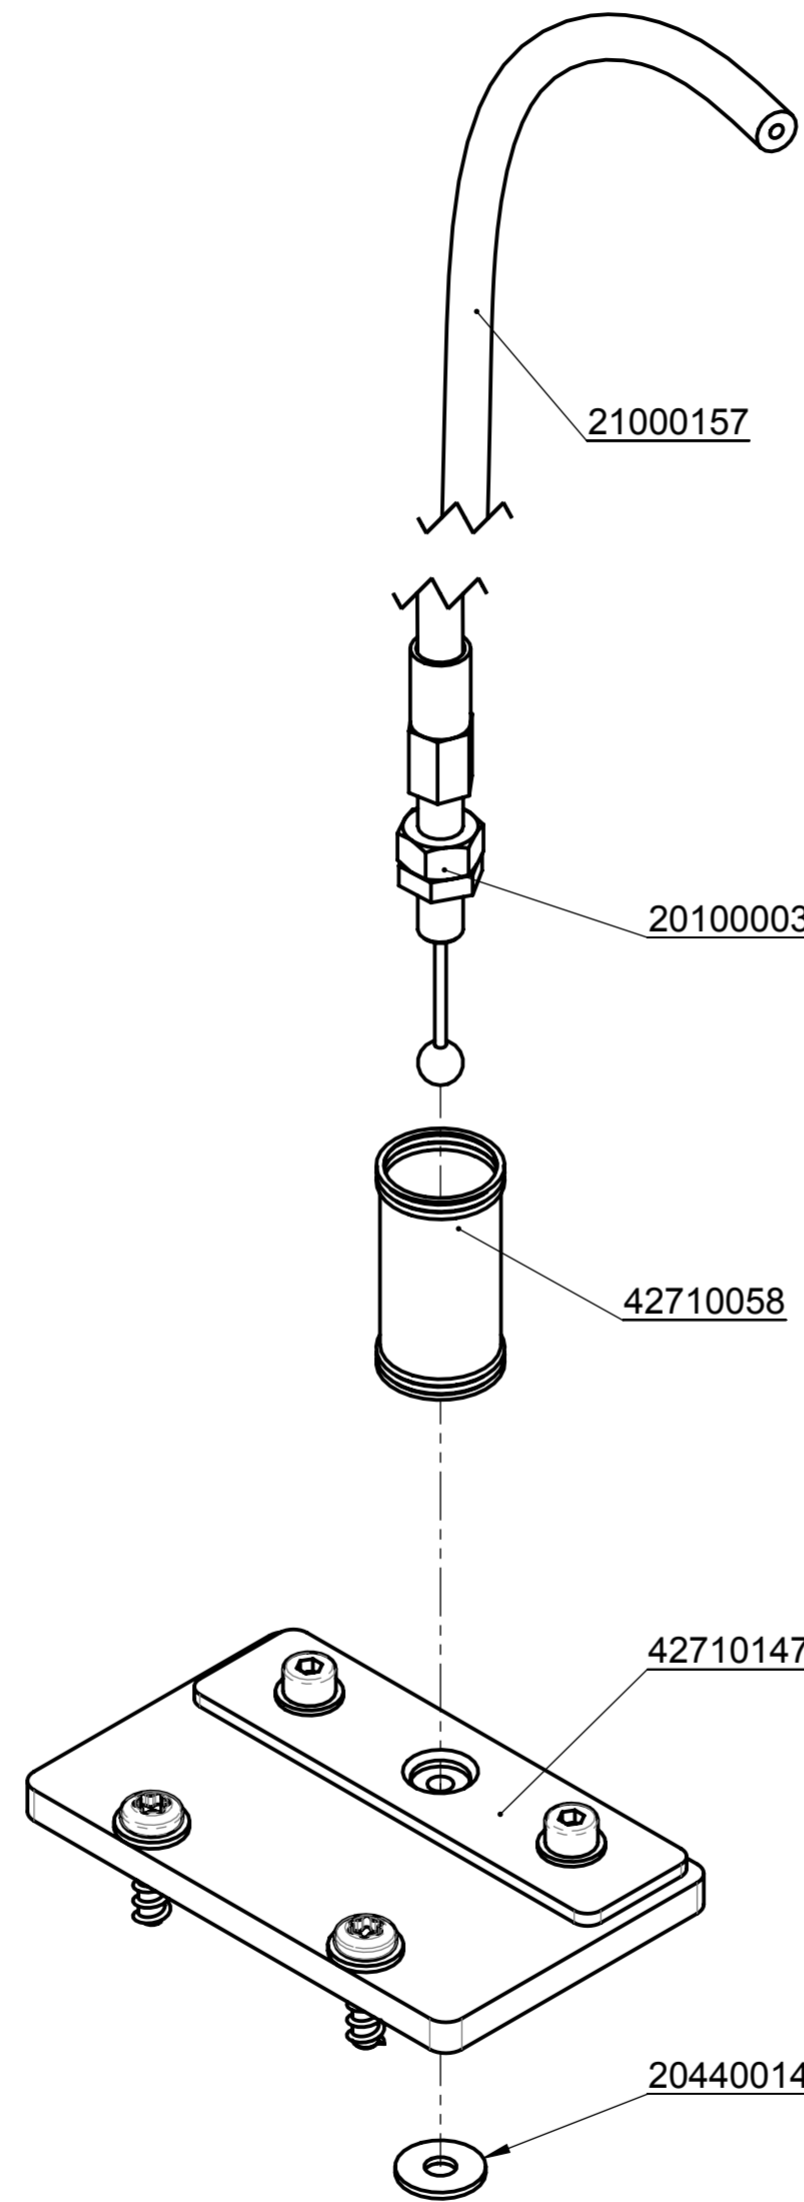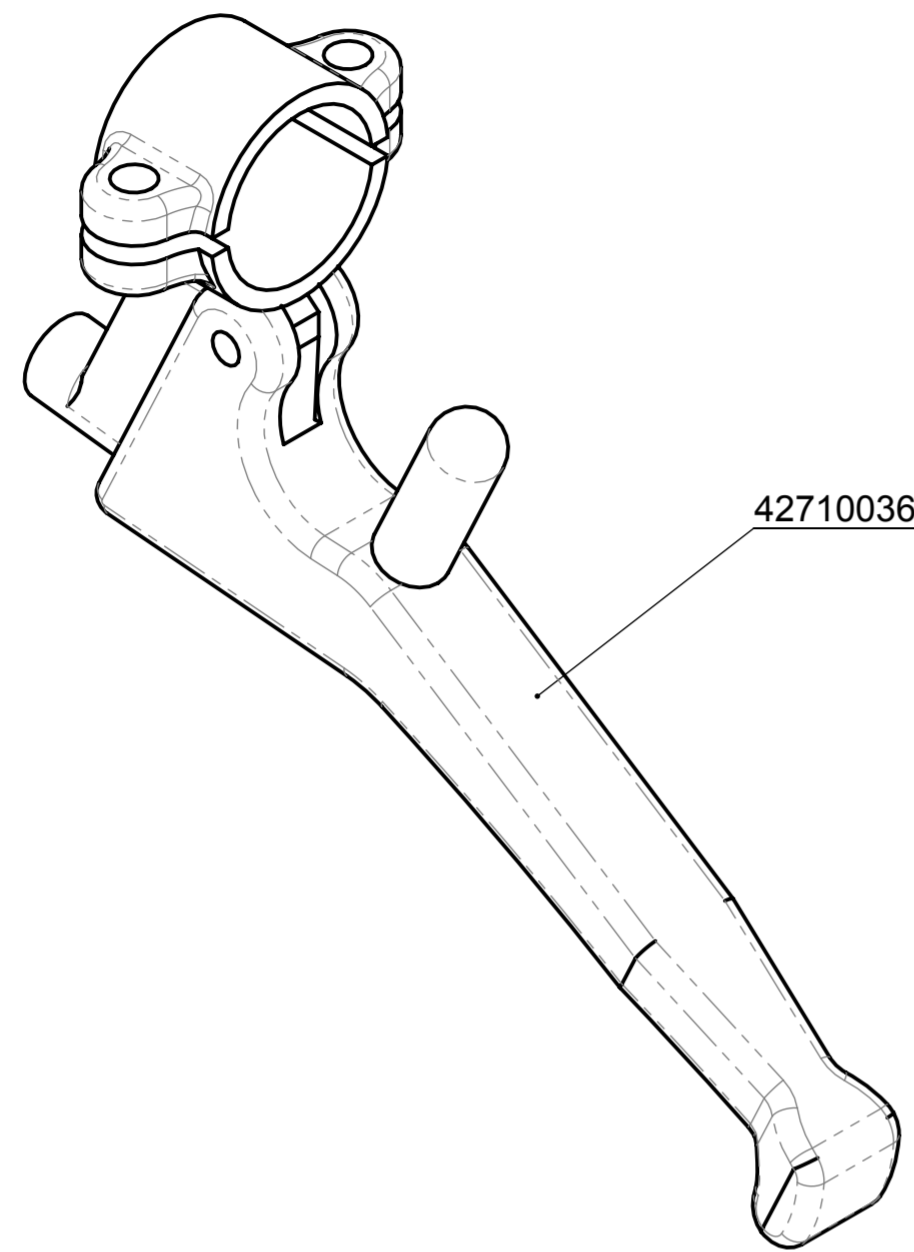

**probst**  
handling equipment

© all rights reserved conform to ISO 16016

|       |                 |             |   |       |
|-------|-----------------|-------------|---|-------|
|       | Datum           | Name        | Benennung   |       |
|       | Erst. 27.2.2017 | I.Krasnikov | Bowdenzug 1,5m kpl. mit<br>Handgriff zur Nachrüstung<br>an UNIMOBIL-UM-VS-140/200 |       |
|       | Gepr. 27.2.2017 | I.Krasnikov |   |       |
|       |                 |             | Artikelnummer/Zeichnungsnummer  | Blatt |
|       |                 |             | E42720373   | 1     |
|       |                 |             |   | von 1 |
| Zust. | Urspr.          | Ers. f.     | Ers. d.   |       |

# Proof of maintenance

Warranty claim for this machine only apply for performance of the mandatory maintenance works (by an authorised specialist workshop)! After each completed performance of a maintenance interval the included form must be fill out, stamped, signed and send back to us immediately <sup>1)</sup>.

1) via e-mail to service@probst-handling.de / via fax or post

Operator: \_\_\_\_\_

Device type: \_\_\_\_\_

Device-No.: \_\_\_\_\_

Article -No.: \_\_\_\_\_

Year of make: \_\_\_\_\_

## First inspection after 25 operating hours

| Date: | Maintenance work: | Inspection by company: |
|-------|-------------------|------------------------|
|       |                   |                        |
|       |                   | Company stamp          |
|       |                   | .....                  |
|       |                   | Name Signature         |

## All 50 operating hours

| Date: | Maintenance work: | Inspection by company: |
|-------|-------------------|------------------------|
|       |                   |                        |
|       |                   | Company stamp          |
|       |                   | .....                  |
|       |                   | Name Signature         |
|       |                   |                        |
|       |                   | Company stamp          |
|       |                   | .....                  |
|       |                   | Name Signature         |
|       |                   |                        |
|       |                   | Company stamp          |
|       |                   | .....                  |
|       |                   | Name Signature         |

## Minimum 1x per year

| Date: | Maintenance work: | Inspection by company: |
|-------|-------------------|------------------------|
|       |                   |                        |
|       |                   | Company stamp          |
|       |                   | .....                  |
|       |                   | Name Signature         |
|       |                   |                        |
|       |                   | Company stamp          |
|       |                   | .....                  |
|       |                   | Name Signature         |